


ABT810

Bluetooth car kit

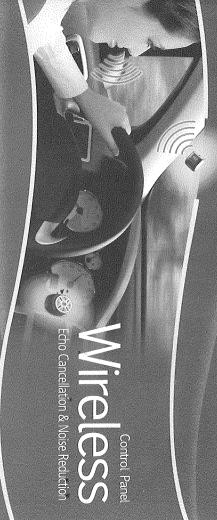



Manual

Contents

	FAQ	Operation -	Clearing the memory	Connecting	Pairing your phone	Brief operation	Packing list	Brief look of each device	Technical specifications -	Key features -	Attention -	User's Manual	
	1 1	on) the m	ting	your ph	eration	list	k of ea	al spec	tures	n	Manua	
	; ; ; ;	1	emory	1	none	t t s	1 1 1	ich dev	ificatio		1	_	
	1	1 1 1 1	1 1 1 1	:			1	/ice	ns	1 1 1			
	1 1 1 1 1	1	1 3 1 1	: I : I : I : I	1	1 1 1 1	1	1	1	f t t t	1		
	1	; ; ;	1	1	1	;	 	1	1	1 1			
	7	<u></u>	<u>ω</u>	ĊΊ	4	ω	ω	ω	2	Ν	N		
		.¥°						Inst	Wiri	Mic	Con	inst	
								Installation diagram	Wiring diagram -	Microphone installation -	Control panel installation	Installation Manual	
i.		,) diagra	gram -	e insta	nel ins	n Man	
		ē						mg	1 3 3 4	llation	tallatio	ual	
								1 1 1 1	1 1 1 1	† † † †	n		
) ((((E E E E E E E E E E E E E E E E E E E	1 1 1 1	! ! !		
		\$						12	12	1			

Attention

- professional auto technician This device should be installed by a
- car kit while driving. For your safety, please use handsfree



Road safety comes first

wheel. and keep both hands on the laws and regulations concerned, The user should obey all the local



may

be

affected by

other

The performance of this device Interference



electronic devices due to the

interference

while refueling gasoline, and in nearby. places with fuel and chemicals It is forbidden to use this device Switch off when refueling



Proper usage

with the user's manual. Use this device in accordance

Key features

- Advanced noise reduction and echo cancellation for better sound quality
- Adaptive Frequency Hopping technology for interference reduction
- Ultra sensitive microphone
- Voice dialing function
- Wireless control panel, easy to access Audio streaming
- Automatically mutes the car stereo while and operate speaking

Technical specifications

Radio channel: F=2402+kMHz, k=0,. Frequency: 2.402GHz~2.480GHz Transmitting power: <4dBm .., 79

Working current (while talking): <1A

Input voltage: 9~18VDC


Communication profile: HSP, HFP, A2DP,

Working temperature: -20°C~+75°C Storage temperature: -40°C~+85°C

AVRCP

Microphone Wireless control panel Volume Answer button Volume "+" LED Indicator Microphone Hang up button Mute button

Packing list

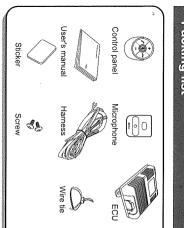

Making and answering calls

Reject Voice dial short press short press short press

Answer

Cancel auto answer Auto answer Redial press 2 sec press 2 sec press twice

In a call

Hang up Disconnect Cancel MIC mute Microphone mute Reconnect call Private call Volume down Volume up press 2 sec short press press 2 sec press 2 sec press 2 sec short press short press press 2 sec

either you manually connect again or turn ignition off and on again.) (Temporary disconnects phone until

 
; + " and "-" action.) from the system will confirm the phone from the system, two beeps and hold for 5 sec to delete all paired (Press button "+" and "-" together Delete pairings press 5 sec

Pairing your phone

pair both devices. Please follow the steps below: Prior to use the Aerpro bluetooth car kit with your phone for the first time, you must initially

- puts the system into pairing mode for 3 minutes 1. Hold both + and - buttons for 1 second, the kit will beep once with yellow LED blinks. This
- Search for peripherals (consult your phone's user guide)
- Select "HIGH SPEED 01" in the list of the phone
- 4. Enter "0000" on your phone when prompted















Select "HIGH SPEED 01" in the list are paired The yellow LED turns on solid. Both devices

Note:

1 second

 
- be paired with the kit, you need to disconnect the current connection first, and then repeat the operations above Some phones of certain brands may require manual connection. If another phone needs to
- will be deleted automatically. 2. The system can be paired up to 8 devices. To pair the ninth device, the first paired device
- when you enter the car, your phone will be automatically connected to the kit. select the "01" and change default to: Device Authorised "yes" or Conn Auth "yes". Next time 3. For NOKIA users: If you want the kit to connect automatically, you must select edit device

Connecting

the system can't detect the last paired device, it will try to connect with the penultimate paired turn off automatically. device and so on. If the system still can't find any pre-paired device within 90 seconds, it will

Turn ignition on, the system will search and connect with the paired phone automatically.

To connect the phone after 90 seconds, you need to connect the phone manually as below:







Press " once Yellow LED blinks to search the paired phone

The yellow LED turns on solid. Connected

back to the phone automatically. Once ignition is turned OFF, the kit will also be turned OFF Note: When the phone is out of the Bluetooth car kit's operation range, the call will be transferred

Clearing the memory

, # F



Hold "+"and "-" for 5 seconds







All the paired phones records will be cleared.

cleared

1. Making a cal

- Once your phone is connected with the kit, 1) Making a call from the phone
- enter the number you want to dial and press the dial button on the phone
- voice dial function, the system beeps once. By short pressing the 🖍 button to activate the Voice dial
- user's manual on how to record the voice prints the phone. Follow the instructions in your phone to call. These names must be pre-recorded on Speak out the name of the person you wish
- Redial

on your phone.

- button twice To redial the last called number, press the
- Short press the > button to reject an incoming Rejecting a call
- 3. Auto or manual answering selection

front speaker.

the call will be reproduced through the vehicle's

- your phone is connected You can select auto or manual answering when
- answering: 1) To switch from manual answering to auto
- car kit confirms the auto answering is on with Press - button for 2 seconds, the Bluetooth

long beep

- car kit will beep three times to confirm the Press - button for 2 seconds, the Bluetooth 2) To switch from auto answering to manual answering:
- ※ Default setting: manual answering Receiving a call

manual answering is on.

- the LED indicator flashing quickly on the An incoming call is indicated by a ringtone and Bluetooth car kit.
- automatically after ringing or vibrating for about The Bluetooth car kit will answer the call 1) If auto answering mode is selected:
- If manual answering mode is selected: 10 seconds.
- The car stereo will be muted automatically and Press the 🏈 button once to answer the call.
- conversation on your phone (private During a call, if you want to continue the 5. Private call on the Bluetooth car kit, the call is transferred conversation), press the + button for 2 seconds
- to the phone To get the call back to the kit, press the

button for 2 seconds again

phone calls in hands free mode, just press If you enter the car and you do not want any

This function will let you play the music files

10. Audio streaming:

6. Disconnecting from kit

button once or turn the ignition off and on To manually connect again, press the 🗸 in, they will only be transferred to the phone. the button for 2 seconds and the Bluetooth car kit will be disconnected. When calls come on your phone over the vehicle's speaker compatibility of your phone). (This feature depends on the audio streaming FAQ

increased or decreased during the call by 7. Volume adjustment The sound volume in the vehicle can be

the volume) and the - button (for reducing short pressing the + button (for increasing have Bluetooth handsfree function and are a) No. The kit only works with phones which with the kit?

Can all the mobile phones be paired

- OFF, and then turn ignition on after 10 b) The kit is in the locked status. Turn ignition password. operation steps and enter the correct 4 of this manual, by following the pairing a) Wrong password. Please refer to page Pair failure? compatible with Bluetooth standard protocol.
- c) The phone is in disorder. Please turn on in page 4 to pair again. the phone and follow the steps in page 4 to seconds to restart the kit. Follow the steps

at the other end of the line to hear you, hold

During a call, if you do not want the person

8. Microphone mute:

the volume).

the 🗓 button for 2 seconds, the microphone

Hold the 🗓 button for 2 seconds again to will be muted cancel the mute.

9. Ending a call the car stereo will automatically come back To end a conversation, press the 🖍 button,

- the steps in page 4 to pair again. d) Overtime pairing operation. Please follow
- turn off other devices temporarily. e) It is interfered by other devices. Please
- distance between the phone and Bluetooth g) Distance is out of range. When paring, the frequency is out of range f) Some phones do not support the kit or the
- Auto search failure?

car kit should be less than 10 meters

- phone's manual. such as: NOKIA 3230. Please refer to your a) Some phones need to be paired manually,
- The phone can not be disconnected?
- function. a) Some phones may not support this
- Call transfer failure?
- a) Some phones need to transfer calls to the your phone's manual. Bluetooth car kit manually, please refer to
- and try again battery status. Please recharge the phone with some phones when they are in low b) The Bluetooth car kit can not work properly

- No ring tone from the Bluetooth car kit?
- phone. Please adjust it to a proper level. a) Ring tone volume setting is too low on the
- to the normal mode b) The phone is muted. Please switch it back

• Music transfer failure?

a) Some phones need to transfer music to the E908, please refer to the phone's manual. Bluetooth car kit manually, such as Samsung

b) Some phones do not support this feature.

- status. Please recharge it in time. with some phones when they are in low battery c) The Bluetooth car kit can not work properly please refer to your phone's manual.
- the Bluetooth car kit is too loud and The ring tone distorted? of the incoming call from
- A) Ring tone volume setting is too loud. Please adjust it to a proper level

Why can't I redial the

ast

dialed

such as Samsung E908, please refer to your a) Some phones do not support this feature phone's manual. number?

Voice dialing failure? mode ON refer to page 6 to turn the automatic answer

a) It is in the manual answering mode. Please

not the fault, including but not limited to or improper use in any manner whatsoever b) Damage to the system caused by accident

calls automatically?

Why can't the Bluetooth car kit answer

- a) Some phones do not support this function.
- Why can't I mute the car stereo? Please refer to your phone's manual
- calls→ phone sends the audio-shutdown the working process is as below: Ending stereo need to take some time to resume? After hanging up, why does the car The resume time depends on your phone

volume manually to answer the calls mute control terminal, please adjust the a) Some cars may not have the car audio

be quicker, such as NOKIA, some slower may have different resume times, some may second step is the key. Different phones signal→ the kit resumes the stereo. The

. ¥ 1


system or originating from the environment by anomalies in the vehicle's electrical such as MOTOROLA.

> or it's authorized agent. or repaired or altered in any way other than voltage applied to the system or if misused damage by water or as a result of excess


ဖ


in which the system is operated;


Control panel installation

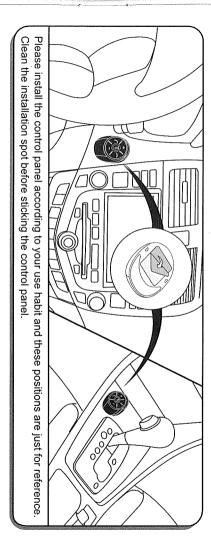

Microphone installation

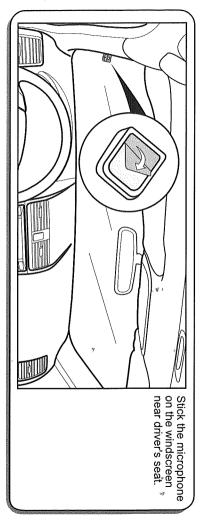

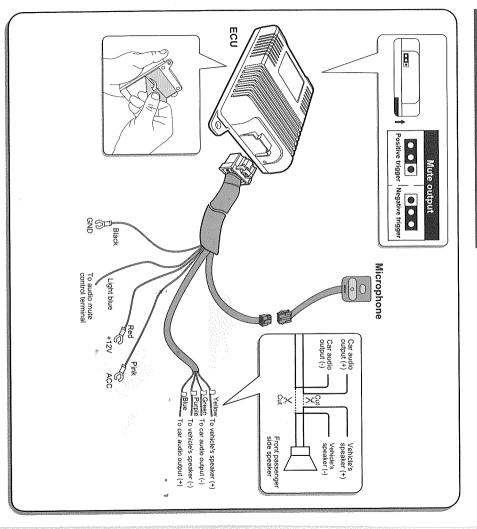

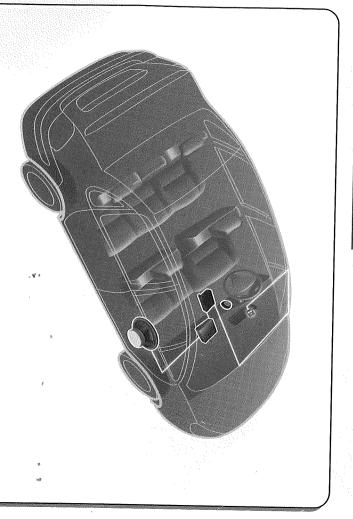



cable to the front passenger side speaker. In order to achieve better sound quality and avoid echoes, please connect the