

INSTALLATION



AWCM11
Mitsubishi Triton GLS

 
Tools Needed

Use the following tools to make dismantling the car and the installation of the new wireless charger easier


1. Panel Remover




2. Phillips Head Screwdriver



 
3. 10mm Socket



 
4. Side Cutters



 5. Small Pick



 6. Cable Ties



Introduction

Thank you for purchasing the AERPRO wireless charger. Please read this user guide carefully before using the wireless charger.

It is recommended that this product be installed by a qualified technician.

Keep this information in the glove box for future reference.

The product is designed to be used exclusively on a Mitsubishi Triton. Mitsubishi is not responsible if the product is used for anything other than its intended purpose.

This user's information should be considered a permanent part of vehicle it should remain with vehicles at all times and stay with vehicle when sold.

Special Messages

WARNING

- When charging a smartphone or other devices supported by the charger, do not handle or view the device while driving. Doing so will interfere with driving, which could result in a crash.
- Do not place a supported device on the charger if its surface area is larger than the top surface of the charger. If the device is too large, there is the possibility that it may not remain secure on the charger.
- Should a supported device or product fall off the wireless charger while driving, do not pick it up while the vehicle is still moving. Doing so will interfere with driving, which could result in a crash. Instead, park the vehicle in a safe location, and then pick it up.

CAUTION

- Metal objects between the charger and device to be charged will get hot and can burn you.
- Remove foreign objects from the charger before charging device.


Notice

- Do not place any metal objects on the charger.
- Do not place vehicle Key-fob near the charger.
- Do not charge when the charger is covered with a towel, layer of dust, etc.
- Do not allow the charger to get wet from water, beverages etc.
- Do not wipe the charger with oils, alcohol, Benzine, thinners etc or expose it to hair sprays, Insecticide sprays etc.
- Do not use the charger if it is malfunctioning.
- In the unlikely event that the charger emits smoke, abnormal odors, or unusual sounds, stop use immediately.
- Wireless charging can have a negative influence on vehicles with Key-fob systems by generating unwanted electromagnetic fields that interfere with Key-fob performance. Make sure the Key-fob is a reasonable distance away from the wireless charging station. This distance may vary for different chargers and vehicles.
- Do not subject the charger to strong forces or impact. Doing so may cause injury and/or malfunction.
- Do not place magnetic recording media inside the charging area during charging. The magnetism generated may erase the data in credit card, ETC (electronic toll collection) cards, etc. It may also cause wristwatches and other precision instruments to malfunction.
- Do not leave the mobile phone in the vehicle while unattended. In hot weather, the inside of the vehicle could reach extremely high temperatures, which may cause this device to malfunction.
- The charger consumes a large amount of power. Do not use the charger for extended periods of time while the engine is stopped. The capacity of vehicle's 12V battery may drop, possibly affecting the ability of the engine to start.



How to operate the charger

To charge a compatible device, set the ignition switch to the ON mode. Center the supported device on the mark (□) in the charging area of the charger to begin charging

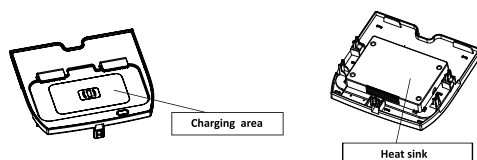

"The direction in which the charger is mounted and the orientation of the Wireless icon mark and power mark may differ depending on the model"

Production specifications

STANDARD	Qi v1.2
SUPPORT TRANSMISSION POWER	15W(MAX)
WIDE VOLTAGE INPUT	9 TO 16V
STORAGE TEMPERATURE	-40 ~ +85°C
OPERATING TEMPERATURE	-30 ~ +70°C
FREQUENCY BAND	Apple quick charge 127KHz Other quick charge 140KHz
RANGE	2 ~ 8mm (Vertical distance)

- When the ignition switch is set to the ACCESSORY mode or the ON mode, a Green light will display indicating the charger is ON.
 - With the charger set to ON, position the supported device onto the charger with the charging surface of the device facing down. When positioned correctly, the indicator light on the switch will turn Orange, this shows the device is now charging
- NOTICE**
- The function of the charge cannot be used with a mobile phone whose shape or size will not allow the charging surface of the supported device to be grounded in the charging area. In addition, some mobile phones may not operate properly.
 - Do not attach an anti-slip mat or sticker to the charger. The presence of an anti-slip mat or stickers between the mobile phone and the charger may prevent the charger from charging.
 - If a cover or decorative accessory that does not comply with the wireless power standard has been attached to the supported devices, it may not be possible for the device to be charger depending on the material, thickness etc. of the cover or accessory. In such cases, remove the attached cover or accessory.

How to operate the charger

- If charging does not start even after the supported device has been placed in the charging area, place the device near the wireless mark in the center of the charging area.
- A supported device may not charge for the following reasons:
 - o The mobile phone is already fully charged.
 - o The mobile phone has become very hot as a result of charging.
 - o The vehicle is in a location where strong radio waves or noise is being generated, such as TV, Towers, electric power plants or gas stations.
- If the charger becomes dirty, wipe off the dirt using a clean damp cloth.
- Before proceeding with charging, please ensure you read the instructions provided with the supported device as well.

Indicator status during normal operation

ALL OFF	Charging Function OFF
GREEN ONLY	Device on, but not charging
GREEN/ORANGE	Charging is Underway



When a supported device cannot be charged

First try the steps below. If the supported device still cannot be charged, then contact your dealer.

Indicator light		Status	Corrective Action
GREEN ONLY	No Charging	There is a foreign object between the supported device and charging area, or the supported device is not placed in the correct position	Remove the foreign object between the supported device and the charging area and replace the supported device in the correct position

Product Specifications

STANDARD	Qi v1.2
SUPPORT TRANSMISSION POWER	15W (MAX)
WIDE VOLTAGE INPUT	9 to 16V
STORAGE TEMPERATURE	- 40 > +85°C
OPERATING TEMPERATURE	- 30 > +70°C
FREQUENCY BAND	Apple quick charge 127KHz Other quick charge 140KHz
RANGE	2 > 8mm (Verticle Distance)

Safety information & warnings

- Do not use the Wireless Charger in damp working conditions; the Wireless charger is not waterproof.
- Do not try opening the shell or trying to repair the Wireless Charger by yourself. If the Wireless Charger has any problem, please take it to an authorized repair agent for repair.
- Do not use a chemical substance, cleaning solvent or cleaner to clean the Wireless Charger, please use a moist soft cloth if you would like to clean the Wireless Charger.

Installation

1. Unclip the surrounding trim on the dash using a panel remover



2. Unplug the connector and place the surrounding trim aside




3. Un screw the gear stick knob and place aside



Installation

4. Using a panel remover, unclip the center console side trim

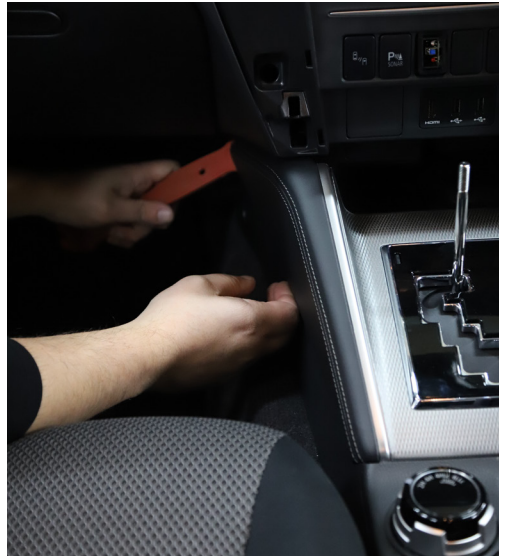


5. Remove the trim retaining clip by pushing the center in as shown



Installation

6. Push the center in to remove the clip.
Pull the center out when re-installing

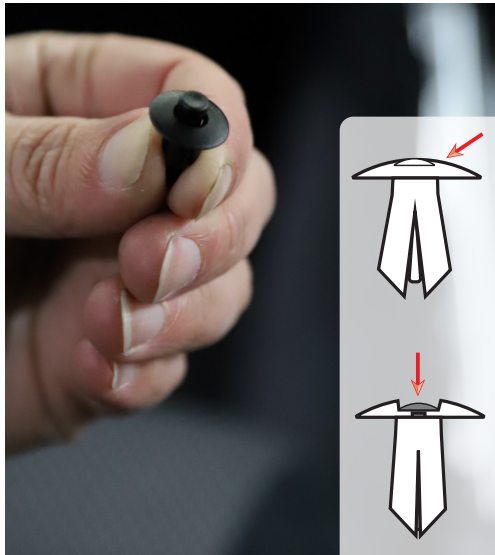

7. unclip the silver gear stick surround with a panel remover



8. Unzip the handbrake cover and unclip the surrounding trim



Installation


9. Remove the 2x 10mm bolts from within the center console



10. Remove the philips screw and lift the center console up, disconnect any cables



11. Remove the 2x 10mm bolts to release the trim around the gear stick

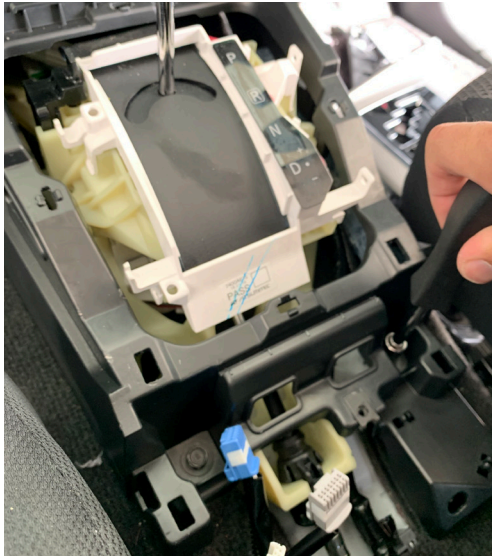

12. Unclip the trim from around the gear stick and place on a bench



Installation

13. Unclip one of the switch blanks in the dash and place aside



14. Run the switch connector up the back and through the switch hole



15. Plug the supplied switch in a push it into place



Installation

16. Lift up and remove the rubber mat and place aside



17. Install the new trim so the cable is out the back for easy connection





Installation


18. Disconnect one of the cigarette lighter connectors



19. Connect the supplied T-Harness in line of the socket and connector

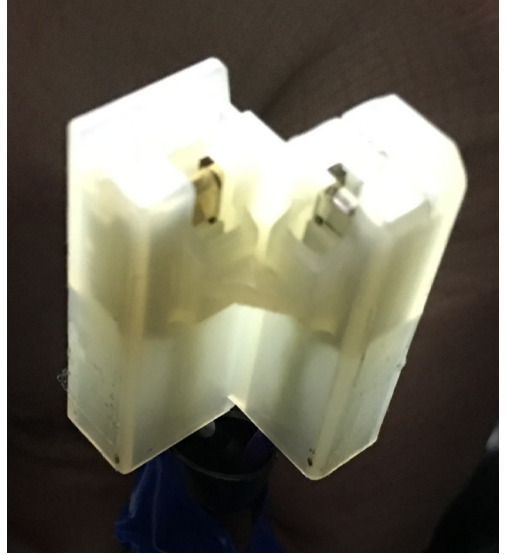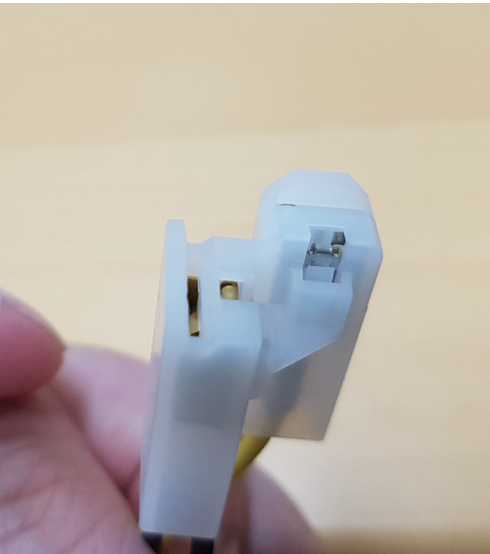

20. Re-install dash trims in reverse order to finish installation

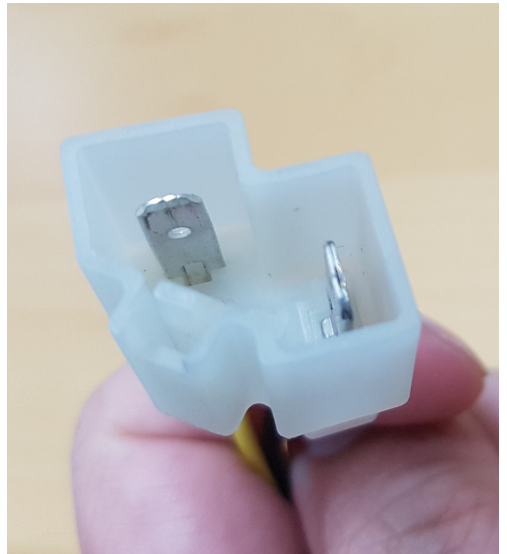

Installer Notes

Technical assistance

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support. Australia

TEL: 03 – 8587 8898

FAX: 03 – 8587 8866



Mon-Fri 9am – 5pm AEST

Please retain this user guide for future reference.

If you would like to download a digital copy of this manual, please visit the product page on www.aerpro.com.au and click on 'Manual' to download.

This manual is considered correct at time of printing but is subject to change.

For latest manuals and updates refer to the website.

Copyright © 2017 by TDJ Australia

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author.