



Product Introduction

Features & Functions

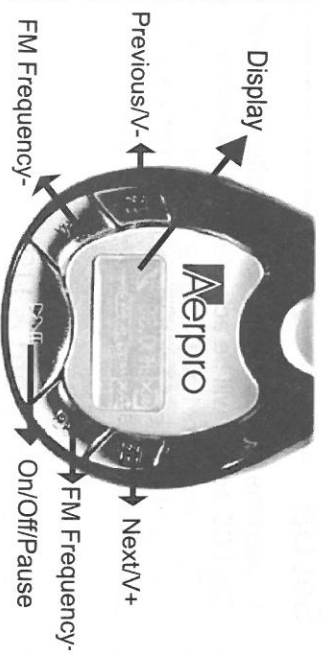

USB

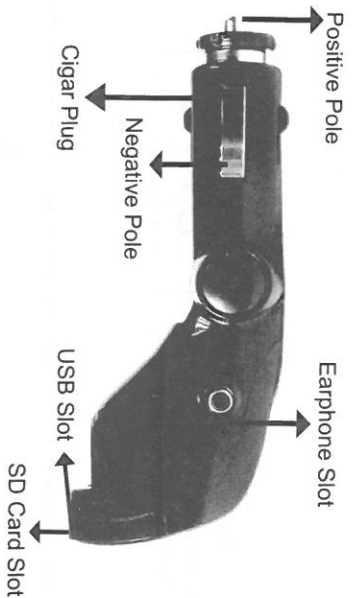

DVD



CD



MP3



SD



Product Introduction

Aerpro FMT220 ✓ N1803

Set Up

1. Insert the FMT220 in the car cigarette lighter socket(12 Volts DC)
- The LCD screen will be activated and display the start frequency as shown
2. Tune your cars head unit to a quiet unused frequency on the FM band
3. Press the "+" or "-" button on the FMT220 to match the frequency that you set on your car radio

Pre-set Broadcast Frequency

87.5

SD Memory Card & USB Flash Memory

1. Follow the instructions in the "Set Up" section of this manual.
2. Insert the SD memory card in to the SD card slot to the player.
3. Press the "▶|◀" button once to advance to the next file. Press and hold the button to increase the volume.
4. Press the "◀|▶" button once to go to the previous file. Press and hold the button to decrease the volume.

SD Card

