


LEDRDC INSTALLATION GUIDE


AERPRO LED REPLACEMENT DUST COVERS (Sold as a pair)

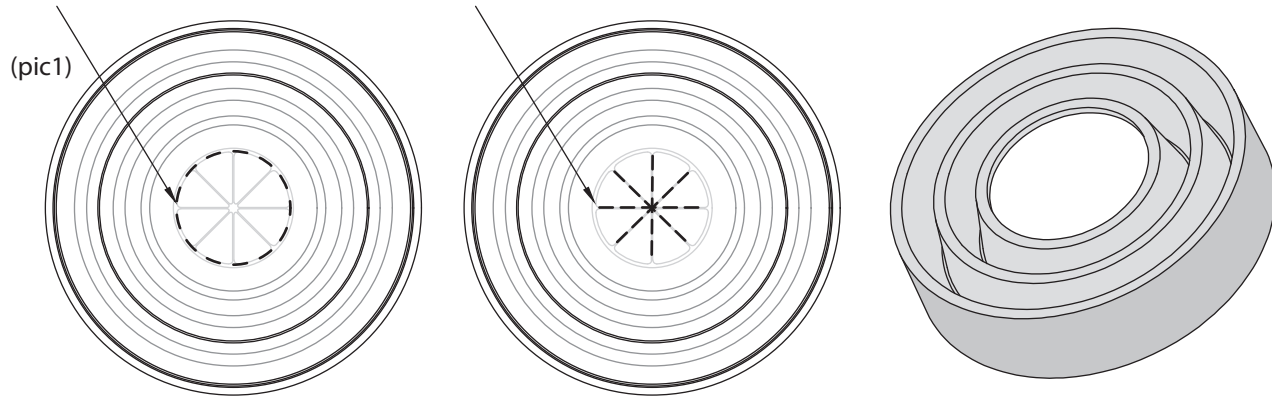

Step 1. Cut centre diameter around or across to match type of LED globe (pic1) and the diameter between heat sink and adjustable collar (pic2)



Step 2. Rubber dust cover can be rotated to fit different vehicles

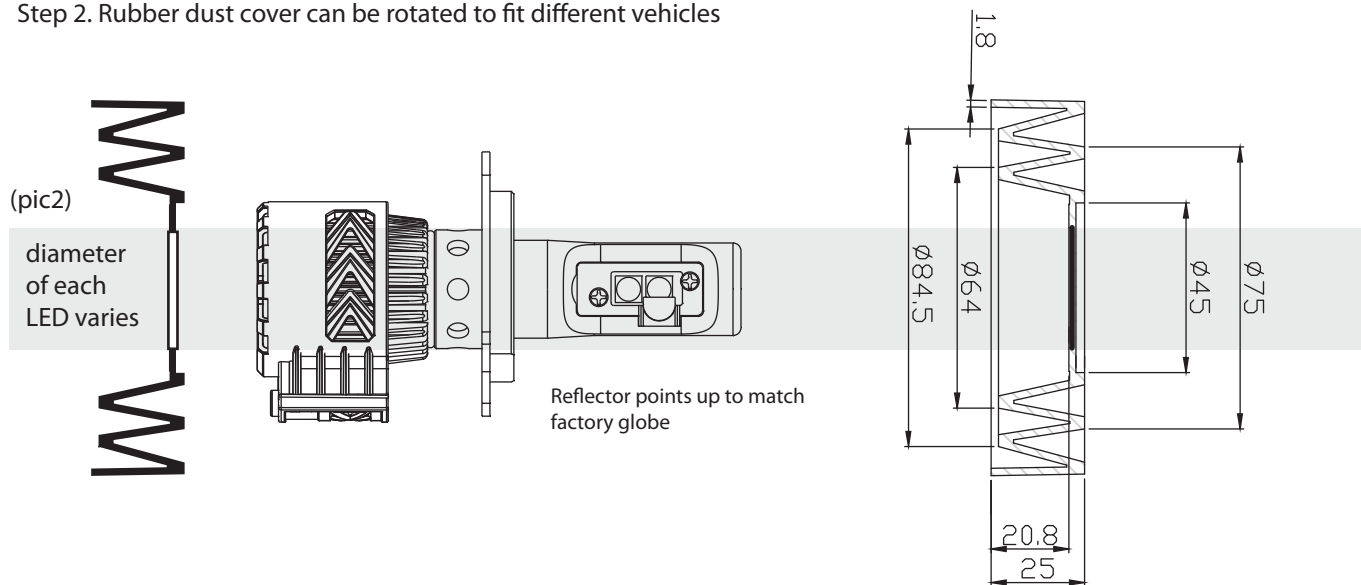

Step 3. Place collar in headlight housing. The rubber dust cover is then positioned onto headlight housing. The LED is then pushed in up against rubber dust cover and collar to seal.

