

FREQUENTLY ASKED QUESTIONS

(Q) Why does my **COMET8** fail to pair with my phone?

(A) If your phone fails to pair, we suggest you restart your phone, try to pair with the unit again making sure your phone is in search mode. The **COMET8** will show up on your phone as **(COMET8)** and all you need to do is click on this line and you will be connected. If your phone fails to connect it is a problem with your process or your phone. If it fails then redo the above steps, as it is unlikely to be the **COMET8** unit at fault.

(Q) Can I PLAY music through the USB port?

(A) Yes with your **COMET8** you can play music (MP3 files) from the USB port. The **COMET8** unit has an AUX, Bluetooth, Micro SD card and USB inputs to take care of all your input needs.

(Q) Why is the Aux input volume lower than the Microphone input volume?

(A) Turn the volume up on your phone or device, then adjust volume on the **COMET8**

(Q) Why will my unit not charge?

(A) Check the power cable is correctly inserted and is not faulty. Internal battery is completely flat and requires to be returned to manufacturer for assessment and possible repair.

TECHNICAL ASSISTANCE

If you need assistance setting up or using your Audioline product now or in the future, call Audioline support Australia

TEL: 03 – 8587 8898 FAX: 03 – 8587 8866 Mon-Fri 9am – 5pm AEST

Please retain this user guide for future reference.

Manual Version 1.0

This manual is considered correct at time of printing but is subject to change.

Copyright © 2017 by TDJ Australia

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author.

**CAUTION:**

No user serviceable parts inside. Please return to the agent or a similar qualified service center for repair.

SAFETY INSTRUCTIONS:

1. Before using, please read the user manual carefully. Retain for future reference.
2. All warnings on the speaker and in the user manual should be adhered to.
3. Do not use the speaker near water.
4. For Ventilation Purposes:
Do not block any of the ventilation openings.
Do not install near any heat sources or fire.
Do not install in an airtight location.
5. Keep the cord and plugs in good order.
6. The speaker may be wiped down with a damp cloth once the unit has been switched off and the plug removed.
7. Unplug the speaker during lightning storms or when not in use for long periods of time.
8. Keep foreign objects and liquid from entering the unit to avoid a short circuit, fire and electrical accidents.
9. Keep the speaker in a dry location.
10. Refer all servicing to the agent or a similar qualified service center for repair.

FEATURES:

- 8 Inch Woofer
- 1 Inch Horn
- Multicolour Flashing Woofer LED Light
- Bluetooth Connectivity
- USB / Micro SD Input (TF) for MP3 playback
- AUX Input
- Microphone Input With Separate Echo & Volume Control
- FM Radio
- Digital Mode Display Screen
- Preset Equalizer Modes
- Remote Controller
- Foldable Carry Handle
- PA stand mountable
- Micro USB Charging Cable
- 3.5mm AUX cable
- Supports charging via power banks

SPECIFICATIONS:


- Built-in Rechargeable Battery: 3.7V/1800mAh
- Frequency Response: 45Hz-20KHz
- Sensitivity (1W/1M): 92dB
- Impedance: 4 ohm
- Weight: 2 Kg (4.4Lbs)
- Dimensions: 230 x 210 x 360mm

INCLUSIONS:

- USB Charging Cable
- 3.5mm AUX Cable
- Remote Controller


CONTROL PANEL:

1. Working status display window
2. MP3 next song / FM next frequency/ Vol+
3. MP3 pause or play/ FM auto scan frequency
4. MP3 last song / FM last frequency/ Vol-
5. Short press EQ to change EQ settings, long press for Mic priority
6. MODE: Press to change modes AUX/ USB / TF / FM / BT
7. Aux input jack
8. USB / Micro SD card input
9. Mic echo adjustment
10. Mic volume adjustment
11. Mic input jack
12. Volume adjustment/ Power ON/OFF
13. Charging light indicator
14. Micro USB DC 5V input
15. Light power ON/OFF

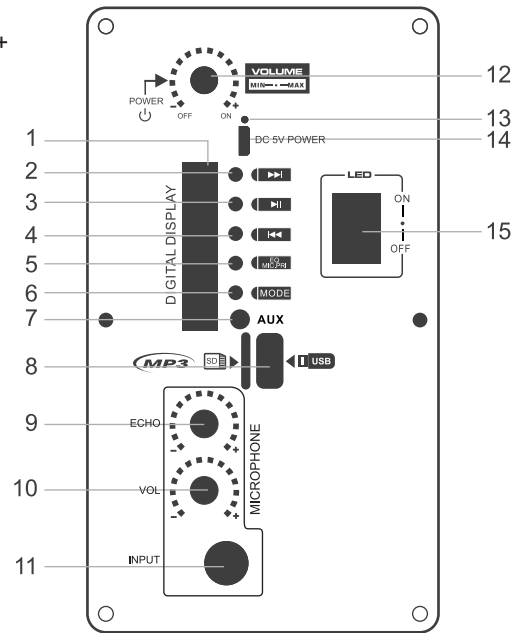

REMOTE CONTROL:

1. Standby
2. MP3 pause or play/ FM auto scan frequency
3. To decrease sound volume of main channel
4. EQ mode
5. Repeat play
6. Song selected 0-9
7. AUX/ USB / TF /FM/ BT input selected
8. Mute
9. MP3 last song/ FM last frequency
10. MP3 next song/ FM next frequency
11. To increase sound volume of main channel
12. USB / TF switch

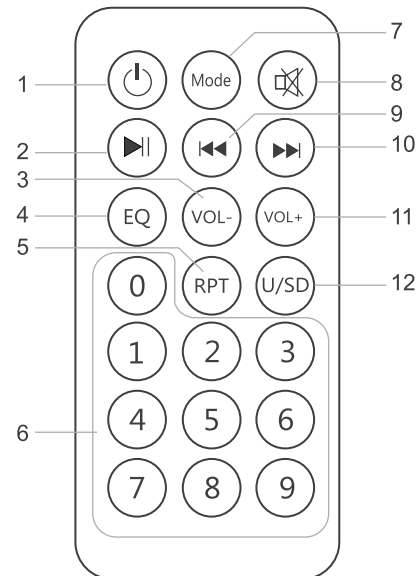

CHARGING INTERNAL BATTERY:

1. Insert the micro USB end of the supplied USB cable into the **COMET8** DC 5V input slot and the USB end into a DC 5V power supply
2. The charging light indicator will show red when charging
3. Once fully charged the charging light indicator will turn off
4. Charge time approx 3 hours

CHARGING INTERNAL BATTERY VIA POWER BANK:

This device can be charged via an external Power Bank power supply, but only if there is sufficient charge left in the internal battery. It will not charge if its completely flat. Make sure power banks meet **COMET8** minimum power supply requirements for charging.

NOTE: To prolong battery life it is best to fully recharge the battery after use. If storing for a long period of time it is best to recharge the battery every month.

BLUETOOTH PAIRING:

To pair your Bluetooth enabled device with the **COMET8**

1. Turn the power of the **COMET8** on
2. Press the **MODE** button on the control panel to switch between modes.
3. Wording '**BLUE**' flashes on the digital display for Bluetooth mode
4. Enable Bluetooth on your device and search for **COMET8** to pair
5. Once successfully paired the wording '**BLUE**' will stop flashing