

QUICK SETUP GUIDE

1. Make sure all items listed on the front of this guide are included in the box.
2. READ SAFETY INSTRUCTION BOOKLET BEFORE USING THE PRODUCT.
3. MAKE SURE THAT YOU HAVE COMPLETELY CHARGED THE BATTERY PRIOR TO FIRST USE FOR MAXIMUM BATTERY LIFE.

- | BOX CONTENTS | |
|--------------|--------------------------------|
| ■ | Battery Powered Amplifier |
| ■ | (1) Microphone Cable |
| ■ | (1) Microphone |
| ■ | (1) Power Cable (standard IEC) |

4. Study this setup diagram.
5. Place product in an appropriate position for operation.
6. Make sure all input devices such as microphones, CD players, mp3 players, and linked amplifiers/PAs are turned off and volume settings are set at "zero"
7. Connect all devices as shown above.
8. Connect the stereo outputs to the power amplifier(s), tape decks, and/or audio sources.
9. Switch everything on in the following order:
 - audio input sources (i.e. microphones, instruments, CD/MP3 Players)
 - PARTY WAKER
 - last, any amplifiers
10. When turning off, always reverse this operation by,
 - turning off amplifiers
 - PARTY WAKER
 - last, any input devices

 
 
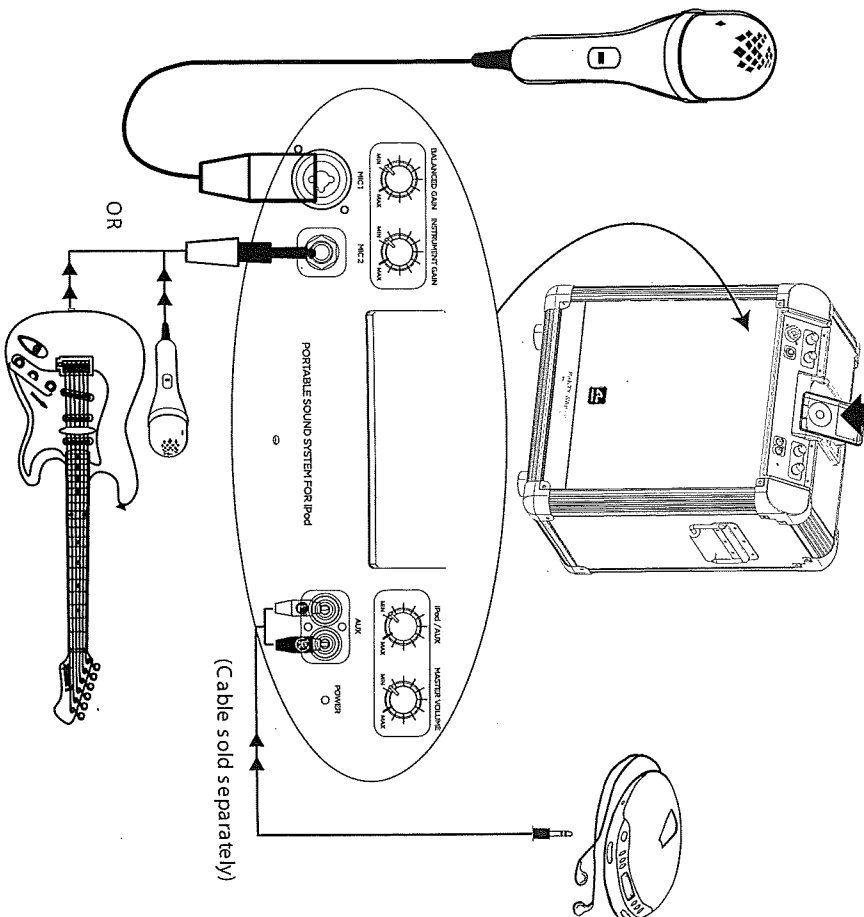 


DIAGRAM AND PARTS DESCRIPTION

1. Microphone 1 Balanced Input with Gain Control (1/4" and XLR): This jack can either take a 1/4" balanced or a XLR balanced cable. An XLR cable is included with the microphone.
2. Instrument/Microphone 2 Input with Gain Control (1/4"): This mono input accepts a 1/4" input such as a microphone, guitar, or other musical instrument.
3. iPod/Auxiliary input with Gain Control (Stereo RCA): This knob controls the level of the iPod and the RCA input. This stereo RCA input can be used to connect a CD, MP3, or other audio source. To connect to a portable device with a 1/8" headphone jack, you need a standard (1/8" to RCA) adapter which is NOT included.
4. Master Volume Control: This knob controls the master volume of the PARTY WAKER.
5. Power Adapter (IEC): Insert the included power cable here to charge the unit. Note that the PARTY WAKER can run off the power adapter while it simultaneously charges the battery. The charge indicator illuminates when the battery is charging.
6. Voltage Selector: Set this to the correct voltage for your location standard.
7. Power ON/OFF Switch
8. iPod Charging Switch
9. Battery Level Indicator: While the unit is powered ON, these four lights indicate the power left in the battery. Battery life varies based on volume and usage.
10. Link Output: This 1/4" jack is a stereo line level output that can be connected to the stereo input of an amplifier or amplified loudspeaker such as another

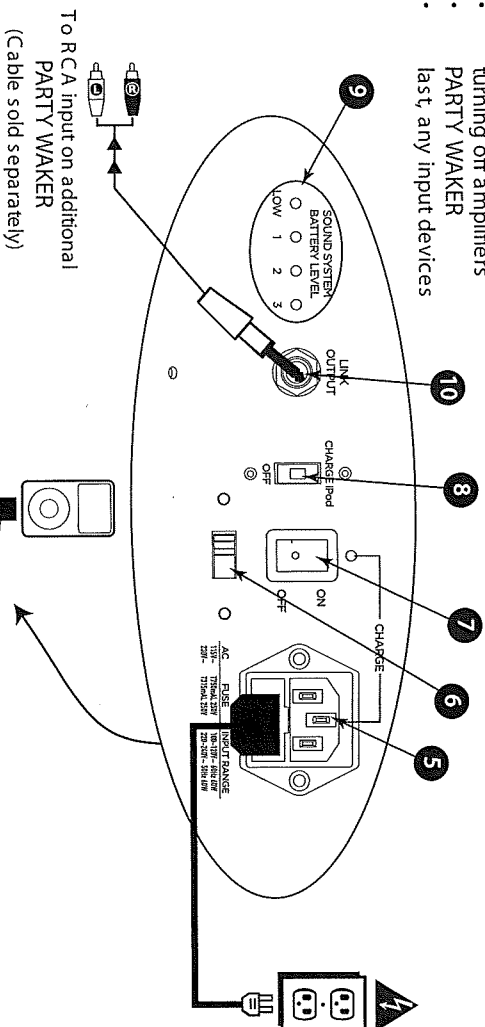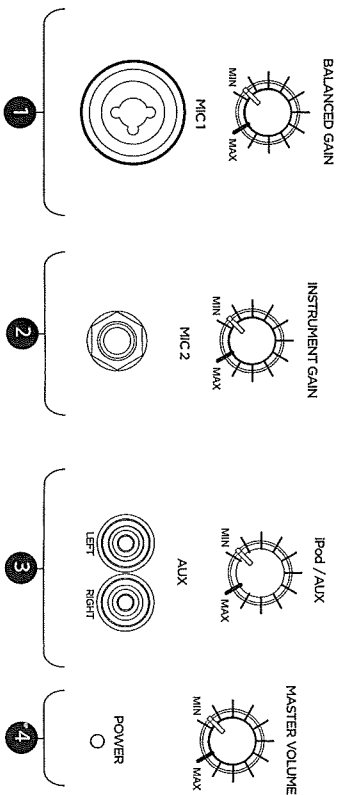

IMPORTANT NOTES

Use this troubleshooting guide if: The sound is distorted at high volumes.

- Input is clipping: Try lowering the input gain or the volume control on your sound source or music instrument.
- Output is clipping: Lower the main volume level.
- There is too much bass: Try adjusting the tone or EQ control on your sound source to lower the bass level. This will allow you to play the music louder before clipping (distortion) occurs.
- The link cable: is being plugged into the instrument or MIC input instead of the RCA line input.

Important: With all large speakers, an initial "break-in" period is needed to perform at optimal levels. To properly "break-in" your PARTY WAKER, play an audio source at medium volume for a few hours.

SPECIFICATIONS

- Input Voltage: AC 100-120V/60Hz 220-240V/50Hz
- Output Wattage: (Peak) 22W
- Output Wattage: (RMS) 15W, $\leq 0.5\% \text{THD}$
- Frequency Response: 80Hz~50KHz +/- 3dB
- Bottom pole mount specifications: Standard Pole Mount found at professional audio retailer:
 - Depth 80mm (3.15")
 - Diameter 35.5mm (1.40")
- Time required to fully charge the PARTY WAKER: under 4 hours
- Battery life: Over 12 hours* at full volume of the PARTY WAKER when fully charged.

*Note: Battery life may vary based on temperature, age, and volume usage of product.



Attention!

This unit contains a re-chargeable sealed AGM lead acid battery. You must look after your battery to get the best possible life from it.

The battery life of an AGM battery highly depends on the way in which it is used. Used correctly and it will give years of service. Treat it badly and it will die a quick death. Please follow these simple rules to get the most out of your battery.

When Using the unit on battery power always ensure the unit is charged fully before use.

After using the unit on battery power **ALWAYS** fully re charge the battery as soon as possible (regardless of how flat it is). Only when the unit is fully charged should you store it for later usage. It is advisable to check the battery condition from time to time if it is to be stored for long periods and give it a charge if necessary.

The Length of time that the unit can be run on battery power depends on the Volume level that the device is running at. If damage occurs to the battery it will badly effect the battery run time (Shorten it)

As a basic rule of thumb for AGM battery life.

- The deeper you cycle the battery the shorter the over all life of the battery. (Deeper cycle means the flatter you let the battery become before re-charging it)
- The longer the battery is left uncharged the shorter the life.
- Damage = how flat X how long it is flat for.

The worst thing you can do is to completely discharge the battery and leave it flat until next usage.

Damage caused by incorrect usage is not covered by your warranty.

The battery is not a user serviceable part. In the event that the battery needs to be replaced the unit has to be returned to our service department.