



To Install Accessories

The three (3) included accessories (mirror, hook and magnet) are all attached to the camera same way as illustrated below:

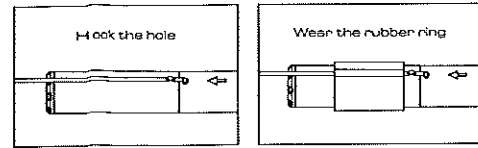


To Install Monitor for Wired Use

EXPLORER PREMIUM supports wired use by connecting the monitor to the camera handle.

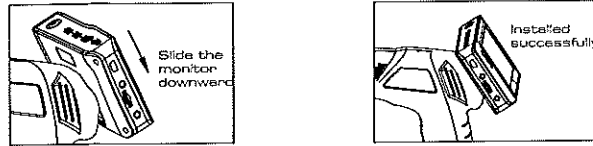


To Install Extension Tube

To connect the extension tube, first align the keyed end with the slot in the handle. Use slight force to push them together. Once properly aligned, twist the treaded knob clockwise until the connection is securely in place. Repeat this process to connect the other end of extension tube to flexible camera tube.

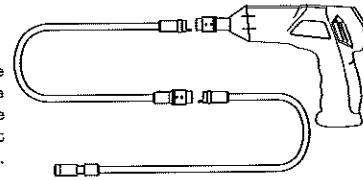


To Insert SD Card

After SD card is inserted into SD card slot successfully, an SD card icon will appear on the monitor screen; otherwise, the 'no SD card' icon will show.

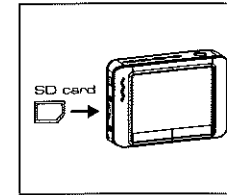


To Connect USB Cable

Use the provided USB cable to connect the monitor to any PC with a USB slot. Your computer should automatically recognize the new hardware, which you may browse by double-clicking on the My Computer icon on your desktop, and then navigating into the Mobile Disk directory.

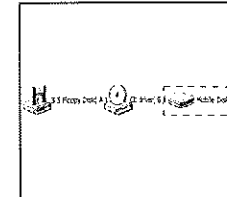

To Connect Monitor Power

Connect the monitor to an appropriate (100-240V ~ 50/60Hz) power source with the provided adapter. The power indicator LED will illuminate red and the battery capacity icon on the LCD will flicker, indicating that the battery is charging. When the red indicator light disappears, the battery has been fully charged.

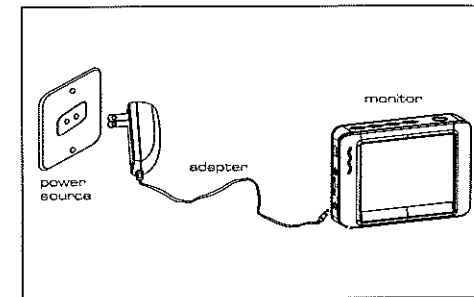


Video Output

Insert video cable into the video out socket of the monitor, insert the other end of the cable into the video in jack of any compatible TV or display device. The LCD monitor is now capable of outputting high quality video to another display.

OPERATION

Basic Operation


- As you roll the power switch to turn on the camera, the power indicator on the camera handle will light. The rolling switch then acts as a dimmer for the twin LEDs that surround the camera on the end of the flexible tube.
- Press and hold the power switch for 2 seconds on the monitor until the power indicator illuminates green. Then press the (V) button to select CH4 (channel 4), or until the picture from the lens is displayed on the monitor. To toggle between video recording and picture taking functions, press the (A) button on the side of the monitor.

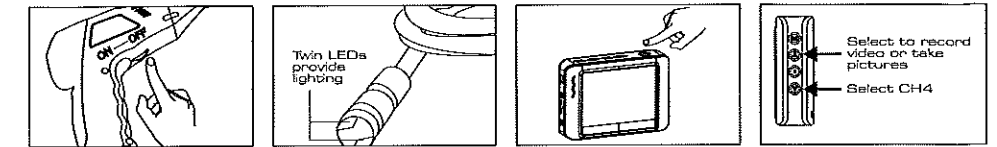

3. When in use, the tube should easily maneuver itself into position. Do not apply excessive force.

TIP:

- A: The flexible tube can be bent into numerous shapes that may help you explore areas you otherwise thought were impossible to see.
- B: The accessories included with EXPLORER PREMIUM can be used to retrieve small items like dropped rings or screws.

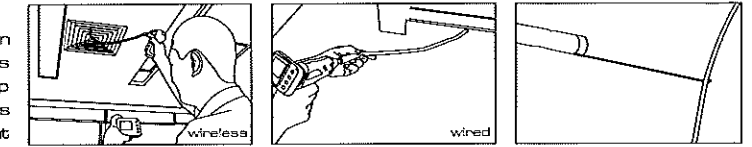


Recording Video

- In real-time monitoring mode, press the (A) button to toggle to video recording mode.
- Press the 'OK' button to begin recording.
- Press again to stop recording.

Notice:

- The video will be automatically saved as an individual file every 30 minutes.
- The (R) icon indicates that the SD card memory is full.

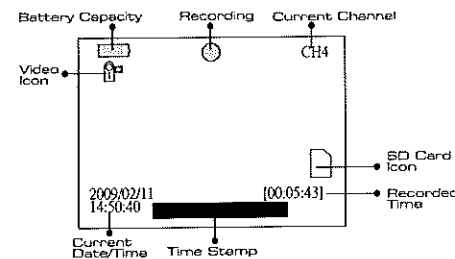


Taking photos

- In real-time monitoring mode, press the (A) button to toggle to photo capturing mode.
- Press the 'OK' button to take a photo.

Notice:

 The (R) icon indicates that the SD card memory is full.




Playback Video/Picture


- In real-time monitoring mode, press the (M) button to toggle to the video/picture folder.
- Press the (A) and (V) buttons to select your desired folder, and then the press 'OK' to toggle to the right interface:

Notice:


A double quotation marks (") next to a file name indicates that the file is a picture. No double quotation marks next to a file indicates that the file is a video.

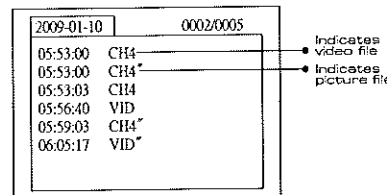

- for playback video:
Press the (A) or (V) button to select your desired video, and then press 'OK' to playback.
Pause: press the 'OK' button once to pause, press again to resume play;
Fast Forward: press the (A) button;
Rewind: press the (V) button;
Stop/Exit: press the (M) button.

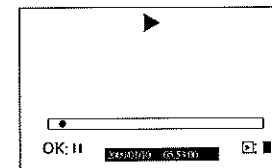

- for view pictures:
Press the (A) or (V) button to select your desired video, press 'OK' button to view and press again to exit.

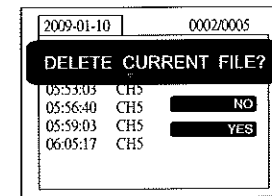


Deleting Video/Picture

- In real-time monitoring mode, press the (M) button to toggle to the video/picture folder.
- Press the (A) or (V) button to select your desired folder, and then press 'OK' button.
- Press the (A) or (V) button to select your desired file, and then press and hold the (M) button for 2 seconds, or until the right interface appears:
- Press the (A) or (V) button to toggle between YES and NO, that is, to delete or cancel. Once you have highlighted your desired selection, press the 'OK' button.


Deleting Folder

Deleting a folder is done in the same way as deleting a single file, however, make sure that the folder is empty first, otherwise the following error message will appear:

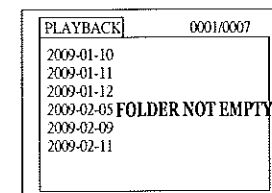


How to enter the Setting Mode

In real-time monitoring mode, press and hold the (M) button for 1~2 seconds, or until the right interface appears:

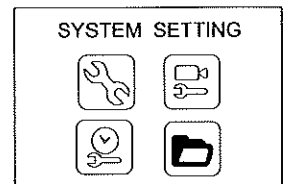

Language Setting

- In the setting mode, press the (A) or (V) button to select 'SYSTEM SETTING', and then press 'OK' button.
- Press the (A) or (V) button to select 'Language', and then press 'OK' button, the following interface will appear:
- Press the (A) or (V) button to select your desired language.
- Press 'OK' button to confirm and exit.

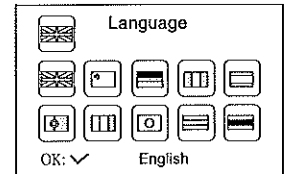

Video System Setting

- In the setting mode, press the (A) or (V) button to select 'SYSTEM SETTING', and then press 'OK' button.
- Press the (A) or (V) button to select 'Video System' and then press 'OK' button.
- Press the (A) or (V) button to toggle between NTSC and PAL. Once your desired system is selected, press 'OK' button to confirm and exit.

Formatting

- In the setting mode, press the (A) or (V) button to select 'SYSTEM SETTING', and then press 'OK' button.
- Press the (A) or (V) button to select 'Format', and then press 'OK' button.
- Press the (A) or (V) button to toggle between YES and NO, that is, to format or cancel. Once you have highlighted your desired selection, press the 'OK' button.

Default Setup

- In the setting mode, press the (A) or (V) button to select 'SYSTEM SETTING', and then press 'OK' button.
- Press the (A) or (V) button to select 'Default Setup' and then press 'OK' button.
- Press the (A) or (V) button to toggle between YES and NO, that is to restore default or cancel. Once you have highlighted your desired selection, press the 'OK' button.