

Clarion®

Owner's manual & Installation manual

Mode d'emploi et manuel d'installation

Manual de instrucciones y de instalación

CZ207/CZ207AU

**CD/USB/SD/MP3/WMA RECEIVER
LECTEUR CD/USB/SD/MP3/WMA
RECEPTOR CD/USB/SD/MP3/WMA**

CLARION PRODUCT REGISTRATION INFORMATION

Contents

For Canada only
www.clarion.com

Dear Customer,
Congratulations on your purchase of a Clarion mobile electronic product. We are

confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at

www.clarion.com to register your Clarion product.

We have made the product registration simple with our easy to use website.

The registration form is short and easy to complete. Once you're registered, we can keep you posted on important product information.

Register at www.clarion.com. It's easy to keep your Clarion product up to date.

INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION

For Canada only
www.clarion.com

5. OPERATIONS

Basic operation

System menu

Audio menu

Radio operation

Disc mode operation

USB and SD mode operation

Aux mode operation

iPod/iPhone mode operation

6. TROUBLESHOOTING

7. SPECIFICATIONS

8. INSTALLATION AND WIRE OPERATION

Please read this owner's manual in its entirety before operating this equipment.

After reading this manual, keep it handy, such as in your glove compartment.

Save your sales receipt. The warranty and your sales receipt are essential for warranty service.

Under Industry Canada Regulations, this radio transmitter may only operate using an antenna of a certain type and maximum (or lesser) gain approved for the transmitter by Industry Canada.

To reduce potential radio interference to other users, the antenna type and its gain should be chosen so that the equivalent isotropically radiated power (e.i.r.p.) is no more than the required one for successful communication.

INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION

For Canada only
www.clarion.com

5. OPERACIONES

Básica operación

Menú sistema

Menú de audio

Operación de radio

Modo de disco

USB y SD modo de operación

Modo auxiliar

Modo iPod/iPhone

6. TROUBLESHOOTING

7. SPECIFICATIONS

8. INSTALLATION AND WIRE OPERATION

Querido Cliente:
Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.
Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet www.clarion.com para registrar su producto Clarion.
Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto. Regístrate en www.clarion.com - es fácil mantener su producto Clarion actualizado.

Under Industry Canada Regulations, this radio transmitter may only operate using an antenna of a certain type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be chosen so that the equivalent isotropically radiated power (e.i.r.p.) is no more than the required one for successful communication.

1. FEATURES

- AM/FM Radio
- Front USB port
- MP3/WMA Compatible with ID3-TAG display
- Front 3.5mm AUX Input
- 45W x 4 Built-in Amplifier
- IR Remote control
- Compatible with iPod®/iPhone®

2. PRECAUTIONS

⚠ WARNING

- For your safety, the driver should not operate the controls while driving.
- Also, while driving, keep the volume to a level at which external sounds can be heard.




DIGITAL
AUDIO

USB


Made for
 iPod **iPhone**

MP3/WMA

Expanding Systems

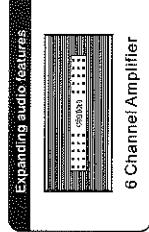

Expanding audio features

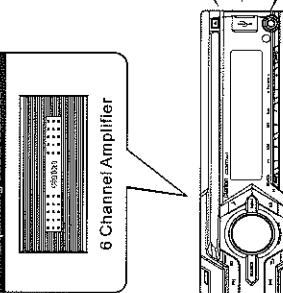

iPod/iPhone

USB Memory



SD card
Portable player
(Connect via
AUX IN Jack)



6 Channel Amplifier



IC Caution.
This device complies with Industry Canada
licensing exempt RSS standard(s). Operation is
subject to the
following two conditions:
(1) This device may not cause interference, and
(2) This device must accept any interference,
including interference that may cause
undesired operation of the device.




CE

3 CAUTIONS ON HANDLING

- Protect from high temperature. Expose to direct sunlight for an extended period of time can produce very high temperature in your vehicle. Cool down the interior before starting the playback.

4 CONTROLS

Operational Panel

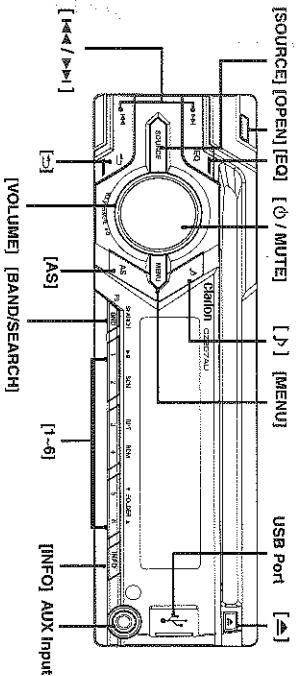


Names of Buttons and their Functions

- [SOURCE] Button**
- Press SOURCE button to toggle the audio source
- [OPEN] Button**
- Unlock the front panel
- [EQ] Button**
- Press this button to the preset equalizer setting: FLAT->JAZZ->POP CLASSIC->ROCK->NEWS->URBAN->RAVE->MOVIE->TECHNO USER
- [Φ / MUTE] Button**
- Press this button to turn power On or Off. (long press).

Notes for use of Remote Control

1. Aim the remote control at the remote sensor on the unit.
2. Remove the battery from the remote control or insert a battery insulator if the battery has not been used for a month or longer.
3. DO NOT store the remote control under direct sunlight or in high temperature environment, or it may not function properly.
4. Use "button shaped" lithium battery "CR2025" (3V) only.
5. DO NOT subject battery to recharge, disassemble, heat or dispose in fire or water.
6. Insert the battery in proper direction according to the (+) and (-) polarities.
7. Store the battery in a place where children cannot reach to avoid the risk of accident.

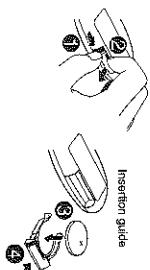

- [BAND/SEARCH] Button**
- Press to select tuner band in Tuner mode. Then use the volume to select search by file number in USB and SD mode.
- [1-6] Button**
- Press this button to quick return to previous menu or mode.
- [VOLUME] Button**
- Rotate to adjust the volume level.
- [AS/PS] Button (radio mode)**
- Auto Store / Preset scan
 - Press and hold enter auto memory store mode
- [INFO] Button**
- Press to view the Clock / Preset station indication.
 - Press to change the display indication.

- [INFO] Button**
- Press to view the Clock / Preset station indication.
 - Press to change the display indication.
- [BAND/SEARCH] Button**
- Press to select tuner band in Tuner mode. Then use the volume to select search by file number in USB and SD mode.
- [1-6] Buttons**
- [1] Button: Play / Pause / Preset station 1
 - [2] Button: Scan play / Preset station 2
 - [3] Button: Repeat play / Preset station 3
 - [4] Button: Random play / Preset station 4
 - [5] Button: Previous folder / Preset station 5
 - [6] Button: Next folder / Preset station 6

Remote Control

[] Button

Mute or Unmute the audio output

• Press the button to turn power on or off.

[/] Button

button to increase the volume.

• Press button to decrease the volume.

[/] Button

Preset track up/down


• Previous / next track

Press and hold for Fast Forward / Backward

[SRC] Button

Toggle the audio source

• Press button to enter the Audio Menu mode.

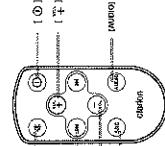

System Menu

In any mode, press [**MENU**] button to enter System Menu. Press [] or [] button to select options, rotate the [**VOLUME**] knob to adjust a value / option.

CLOCK

Rotate the [**VOLUME**] knob to set the hour, press the [**MUTE**] button to confirm, and then rotate the [**VOLUME**] knob to set the minutes.

12/24H

Rotate the [**VOLUME**] knob to choose time format: 12 or 24 hours.

BEEP ON/OFF

Rotate the [**VOLUME**] knob to choose button Beep sound On or Off.

DEFAULT VOL

Rotate the [**VOLUME**] knob to adjust the default volume.

DX / LO (radio mode)

Rotate the [**VOLUME**] knob to choose radio Local or distant at RADIO mode.

• LO: Only stations with strong signal can be received.

• DX: Stations with strong and weak signals can be received.

Audio Menu

Press [] button to enter sound effect setting mode. Press [] or [] button to select options, rotate the [**VOLUME**] knob to adjust a value / option.

EQ (Preset Equalizer Setting)

Rotate the [**VOLUME**] knob to change EQ:
Flat->Jazz->Pop->Classic->Rock->News->Urban->Rave->Movie->Techno->User
Unit is not displayed.

OPERATIONS

Basic Operation

Note: Be sure to read this chapter referring to the chapter "4. CONTROLS".

CAUTION

When the unit is turned on, starting and stopping the engine with its volume raised to the maximum level it may cause hearing damage. Be careful about adjusting the volume.

Power On/Off

Note:

- Start the engine before using this unit.
- Be careful about using this unit for a long time without turning the engine. If you drain the vehicle battery too far, you may not be able to start the engine, and this can reduce the service life of the battery.

Display System information
Press the [**INFO**] button on the front panel to switch the display information, system time and playing source.

Adjusting the volume

1. Rotating the [**VOLUME**] to increase/decrease the volume.

The adjustable range of volume is 0 to 46.

Mute

Press the [**MUTE**] button to turn the mute On and Off.

System

Press [**MENU**] button to enter System Menu. Press [] or [] button to select options, rotate the [**VOLUME**] knob to choose the Dimmer On or Off.

• ON: LCD dimmer is active when small light of vehicle is turned ON.

• OFF: LCD always maximum brightness regardless of the vehicle small light.

TUNE AREA (radio mode)

Rotate the [**VOLUME**] knob to select suitable country region:

- U.S.A (United States)
- LATIN (Latin America)
- EUROPE (Eastern/Western Europe)
- ASIA (Asia Pacific)

Basic Operation

CAUTION

1. Start the engine. The power button / knob illumination on the unit will light up.

Engine On position

2. Press the [/ **MUTE**] button to turn the power On or Off.

Selecting a mode

1. Press the [**SOURCE**] button to display source menu.

Source

* External equipment not connected to this unit is not displayed.

Display System information

Press the [**INFO**] button on the front panel to switch the display information, system time and playing source.

Adjusting the volume

1. Rotating the [**VOLUME**] to increase/decrease the volume.

The adjustable range of volume is 0 to 46.

Mute

Press the [**MUTE**] button to turn the mute On and Off.

System

Press [**MENU**] button to enter System Menu. Press [] or [] button to select options, rotate the [**VOLUME**] knob to choose the Dimmer On or Off.

• ON: LCD dimmer is active when small light of vehicle is turned ON.

• OFF: LCD always maximum brightness regardless of the vehicle small light.

XBS On/Off
Rotate the [VOLUME] knob to turn On or Off the X-BASS booster function.

SUB On/Off
Rotate the [VOLUME] knob to select subwoofer. Rotate the [VOLUME] knob to turn On or Off between On and OFF.

SUB LF (SUB ON)

Rotate [VOLUME] knob to adjust the subwoofer Low Pass Filter range: 80Hz/120Hz/160Hz

FAD (Fader)

Rotate the [VOLUME] knob to adjust the fader balance between the front and rear speakers from 12FR (full right) to 12L (full left).

SUB GAIN (SUB ON)
Rotate the [VOLUME] knob to adjust the subwoofer gain range: 0 to 12.

BAL (Balance)
Rotate the [VOLUME] knob to adjust the balance between the right and left speakers from 12FR (full right) to 12F (full front).

Radio Operation

Select Radio as Playing Source

Press the [SOURCE] button to select the RADIO mode.

Selecting the Radio Band

Press the [BAND / SEARCH] button on the front panel to select one Radio band among F1, F2, F3, AM.

[▶▶] Tuning Up / [◀◀]

Tuning Down Buttons
1. Press the [**▶▶**] / [**◀◀**] button to seek to the next strongest station.

2. Press and hold the [**▶▶**] / [**◀◀**] button change intervals step by step.

Preset Scan

Press scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the [**ASP**] button.
2. When a desired station is tuned in, press the [**ASP**] button again to continue receiving that station.


Auto Store

Only stations with sufficient signal strength will be detected and stored in the memory. Press and hold the [**ASP**] button to start automatically select six strong stations and store them into six presets. The new stations replace any stations already stored in the band.

Disc Mode Operation

Insert a Disc

Insert the disc into the Disc Slot with label side facing up, the unit will play starts automatically.

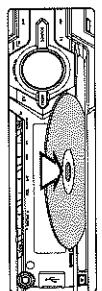

Folder Select

This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

Press the [**▼ 5 ▲ 6**] button to select a folder.

Search Function

Search the [BAND / SEARCH] button on front panel access the MP3 / WMA file search mode.

2. Rotate the [VOLUME] knob to search through all folders on the device then press [**○ / MUTE**] to make your selection.

Effect Function

Press the [**▲**] on front panel to take out the Disc. When the Disc is ejected, the unit switches to the previous source, if still connected.

Otherwise, the unit switches to radio mode automatically.

Selecting a Track

1. Press the [**▶▶**] button to advance to the next track/song.

Press the [**◀◀**] button to go to previous track/song.

2. Press and Hold in the [**▶▶**] button to fast forward through the track/song.

Press and Hold in the [**◀◀**] button to fast backward through the track/song.

Top Function

The top function resets the CD player to the first track of the disc. Press the [**1**] button (long press) to play the first track (track No. 1) on the disc.

Play / Pause

Press the [**▶▶**] button to pause the track/song that is currently playing.

Press the [**▶▶**] button to resume playing the track/song that has been paused.

Area Set


This option allows you to select the appropriate frequency spacing for your area.

1. Press the [**MENU**] button.
2. Press the [**▶▶**] / [**◀◀**] button to select AREA " "U.S.A" " "LATIN" " "EUROPE" " "ASIA"
3. Rotate the [VOLUME] knob to select:
4. Press the [**[MUTE]**] button to confirm.

USB and SD Mode Operation


Insert the USB device

- Slide the USB socket cover **USB** to left.
- Insert the USB device into the USB socket.
- Press the [SOURCE] button to select **USB / IPOD** mode to start playing.

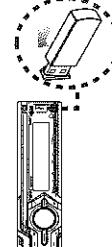

Insert the SD Card

- Press the [OPEN] button to unlock the front panel.
- Hold the left hand side of the panel & pull forward to disengage it from the chassis.
- Insert the SD Card into the slot with label facing left until a "CLICK" sound is heard.
- Replace the front panel and press the [SOURCE] button to select SD mode to start playing.

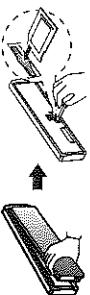


Selecting a Track

- Press the [$\blacktriangleright\blacktriangleright$] button to advance to the next track/song.
- Press the [$\blacktriangleleft\blacktriangleleft$] button to go to previous track/song.

AUX Mode Operation

Selecting a Track


- Press the [SOURCE 1] button on the front panel to select "AUX IN".
- Press the [$\blacktriangleright\blacktriangleright$] button to advance to the next track/song.
- Press the [$\blacktriangleleft\blacktriangleleft$] button to go to previous track/song.

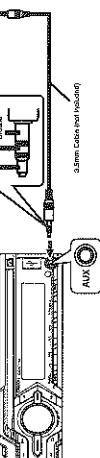

iPod/iPhone Mode Operation

Connect

Connect an iPod/iPhone to the USB socket on front panel. When connecting a device, press the [SOURCE] button to select USB/iPod mode to start playing. The track information displays on the screen once playback starts.

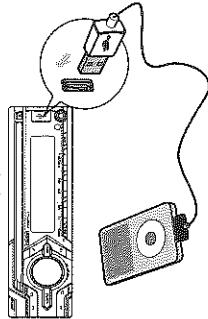

Play / Pause

- Press the [$\blacktriangleright\blacktriangleright$] button to pause the track/song that is currently playing.
- Press the [$\blacktriangleright\blacktriangleright$] button to resume playing the track/song that has been paused.

Folder Select

- This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.
- Press the [$\blacktriangleright 5 / \blacktriangleleft 6$] button to select a folder.

Search Function

- Press the [BAND / SEARCH] button on front panel to access the MP3 / WMA file search mode.
- Rotate the [VOLUME] knob to search through all folders on the device then press [C / MUTE] to make your selection.
- Rotate the [VOLUME] knob to select the desired track within the previously selected folder and press [C / MUTE] to start playing.

Display Function

- During playback, pressing the [INFO] button will automatically cycle through the following information on the line being played on the LCD:
- FOLDER NAME->FILE NAME->TITLE->ARTIST-ALBUM**

Top Function

- The top function resets the USB and SD player to the first track of the device. Press the [$\text{I} / \text{1}$] button (long press) to play the first track (track No. 1) on the USB or SD mode.

Selecting a Track

- Press the [$\blacktriangleright\blacktriangleright$] button to advance to the next track/song.
- Press the [$\blacktriangleleft\blacktriangleleft$] button to go to previous track/song.

Play / Pause
Press the [$\text{I} / \text{1}$] button to pause the track/song that is currently playing.
Press the [$\text{I} / \text{1}$] button to resume playing the track/song that has been paused.

iPod Menu Alphabet Search
This function searches the subfolders for desired alphabetical letters.

- Press the [BAND/SEARCH] button to select the iPod menu mode.
- Rotate the [VOLUME] knob to switch between categories: PLAYLISTS, ARTIST, ALBUM, SONGS, GENRE, COMPOSER, AUDIOBOOK.
- Press [C / MUTE] button to confirm selection.
- Press the [ASPI] button (3 seg.)
- Rotate the [VOLUME] knob to select the desired letter to search.
- Press the [C / MUTE] button to confirm (On that moment the LCD show SEARCH)
- Rotate the [VOLUME] knob to choose the desired song to hear.
- Press the [C / MUTE] button to confirm selection and then you will hear the chosen song.

Display Function

- During playback, pressing the [INFO] button will automatically cycle through the following information on the file being played on the LCD:
ALBUM > SONGS > ARTIST > CLOCK

General

problem	cause	measure
Unit cannot power on.	Unit fuse blown.	Replace with new fuse of correct rating.
No/low audio output.	Car battery fuse blown.	Replace with new fuse of correct rating.
Speakers damaged.	Improper audio output connection. Volume set too low.	Check wiring and correct. Increase volume level.
Heavily biased volume balance.	Speakers damaged. Speaker wiring is in contact with metal part of car.	Replace speakers. Isolate all speaker wiring connections.
Poor sound quality or distortion.	Speaker power rating does not match unit.	Check wiring and correct.
Unit releases itself when engine is off.	Incorrect connection between ACC and Battery.	Check the wiring and correct.

Disc Player

problem	cause	measure
Disc cannot be loaded.	Another disc is already loaded.	Eject the disc before loading the new one.
Sound skips or is noisy.	There is an object inserted on the unit.	Remove the object inside the unit.
Sound is bad when power is first turned on.	Compact disc is dirty. Compact disc is heavily scratched or warped.	Clean the compact disc with a soft cloth. Replace with a compact disc with no scratches.
Condensation may form on the internal lens when the car is parked in a humid place.	Lens dry for about 1 hour with power on.	

USB

problem	cause	measure
USB device cannot be inserted.	The USB device has been inserted with wrong direction.	Reversing the connection direction of the USB device, try it again.
USB device is not recognized.	The USB connector is broken. The USB device is damaged. Connections are loose.	Replace with a new USB device. Disconnect the USB device and reconnect. If the device is still not recognized, try replacing with a different USB device.
No sound heard with the display "No File" shown.	No MP3/WMA file is stored in the USB device.	Store those files properly in the USB device.
Sound skips or is noisy.	MP3/WMA files are not encoded properly.	Use MP3/WMA files encoded properly.

FM Tuner

Australia:	Power Supply Voltage: 12V DC (10.8 to 15.6V), Negative Ground
AM 52.2-162.0kHz	Fuse: 15A.
AM 52.2-162.0kHz	Speaker Impedance: 4.8 ohms per channel
Asia:	Power output: 45W x 4 channels
AM 87.5-108.0MHz	Aux-in level: >650mV
Canada:	
AM 63.0-17.10kHz	
FM 87.5-107.90MHz	
U.S.A.:	
AM 53.0-17.10kHz	
FM 87.5-107.90MHz	

CD/MP3/WMA mode

Disc Player System: Disc digital audio system
MP3 sampling rate: 32kHz, 44.1kHz, 48kHz
MP3 bit rate: 8-320kbps and variable bit rate

WMA bit rate:
Logical format:
Number of file:
Max directory depth:
Sorting Method:
Max File/Directory Name:
ID3 tag

320kbps
ISOB9660 Joliet
Maximum 999
10
Tree sorting
64Byte
V2.0 or later

Playable files:

USB host:
Host 1.1 compatible
Playable folders:
up to 99


Maximum memory capacity:
32GB
Playable files:
up to 3000

General

Power Supply Voltage: 12V DC (10.8 to 15.6V), Negative Ground	Fuse: 15A.
	Speaker Impedance: 4.8 ohms per channel
	Power output: 45W x 4 channels
	Aux-in level: >650mV
Note: Specifications and design are subject to change without notice for further improvement.	

4. Installation the Source Unit

- Place the mounting bracket into the instrument panel, use a screwdriver to bend each stopper of the inounting bracket inward, then secure the stopper.
- Wire as shown in Section 5.
- Insert the source unit into the mounting bracket until it locks.
- Take care of the top and bottom of the trim ring and mount it so that all the hooks are locked.

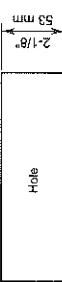

1. Before Starting

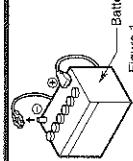


Figure 1

- This set is exclusively for use in vehicles with a negative ground 12 V power supply.
- Read these instructions carefully.
- Be sure to disconnect the battery's "terminal before starting. This is to prevent short circuits during installation. (Figure 1)

2. General Cautions

- Do not open the case. There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your authorized Clarion service center.
- During installation, never use a rough cloth, thinner, benzine, or alcohol etc. For tight dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gently.

3. Cautions on Installation

- Prepare all articles necessary for installing the source unit before starting.
- Install the unit within 30° of the horizontal plane (Figure 2).
- If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.
- Use the enclosed screws for installation. Using other screws can cause damage. (Figure 3)

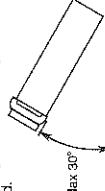


Figure 2

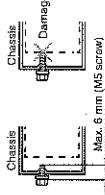



Figure 3

- **Console opening dimensions**
- **Notes of installation:**
 - Before installation, please make sure proper connections are conducted and the unit operates normally. Improper connection may result in damage to the unit.
 - Use only accessories designed and manufactured for this unit and other unauthorized accessories may result in damage to the unit.
 - Before installation, please fasten all power cables.
 - DO NOT install the unit in the place where close to hot area to prevent damage to electrical components such as the laser head.
 - Install the unit horizontally. Installing the unit more than 30 degree vertically may result in worse performance.
 - To prevent electric spark, connect the positive pole first and then the negative pole.

Unit Installation


Method A

1. Insert mounting bracket into dash board, choose appropriate mounting tab according to the gap width, bending the mounting tab outwards with a screwdriver to fix the mounting bracket in place.
2. Slide the unit into the bracket until you hear a click sound.

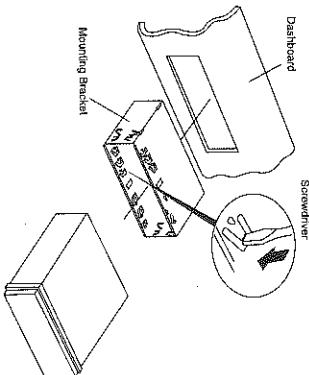


Method B

1. Insert this unit directly to the opening of the dashboard.
2. Place M5x7 cylindrical screw through the holes of the mounting frame located inside the opening to holes of the unit and fasten the screws to left & right.

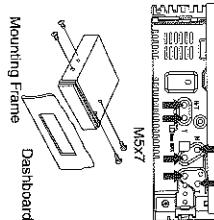


Trim ring installation

Attach the trim ring around the front panel. Take care of the top and bottom of the trim ring and mount it so that all the hooks are locked.

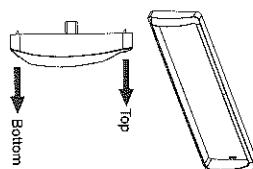

5. Wiring and Connections

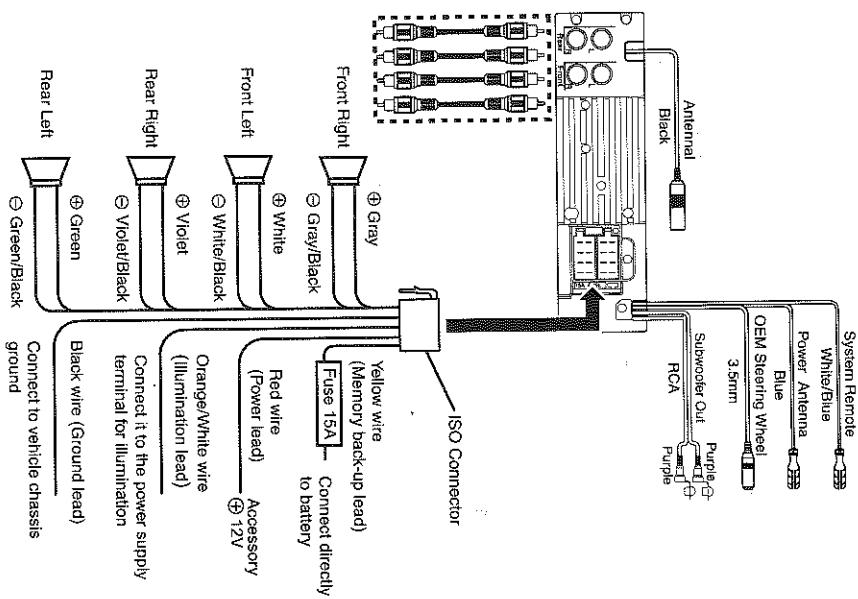

015/03

Clarion Co., Ltd.

Copyright © 2017 Clarion Co., Ltd.

Printed in China / Imprimé en Chine / Impresso en China



PN: