NX387AU

- For safety reasons, do not perform any operations while driving. Doing so can take your mind off the road and create the risk of a traffic accident.
 Always stop your vehicle in a safe place before operating the unit.
 Please keep the volume at a level at which external sounds can be heard while driving. **A WARNING**

dsilgn∃

Operation Panel

- Do not allow any liquids on the set from drinks, umbrellas, etc.

 Do not disassemble or modify the set in any way.

 Subjecting the operation panel to shocks may result in breakage, deformation, or other damage.

 Do not allow any hot objects or hot ashes to come in contact with the display at any time.

 If a problem should occur, have the set inspected at your store of purchase.

 The remote control unit may not work if the remote control sensor is exposed to direct sunlight.


 In extremely cold weather, the display movement may slow down and the display may darken, but this is not a malfunction. The display will work normally when the temperature increases.

- Small black and shiny spots inside the operation panel are normal for LCD products.

 The touchkeys on the display operate when slightly touched. Do not press the touchkey screen with much force.
- ding the too with much force. This may car ning of the

on of the

GENERAL GUIDE

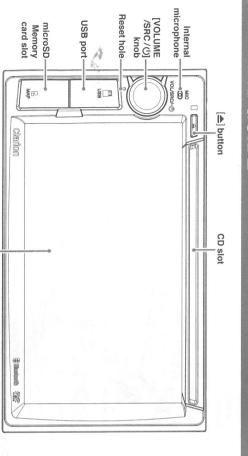

CONTROLS

6.2" Resistive

Button Layout

CD slotCD/DVD Insertion.

USB portUSB/iPod device insertion.

microSD Memory card slotFor memory card with navig

AUX ports (Rear)

3.5mm Auxiliary i

5mm Auxiliary jack insert eering wheel remote cor

- [♠] buttonEject disc.
- For handsfree.

- [VOLUME/SRC / 也] knob

 Adjust the volume. Press to change source mode during power mode.

on

6.2" Resistive touchscreen TFTDisplay and interactive button ope


- Reset holePress to re
- Press to turn monitor on during standby mode.

 Long press to enter standby mode.

POWER BUTTON OPERATIONS

■ To enter standby mode
When the unit is powered on, push and hold the
VOLUME knob for more than 1 second.

To wake the unit up from standby mode
 When the unit is in standby mode, push the VOLUME knob.

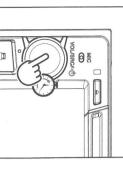

E ... 98

ACAUTION


Be careful when using this unit or in standby mode for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.

ADJUST THE AUDIO

- Press the button on the Home Screen.
 Press the desired button to perform specific operations.

Category on screen

tab Adjusting and sub Adjusting Adjusting Adjusting	=	tab Adj	Adjusting the balance/fader Adjusting the time alignmer
	=	tab	Adjusting the time alignment
	=	tab	Adjusting and sub v
02:0:10	;	tab	Adjusting

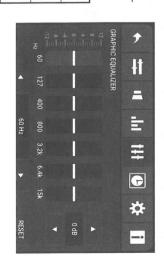


ADJUST THE VOLUME

- Adjust the volume in any mode.

 1. Turn Clockwise: Increase sound volume.

 2. Turn Counter-clockwise: Decrease sound volume.

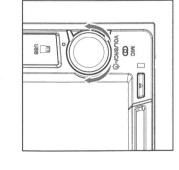

TUNE TO RADIO STATION

- Press the lesired button on the Home Screen.

 Press the desired button to perform specifications.





MY FM	108.00	СНЗ	FM1
Ζ̈́	.00		NEWS
TA D)	*	PRESET	
AST	SEEK	*	12:34 PM
SAVE	¥	RDS	PM

[RDS]	PRESET	[← →] Select S	Control on screen	MY FM	108.00
		Select SEEK/PRESET/RDS tab.		TA B	*
		ESET/RI		AST	SEEK
		DS tab.		SAVE	*
_		1 7		 7	

[TIVI]	loggie Radio pand
[FM2]	
[FM3]	
[AM]	
[*]/[*]	Toggle mute/unmute
[*]/[*	Frequency seek up/down
ISI ISI	Trigger Autostore
[DX SEEK]	Toggle between Auto/
[LOCAL SEEK]	Local/Manual seek mode
[MANUAL SEEK]	
1A	Toggle Traffic Announce- ment standby mode
SAVE]	Store frequency into preset channel
3 98.10MHz	Recall frequency in preset channel
2 m	Toggle Programme Type standby mode
AS D	Toggle Alternate Freque- ncy standby mode
PEC PEC	Toggle Regional standby mode

PLAY AUDIO FROM EXTERNAL MEDIA

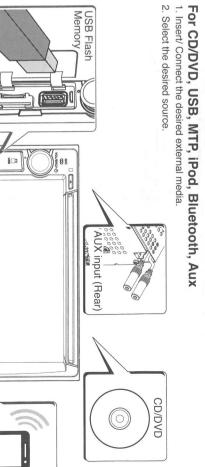

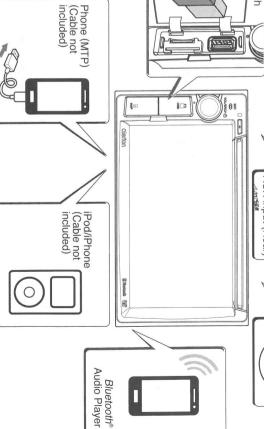

- Control on Screen	en	
	Enter music directory or iPod	ti
	C	
[*]/[*]	Previous/Next track	×
οι [•]/[•]	Toggle Play/Pause	





PLAY VIDEO/PHOTO FROM EXTERNAL MEDIA

For CD/DVD, USB, MTP, Video Input, DVB-T2

- Insert/connect the desired
 Select the desired source.




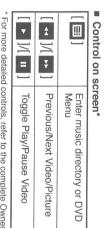


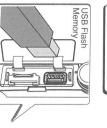



§ 🗆

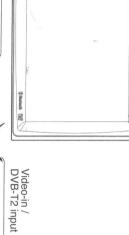

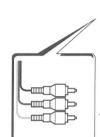

Phone (MTP) (Cable not included)

BLUETOOTH HANDSFREE

idsfree function can be used, the system ust be pair with the phone for the first time

- Pairing with phone

 1. Go to Phone

 Bluetootl Phone → Blueton ystem will enter ooth Settings tab >> Pair Dediscoverable mode for 120

- 2. Use your phone to search for "CLARION".

 3. Perform one of the method below:

 For newer phone that supports Simple Secure Pairing (SSP):

 A random 6 digit passkey will be displayed. Compare and confirm the passkey on both the phone and head unit are matched.

 For classic phone:

 Enter the defined PIN code when prompt ("0000" by default)

uccessful pairing, system with the phone.

يتني C. *


Outgoing call
Outgoing call can be performed via keypad, call history or contacts from phone.
System will be able to download the entire phonebook from the mobile phone if it is supported.

	d []	[Carcact A out act cell
Call history	Downloaded contacts from phone	Phone keypad	Voice dialer	

Incoming call





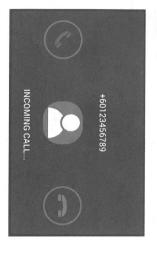

GPS NAVIGATION

- 2 .-Press the button on the Home Screen. Follow the on-screen input instructions to select your destination.



SPECIFICATIONS

FM Tuner
Frequency Range Frequency Range : 87.50 ~ 108.00 MHz
Usable Sensitivity : <10 dB
Stereo Separation (1 kHz) : >20 dB
Frequency Response (±3dB) : 20 ~ 20 000 Hz

AM TunerFrequency Range
Usable Sensitivity : 531 ~ 1602 kHz : <34 dB

: Digital Versatile Disc System with CDDA capable Usable Discs : DVD video disc, Compact disc Frequency Response: 17 ~ 20 000 Hz Signal-to-Noise Ratio: >70 dB Harmonic Distortion : <0.3%

DVD Player

Specification : USB 2.0 File system : FAT16, FAT32 Playable audio format : MP3 (.mp3), WMA (.w Playable video format : AVI (.avi), MP4 (.mp4) Playable video resolution : 720*480/576 Playable image format : JPEG (.jpeg) ia), AAC (.m4a)

.mpeg), VOB (.vob), DAT (.dat)

iPod/ iPhone Supported iPod/ iPh

iPhone 6S Plus, iPhone 6S, iPhone 6 Plus, iPhone 6, iPhone 5, iPhone 5C, iPhone 5

Pod Touch 6th Gen, iPod Touch 5th Gen Pod Nano 7th Gen

Bluetooth

Frequency Range RF Power

elephone Operation : Bluetooth® 3.0 : 2.40 ~ 2.4835 GHz, ISM band : Class 2 (2.5 mW) n : Noise reduction, echo cancellati

Screen size

uch type : 6.2 inch : 800 x 480 : TFT Active I Matrix Display

General

Power Source Voltage
Current Consumption
Weight of the Main Unit
Dimensions of the Main Unit
Maximum Power Output
Operating Temperature : 1.6kg : 178.0 mm Width X 100.0 mm F : 200 W (50 W x 4 ch) : -20°C ~ +70°C : 10.8V - 15.6V : Less than 15A

GPS Antenna Mode : PP External

mensions : 32 (w) x 35.5 (d) x 9 (h) mm pedance : 50 Ohm

Navigation System
GPS Receiving Frequency

: 1575.42 MHz, C/A Code :-145 dBm cold start -159 dBm navigation : 88 : Australia & New Zealand

mber of GPS Channels loaded Map

About the registered marks,

- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone, iPod, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc.

- Copyright 2015 Google Inc.

 Font used in this product is licensed under the Apache License, Version 2.0 (the "License"); you may not except in compliance with the License.

 You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

 You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

 Unless required by applicable law or agreed to in writing, software distributed under the License is distributed under the License is distributed under the License or implied.

 See the License for the specific language governing permissions and limitations under the License.

- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use such marks by Clarion is under license. Other trademarks and trade names are those of their respective owners.
- roSDHC Logo is a tra ırk of SD-3C, LLC.
- Dolby, Dolby Audio and the double-D symbol are trade marks of Dolby Labor
- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.







Rnglish

INSTALLATION AND WIRE CONNECTION

Safety Precautions

Symbol identification your safety, the Owner's Manual should be read thoroughly to familiarize ality. Please see the enclosed CD-R which contains your Owner's Manual. ction Manual is intended for authorised Clarion dealers. Due to the complexity onents, it is recommended an authorised Clarion dealer perform the Installa-authorised Clarion dealer, please visit: www.clarion.com.au/Dealer_Locator authorised Clarion dealer, please visit: www.clarion.com.au/Dealer_Locator Installation notes

manual uses symbols and icons to indicate safe-ecautions and concerns during the installation edure. Be sure to carefully read and understand precaution prior to beginning the installation.

WARNING

This symbol is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions may result in severe injury or death.

This symbol is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions can result in injury material damage. A CAUTION -

Installation precautions

A WARNING

- When installing the unit to a vehicle with an airbag system, never install it in a place where it may affect the operation of the
- Do not install this unit in the following loca-
- A location interfering with the driver's visual range or operation.
 A location where the gear shift or brake pedal are hindered.
 A location where passengers are at risk.
 An unstable location, or where the system may fall.

A CAUTION

- Do not install the system in the locations described below. This may cause a fire, accident or electrical shock:
- A location exposed to rain or dust.

 A location interfering with the driver's visual range or operation of the vehicle.

 An unstable location, or where the system may fall.
- Do not install this unit in a place exposed to direct sunlight, heat or place where the vent holes or heat radiation holes are covered.
 When you install the antenna, mount it in a place where the elements of the antenna do not protrude beyond the edge of the front, back, left and right of the vehicle.
 If it comes in contact with pedestrians, it may cause an accident.

A WARNING

Please note the position of pipes, tanks and electrical wirings before installing the unit into the vehicle; failure in avoiding these may cause a fire or malfunction.

A CAUTION

- Use only the supplied parts.
 If unspecified parts are used, they may cause
- Any holes made in the body of the vehicle should be sealed with a silicon adhesive.
- If exhaust fumes or water penetrates into the vehicle, this may cause an accident.

 Fasten the bolts securely when installing the unit. If the bolts are loose an accident or malfunction could occur.

Connection notes

A WARNING

- Loom all cables according to the instruction manual, so as not to hinder operation.
 Wire the connecting cords/cables away from high temperature areas. If the coatings of the cables melt, it could cause an accident/fire by by a short circuit. Take care when wiring in the engine compartment.
 When wiring the connecting cables in a vehicle with an airbag system, never feed the cables through a place where it may affect the operation of the airbag.
 An airbag not operating correctly in an emergency may cause increased injury.


A CAUTION

- Verify wires with a digital multi-meter prior to making any connections. Many new vehicles use multiplexed and/or low voltage circuits that can be damaged if a test light or logic probe is used.
- Connect cables appropriately. If a wrong connection is made, this may cause a fire or accident. When passing cables through the body of the vehicle, use non-conductive grommets.
- If the coatings of the cables are worn out by rubbing, this may cause an accidents, fire or a short circuit.


 After wiring cables, fix them with insulation tape.
- to switch off the vehicle when connect-disconnecting cords to/from the unit, se an electric shock, injury or accident

Before Starting

- This set is exclusively for use in cars with a negative ground, 12 V power supply.
 Read these instructions carefully.
- Read these instructions carerumy.
 Be sure to disconnect the battery "○" terminal before starting. This is to prevent short circuits during installation. Please check with car owners manual before dismantle the battery terminal. (Figure 1)
 Be particularly careful where you route the wires. Keep them well away from the engine, and exhaust pipe, etc. Heat may damage the wires.

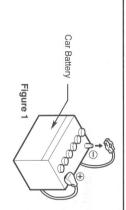

Package Contents

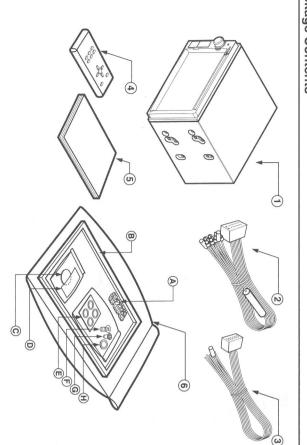

- Source unit
 Extension Lead (16 PIN)
 Extension Lead (12 PIN)
 Extension Lead (12 PIN)
 A Remote control unit
 Duick start guide
 Bag for accessories

sory bag

- Ittery for remote control
 Ittery label

Cautions on Installation



- Prepare all articles necessary for installing the source unit before starting.
 Install the unit within 30° of the horizontal plane. (Figure 2)
- - If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.
 Use the enclosed screws for installation. Using other screws can cause damage. (Figure 3)


Installing the Source Unit


This unit is des ed for fixed installation in the dash

- When installing the source unit in TOYOTA vehicles (Figure 5), use the parts attached to the vehicle and follow the instructions in Figure 4.

 2. Wire as shown in "Wire Connection".


 3. Reassemble and secure the unit in the dashboard and set the face panel and center panel. the source unit in NISSAN vehiarts attached to the unit and follow in Figure 4.

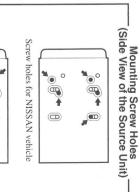

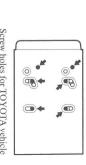

holes for TOYOTA vehi


Installing the Source Unit in a NISSAN Vehicle

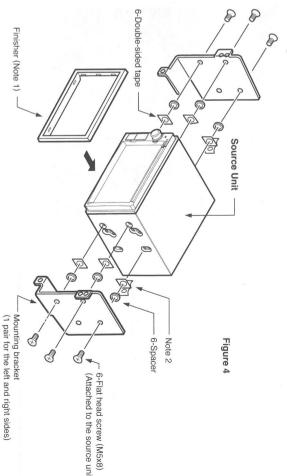

- Note 1:

 Position the face panel with its wide edge at the bottom. Fit the edge into the groove of the source unit.
- the tape

Note 2: • Peel off the exfoliation sheet from the spacer to the source unit.

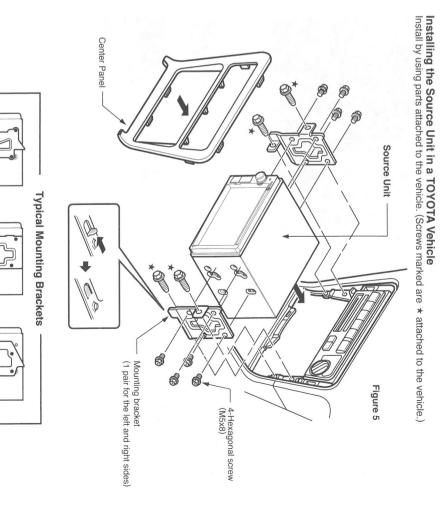


ews to the

 Removing the Source Unit When the source unit is to be re Unit". ble it in the of the order in "Installing the


- Notes:


 Before installing, be sure to disconnect the negative ⊖ cable of the car battery.

 In the optional devices, the Extension Cable and Accessories are separately-sold items.

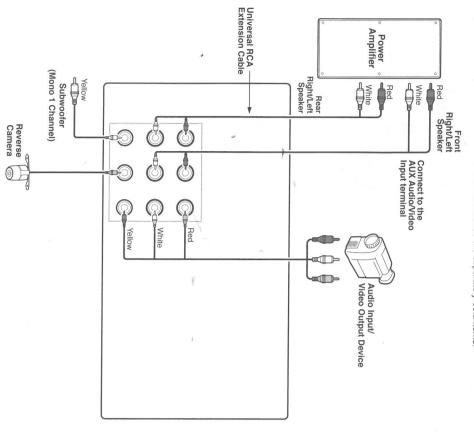

CAUTION: Please make

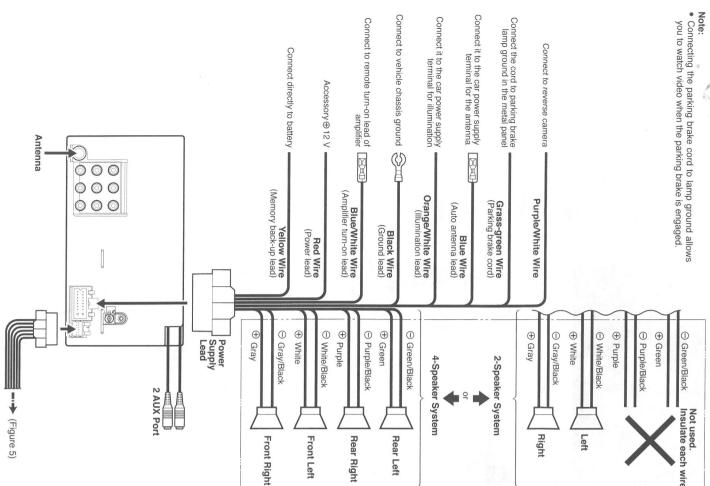

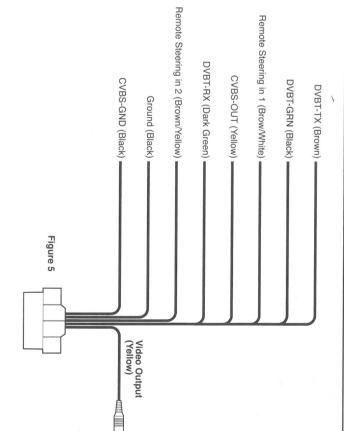


Connecting the parking brake cord onnect the cord to parking brake lamp ground in the meter panel

- oues:

 Connecting the parking brake cord to lamp ground allows you to watch video images when the parking brake engaged.

 When the parking brake cord is not connected, the monitor will not display video images.
- will not display video images.

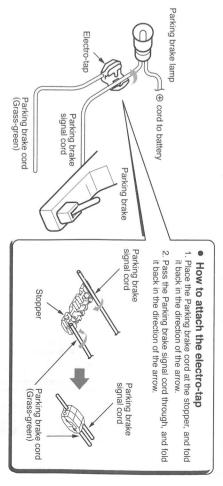

Connecting the reverse gear signal cord (For installation with reverse camera) Connect reverse signal lead using the supplied electro-taps.

- Place the lead from this unit at the stopper, and fold it back in the direction of the arrow.
 Pass the vehicle signal lead through, and fold it back in the direction of the arrow.
- Note:

 Connect the reverse camera video signal output to the RCA pin cord. If not, the screen will turn green while the gear shift lever is in the reverse gear position.

