

## 9. INSTALLATION / WIRE CONNECTION GUIDE

### CONTENTS

1) Before Starting .....	15
2) Package Contents .....	15
3) General Cautions .....	15
4) Cautions on Installation .....	15
5) Installing the Source Unit .....	15
6) Wiring and Connections .....	17
7) Connecting the accessories .....	17

### 1) Before Starting

1. This set is exclusively for use with a negative ground 12 V power supply.
2. Read these instructions carefully.
3. Be sure to disconnect the battery "terminal" before starting. This is to prevent short circuits during installation. (Figure 1)

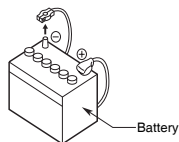


Figure 1

### 2) Package Contents

Source unit .....	1
Trim ring .....	1
Power supply cable .....	1
Owner's manual.....	1
Screws M5x6 mm Double Sems .....	8
Screws M5x6mm Flush mount .....	8

### 3) General Cautions

1. Do not open the case. There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized **Clarion** service center.
2. Use a soft, dry cloth to clean the case. Never use a rough cloth, thinner, benzene, or alcohol etc. For tough dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gently.

### 4) Cautions on Installation

1. Prepare all articles necessary for installing the source unit before starting.
2. Install the unit within 30° of the horizontal plane. (Figure 2)
3. If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.
4. Use the enclosed screws for installation. Using other screws can cause damage. (Figure 3)

 


Figure 2

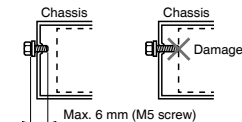


Figure 3


### 5) Installing the Source Unit

 1. Before installation, please make sure proper connections are conducted and the unit operates normally. Improper connection may result in damage to the unit.
2. Use only accessories designed and manufactured for this unit and other unauthorized accessories may result in damage to the unit.
3. Before installation, please fasten all power cables.
4. DO NOT install the unit in the place where close to hot area to prevent damage to electrical components such as the laser head.
5. Install the unit horizontally. Installing the unit more than 30 degree vertically may result in worse performance.
6. To prevent electric spark, connect the positive pole first and then the negative pole.


#### Unit Installation

1. When installing the main unit in NISSAN vehicles, use the parts attached to the unit (see "■ NISSAN"). When installing the main unit in TOYOTA vehicles, use the parts attached to the vehicle (see "■ TOYOTA").
2. Wire as shown in "Wire Connection".
3. Reassemble and secure the unit in the dashboard and set the face panel and center panel.

### Mounting Screw Holes (Side View of the Main Unit)




NISSAN

 


TOYOTA

#### ■ NISSAN

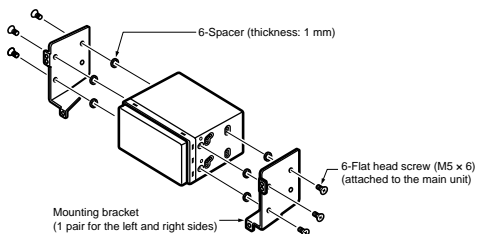

#### ■ TOYOTA

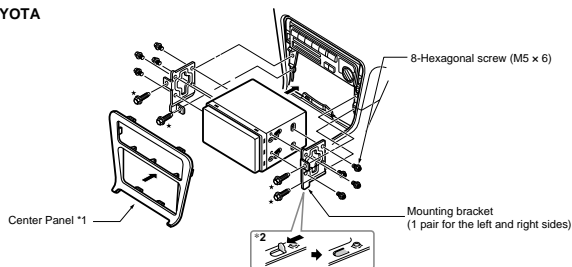

Screws marked ★ are included to the vehicle.

#### Note:

\*1 Some panel openings are too small for the unit depending on the vehicle type and model. In such a case, trim the upper and lower sides of the panel frame by about 0.5 to 1.5 mm so the unit can be inserted smoothly.

 
\*2 If a hook on the installation bracket interferes with the unit, bend and flatten it with a nipper or similar tool.

#### ■ Vehicles other than NISSAN and TOYOTA

In some cases the center panel may require modification. (Trimming, filling, etc.)

#### ■ Typical Mounting Brackets

In some cases the center panel may require modification. (Trimming, filling, etc.)



Example 1-3


Affix the screws to the ● mark.

#### Cautions On Wiring

- Be sure to turn the power off before wiring. Be particularly careful where you route the wires.
- Keep them well away from the engine, and exhaust pipe, etc. Heat may damage the wires.
- If the fuse should blow, check to see if the wiring is correct. If a fuse is blown, replace it with a new one of the same specification as the original.
- To replace the fuse, remove the old fuse of the power supply cord and insert the new one.



#### Note:

- There are various types of fuse holder. Do not let the battery side touch other metal parts.

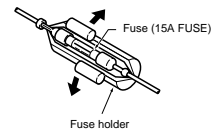

- After the connection, fix the cord by a clamp or insulation tape for protection.

## 6) Wiring and Connections

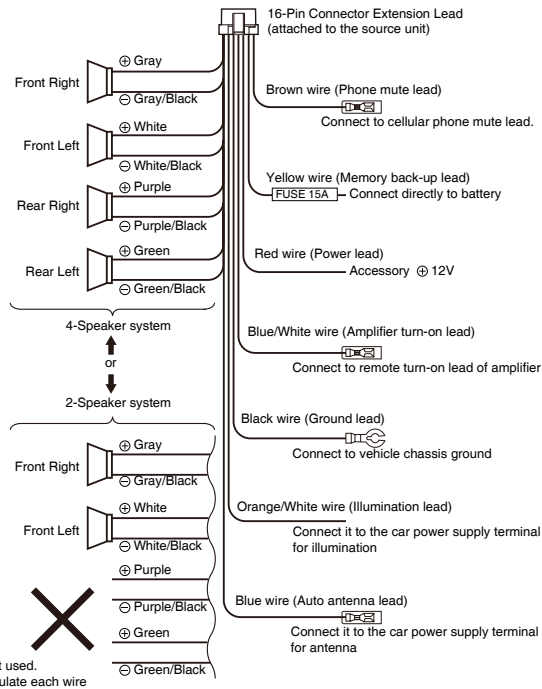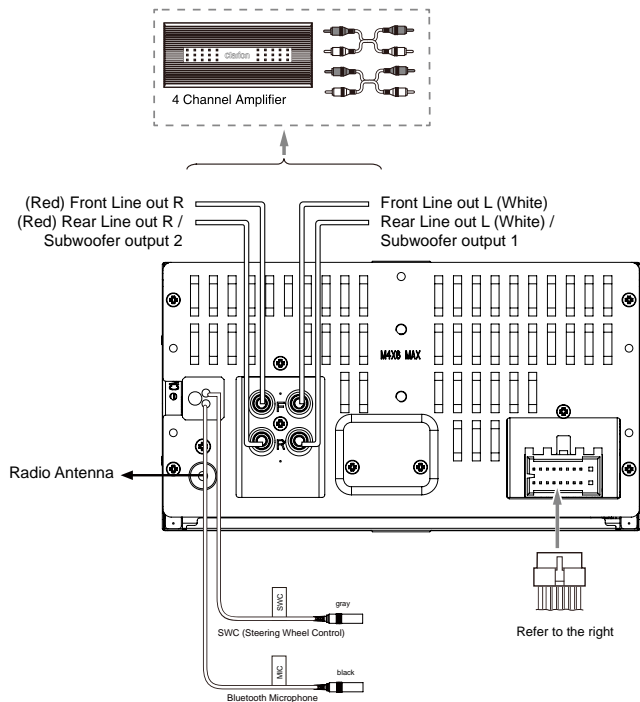

## 7) Connecting the accessories

### • Connecting to the external amplifier

External amplifiers can be connected to the 4 channel RCA output connections. Ensure that the connectors are not grounded or shorted to prevent damage to the unit.