

Flying Precautions

- Keep small parts out of the reach of children, to avoid choking hazard.
- 2. The **Flying Fox** is powerful, when taking off, move the throttle stick forward gradually, to avoid it's rising too fast.
- 3. After flight, turn off the **Flying Fox** first, then turn off the controller.
- 4.Do not put the battery in high temperature or near heat source
- 5. Note, to avoid injury or damage, the **Flying Fox** should not be flown nearer than 2 meters / 7 feet from people or other obstacles.
- 6.Children should fly the **Flying Fox** under adult supervision only. Always keep the **Flying Fox** in clear sight while flying.
- 7. Always turn off the power of the controller and **Flying Fox** when not in use.

Battery Protection `

- 1. The **Flying Fox** is equipped with low-voltage protection: When it's battery is low, the programmed control system will stop electrical supply to **Flying Fox's** rotors. The battery then needs charging to allow the **Flying Fox** to fly again.
- 2.The **Flying Fox** is equipped with over-current protection:When the copter blades are jammed, to prevent damage, the control system will stop electrical supply to rotors.

Maintenance

Trim fine tuning

Upward/downward

Leftside/rightside

Forward

Backward 🔷

O D

•

fine tuning

Downwar

Upward Γrim

Backward

Forward

Leftside


Rightside

Left spin

Right spin

- 1.Clean the **Flying Fox** with clean, dry soft cloth only.
- 2.To avoid irreparable damage, keep the **Flying Fox** dry and away from water.
- 3. Check the **Flying Fox** and accessories for damage. If damage is found, do not use the **Flying Fox** until it is repaired.

Battery Installation & Charging

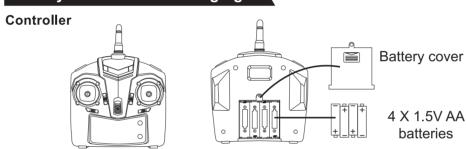

1. To install batteries: Open the cover of battery case, insert 4 X 1.5V AA batteries, according to indicated polarity. (batteries not included)

Battery installation should be done under adult supervision only! Do not mix old and new batteries. Do not mix different types of batteries.

↓ (L1)

-7-

Forward/backward


fine-tuning


Left/right spin

fine tuning

Charging


Connect the battery to the USB charging lead and connect to the USB to your computer, or powered USB port. Full charging time approx 90 mins.

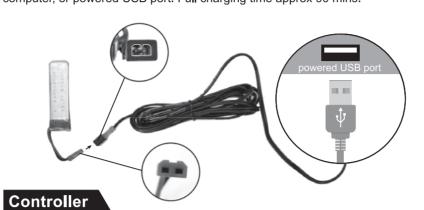

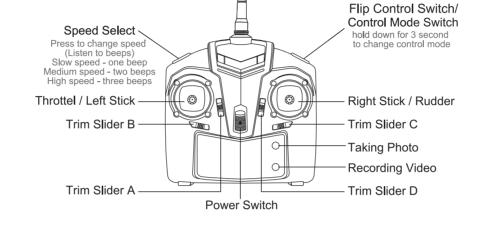



Drone

Replacing Damaged blades: Your set will come with 4 replacement rotors, two (A) type and two (B) type. You will see the "A" and "B" word on the canopy, put the rotor on the motor accordingly.

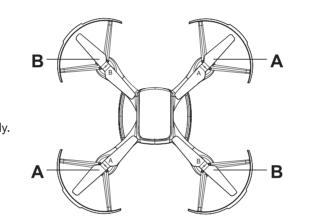

Operating steps

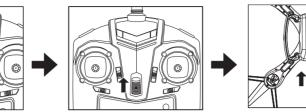

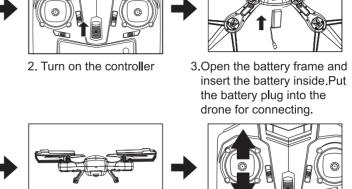

3. Turn on the **Flying** Fox (The LED light at a level position. on the drone flashes


4. Place the Flying Fox



controller connects to the Flying Fox (The LED light on the drone remains on) The Flying Fox is ready

MODE 2

Operation and Control

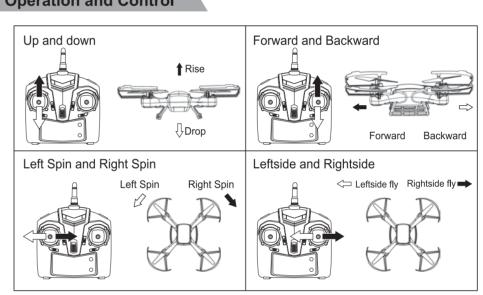

Note: When the aircraft is flying towards you, the control directions are reversed.

fine-tuning fine-tuning Left/right spin Leftside/rightside fine tuning fine tuning Downward Jpward Backward Backward **I** Forward Trim Leftside Trim Rightside Γrim Left spin Trim Right spin Trim **-**5-

Forward/backward

Instruction manual for **Flying Fox** camera function '

HOW TO INSTALL CAMERA AND REVIEWING PHOTOS/VIDEOS



Product Specifications

Max flight speed:

Max flight time:

Max tilt angle:

Charging time:

Max support:

Video resolution:

Photo resolution:

Remote frequency:

Remote controller:

Battery:

1.Insert the TF card CORRECTLY into the camera. 4GB card included.





• Operating ambient Temp: -10 ~ +50 degress C

• 4GB Micro SD card & Micro-USB reader included

2.Connect the camera to the drone.

3. Hang the camera on the drone.

20 km/h

10 mins

90 mins

3.6MP

35 degress

3.7V / 750mAh Li-Po


32GB Micro SD card

HD 1280 x 720P

2.4GHz (Max Range 120M)

4 x AA 1.5V (not included)

4.To view video and photos remove the Micro SD card from the camera. Place Micro SD card into Micro to USB adapter and place in USB port of your computer for download.

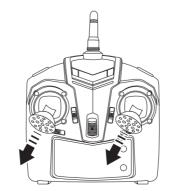

Do keep drones in your line of sight

Drones do's and dont's \

Trim fine tuning

Upward/downward

- Do fly drones only in daylight hours
- Do not fly drones less than 30m from people, boats, vehicles or
- Do not fly drones higher than 123m
- Do not fly drones over populated areas
- Do not fly drones within 5.5km of airfields
- Do get an unmanned operator's certificate for commercial drone use
- Do be aware that court-ordered penalties for drone misuse could

Technical Assistance

If you need assistance setting up or using your Aerpro Flying Fox product now or in the future, call Aerpro Support. Australia

TEL: 03 – 8587 8898

FAX: 03 – 8587 8866

Mon-Fri 9am - 5pm AEST

Please retain this user guide for future reference.




Radical Flips & Rolls

Flying Fox or transmitter.

You can perform flip with your **Flying Fox** in any of the speed settings. Press the control mode switch and then control the rudder


• Never try to repair circuitry, there are no serviceable electronic parts inside the

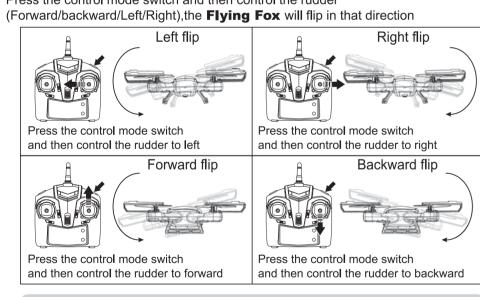

Before you perform a Flip Trick, always make sure you have enough space both above and below your **Flying Fox**.

MODE 4


Operation and Control

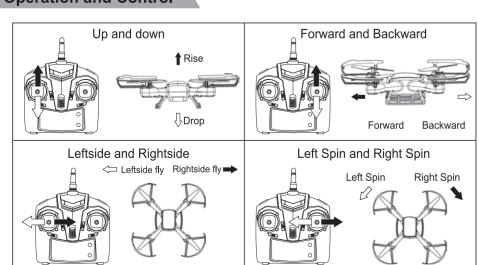

Note: When the aircraft is flying towards you, the control directions are reversed.


Radical Flips & Rolls

You can perform flip with your **Flying Fox** in any of the speed settings. Press the control mode switch and then control the throttle/rudder (Forward/backward/Left/Right),the **Flying Fox** will flip in that direction

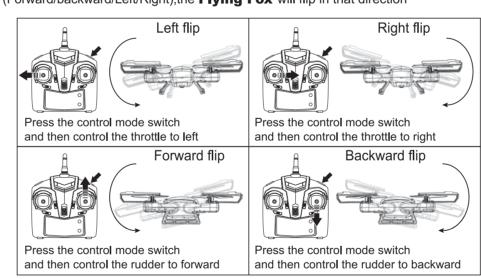

Before you perform a Flip Trick, always make sure you have enough space both above and below your **Flying Fox**.

Auto trim function(Mode 2 /Mode 4)

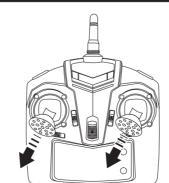

You can use the auto trimming feature of your **Flying Fox** in any speed setting. Angle both the throttle and rudder, down and to the left (as above) for 10 seconds. The light on the **Flying Fox** will flash rapidly, release both throttle and rudder and the light will remain on indicating auto trim success.

-10-