



Road Safety Guard



Instruction Manual





Thank you for purchasing HDDVR307 from our company.
In order to help you operate it correctly, please read this instruction carefully before using

Starting to use the car camcorder

Turning ON/OFF

Press  power button once to power on, blue light indicator is on;
Press  again to power off, blue light indicator is off.

Power ON/OFF indicator (Blue)

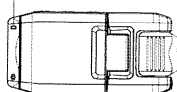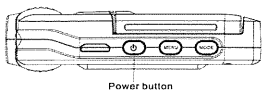


Attention: Low battery is displayed before shutting down.

Charging Batteries


There are 3 ways of charging the battery, Red light indicator is on while charging, full charge time is 180 minutes.

Red light indicator will turn off when fully charged.


1. Using the AC adaptor to charge battery

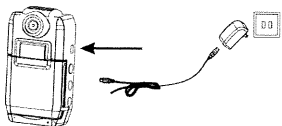

2. Using USB to charge battery

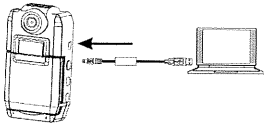

3. In-car battery charging

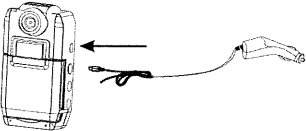

Product Features

- Very Portable, Can rotate 180°, 140°High Resolution A+ Wide Angle Lens
- 270° Swivel LCD Display, Convenient to take video/photo in different situations
- Built-in 1/4 inch low noise sensor, can capture clear images in low light environment.
- Day/Night Selectable modes

- Built-in simultaneous charging and recording mode.
- Built-in microphone/speaker
- Supports High capacity Micro SD card
- Anti-shake Mode
- Can record while driving.
- Continuous recording mode, Auto delete when recording new file.
- Auto power on when starting car, auto power off when car is off.
- With delayed turn on function.
- Can still record while LCD is off

Product Specification

LCD Display	2.0 LTFS (4:3)
Lens	140°A+ High Resolution Wide Angle Lens
Language selection	1) English 2)Traditional Chinese 3)Simplified Chinese 4)Japanese 5)Russian
Video resolution	VGA/D1/HD (1280x720)
Video format	AVI
Image resolution	VGA
Image format	JPG
Memory card	Micro SD
Microphone/Speaker	Yes
LED light	Dual super bright LED
TV mode	PAL/NTSC
Frequency	50HZ/60HZ
USB Port	USB2.0
Power input	5V 500MA
Battery	Rechargeable Li-ion

Accessories:

- 1) In-car charging cable
- 2) Charger (Optional)
- 3) In-car arm stand
- 4) USB cable
- 5) User Manual
- 6) CD (Optional)

▶ Video and Photo playback

▶ Video Playback

1. Press UP/DOWN key to select the desired file for playback
2. Press OK key to start/stop the video playback

▶ Image Playback

Press UP/DOWN key to select desired image file for playback


Playback option setting

While playback press MENU key to enter Playback option setting:

1. Delete: Press OK key to select action Single/All/Select File
2. Minimize image: Print images thumbnail
3. Audio: Can set volume during playback

▶ Connect to PC

Downloading Videos and Images

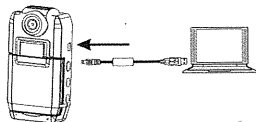


1. After USB cable is connected to computer, LCD display turns MSDC
2. Computer will automatically detect the Micro SD card drive.
Attention: System requirements: Windows 2000/XP/Vista/Windows 7, MAC OS x 10.3.6 or above.
3. Browse or manage files through computer.
4. Unplug the USB cable turn the device off.

Remarks: If device crashes during usage, press the RESET button and restart.

▶ Placing the Micro SD card

Please the Micro SD card into the memory card slot according to the image below, press it until you hear a click sound.

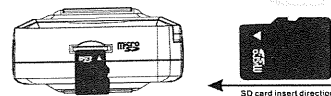


Removing Micro SD card: Press it once and remove it after it pops up.

▶ Rotating the LCL display


90° Left will open the LCD display; LCD display can also rotate 90° down.

LCD display can rotate 180° towards lens.

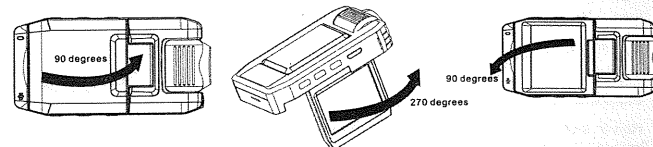


▶ Rotating Lens

Lens can also rotate 180° as show on images below.

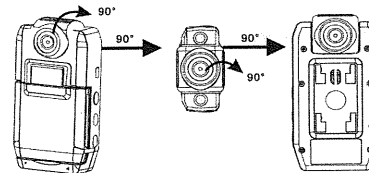

▶ Product Quick manual

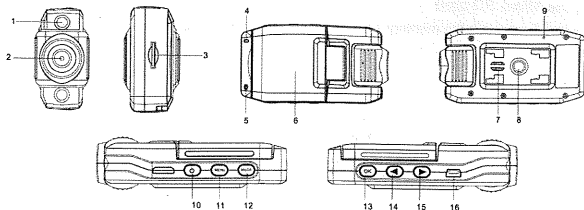

- 1) LED Light 2) Lens 3) Micro SD card slot
 4) Power indicator (Blue)/Charging indicator (Red)
 5) Microphone 6) LCD display 7) Speaker
 8) In-car arm stand socket 9) Reset button 10) Power button
 11) MENU button 12) MODE button 13) Confirm (OK) button
 14) Down key 15) Up key 16) USB port

▶ **Basic Driving recorder:**

▶ **How to switch between video, photo, playback modes.**
 Press MODE to switch modes.

▶ **How to enter setting mode**

Press MENU once, press MENU key again, enter "System Setting" option, a blue background will be displayed.

Format: Format Micro SD card (this action will delete all data stored in the Micro SD card)

Language setting: 1) English 2) Traditional Chinese 3) Simplified Chinese 4) Japanese
 5) Russian

Reset System settings: Cancel/ Proceed

Frequency: 50Hz/60Hz

Date setup: Set Date/Time

▶ **How to record video and enter setup**

▶ **Shooting videor setup**

Press OK to start recording, press it again to stop.
 Press 'UP' button to switch on LED light in low light conditions.

▶ **Video option settings**

Press MENU key, enter video option setting

Image size: (VGA/D1/HD (1280*720)

Time display: ON/OFF

Auto recording: ON/OFF

Audio recording: ON/OFF

Recording time: 2min/5min/15min

▶ **How to enter photo setting option**

▶ **Taking photo**

Press OK key to take photo

Photo shooting setup option

Press MENU key, Enter photo shooting setup option

Image resolution: VGA

▶ **Manage Files**

1. Press MODE key to enter File Management mode

2. There are 2 types of files – Video playback, Image playback

3. Most recent file will be displayed on LCD.

For example: If your last action was photo shooting, the photo will be displayed on LCD.