



SMS Commands

Here is a list of all of the SMS commands you can send to the tracker as an SMS. Please remember that all commands are case and grammar sensitive, please type exactly as shown. Ensure to add spaces in the commands where indicated. All SMS commands will assume the default password and may use generic details for the example. Some commands might have modifier text, this will be explained in the notes column for each command.

FUNCTION	COMMAND SMS	REPLY MESSAGE	NOTES
Admin - User Phone Number	admin123456 0491570110	admin ok	Replace "0491570110" with the number of your phone, the one you use to configure the tracker.
Admin - IP address	adminip123456 043.249.029.060 7700	admin ok	This is the IP address that the tracker will connect to on the internet.
APN Set	apn123456 connect	apn ok	Substitute "connect" for your provider's APN.
Time Zone Set	timezone123456 -10	timezone ok	Substitute "-10" for your local GMT time. Negative numbers require a "-", positive number need no sign.
Password Change	password123456 654321		Substitute "123456" for your current password. Substitute "654321" for the new one. The password must be six digits long.
Parameter Query 1	param1	[parameters]	This contains your IMEI and current IP among other information.
Parameter Query 2	param2	[parameters]	
Status Query	status	[status info]	
GPRS Query	gprs123456	gprs ok	This indicates the tracker's Data connection is working or not.
Sleep Mode - Time	sleep123456 time	sleep time ok	
Sleep Mode - Shock	sleep123456 shock	sleep shock ok	
Sleep Mode - Off	sleep123456 off	sleep off ok	
Restart	rst		Reboots the tracker.
Format	format	The tracker will immediately restore factory settings...	Used to restore all tracker settings to default. The tracker will need to be configured again from blank.
Tracker Mode	tracker123456	tracker ok	Puts the device in "Tracker Mode"
Monitor Mode	monitor123456	monitor ok	Puts the device in "Monitor Mode"
Arm	111		Arms the tracker.
Disarm	000		Disarms the tracker.
Immobilise Vehicle	555	cut oil ok	This triggers the relay (optional) in the system to immobilise the vehicle.
Mobilise Vehicle	666	resume oil ok	Releases the relay trigger.
Location Query	where	[google maps link]	Replies with a google maps link of the current tracker location.
Geofence Input	stockade123456 long, lat; long, lat ...	stockage ok	Sets up a geofence between two or more coordinates. For example; stockade123456 114.116500e, 22.600000n; 114.117000e, 22.650000n Use a ";" between each set of long & lat.