

Storage/MicroSD Cards

This camera is compatible with 8GB, 16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

Charging the Battery

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light remains ON while the battery is charging.
3. The Charging Status Light will turn OFF when the battery is fully charged.

Charging time: 3.5 hours



G1080SP User Manual

 
 
 


**FULL HD 1080P
WATERPROOF
SPORTS CAM**

2.0" Screen



Features

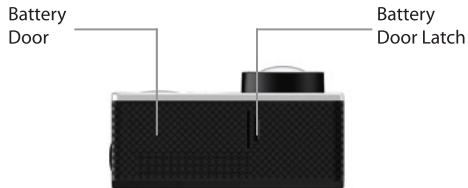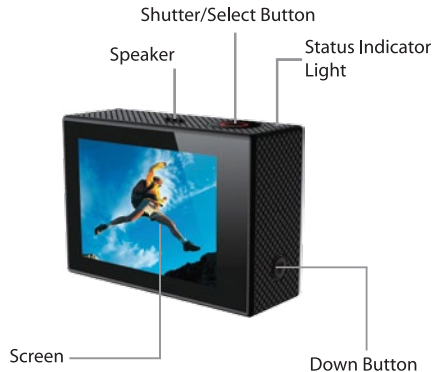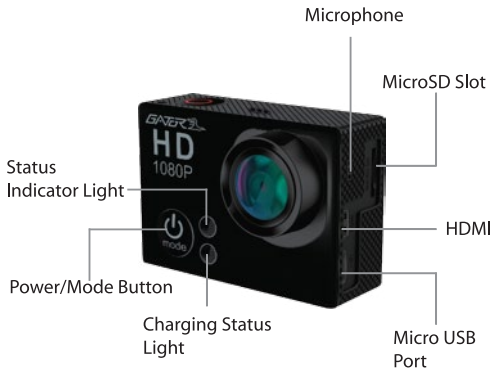

Technical Assistance

If you need assistance setting up or using your Gator product now or in the future, call Gator Support, Australia Support Australia.

 
TEL: 03 – 8587 8898 FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST

Please retain this user guide for future reference.



Waterproof Housing

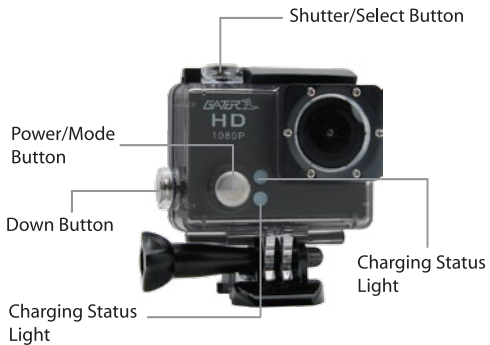

Note: Camera is not waterproof until placed securely in Waterproof housing

Accessories



Waterproof Housing



Handle Bar/
Pole Mount



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Mount 7



Clip 1



Clip 2



Helmet
Mounts



Bandages



Battery



Adhesives



Tethers



Protective
Backdoor



USB Cable



 
 
 
 
 
 
Car Charger



Lens Cloth

Mounting Your Camera

Attach your camera to helmets, gear and equipment.

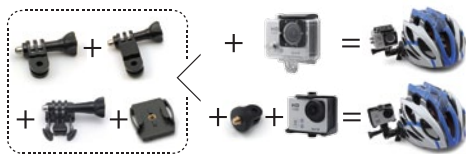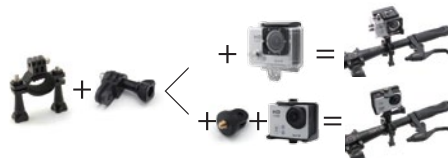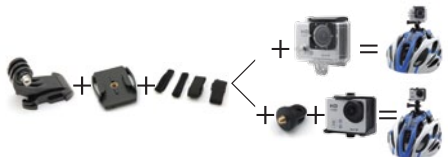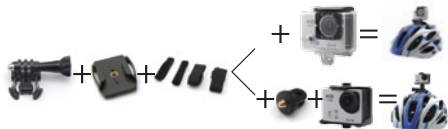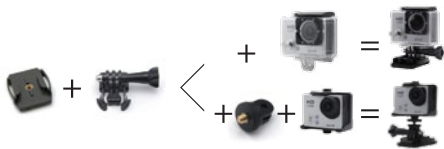

Hello

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

Getting Started

Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes.

1. Video (1080p 30fps/ 720p 60fps)



Record Video

2. Playback (Event, Video or JPEG)



View your videos and photos on the screen

3. Settings (Video Settings, Photo Settings, and System Settings)

Repeatedly press the Shutter/Select Button to cycle through three settings. Use the Up or Down Button to cycle through the Settings options and press Shutter/Select to select desired option.

a. Video Settings:



1) Movie Size: 1080p 30fps or 720p 60fps

MicroSD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins

- 2) Loop Record: On/Off
- 3) Date Stamp: Off/Date/Date & Time
- 4) Exposure:
+-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

b. Photo Settings:



- 1) Resolution: 12M/8M/5M/2M
 - 2) Single Shot: On/Off
 - 3) Burst Photo (3 Photos): On/Off
 - 4) Selftimer: Off/ 5 Seconds/ 10 Seconds
 - 5) Time Lapse: 2, 3, 5, 10, 20, 30 or 60 second intervals.
- Shoot a series of photos at set time intervals

c. System Settings:



- 1) Sounds: On/Off, Start-up 1/2/3/None, Beep On/Off, Volume 0/1/2/3
- 2) Power Frequency: 50Hz/60Hz/Auto
- 3) Panel Protect (Screen Saver): Off/1 mins/3 mins/5 mins
- 4) Power Save: Off/1 mins/3 mins/5 mins
- 5) Date & Time: YY/MM/DD
- 6) Language: English/Simplified Chinese/ Traditional Chinese/ France/ Spanish/ Italian/ Portuguese/ Dutch/ Polish/ Russian/ Japanese
- 7) Format: No/Yes
- 8) Rotate 180°: On/Off
- 9) Reset All: No/Yes
- 10) Version

Capturing Video + Photos

Press the Shutter/Select Button to start/stop recording. Press the Down/Shutter Button to take a picture. You can also change video and photo settings in the Settings menu.