

Technical Assistance

If you need assistance setting up or using your Gator product now or in the future, call Gator Support.

Australia

TEL: 03 – 8587 8898

FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST

Please retain this quick start guide for future reference.

If you would like to download a more detailed function manual, or other Gator manuals/software, please visit the <http://gatordriverassist.com> website and click on 'Firmware & Manuals' for information on where to find the manuals/software.

This manual is considered correct at time of printing but is subject to change.

For latest manuals and updates refer to the website.



Quick start guide



HD 1080P

ACTION CAMERA



1.5-inch
LCD



140°
Wide Angle
Lens



Resolution

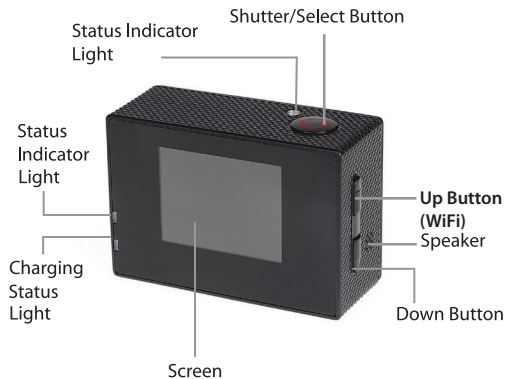


Waterproof
to 30m



1.5 Hours

Features










Waterproof Housing

Accessories



Note: Camera is not waterproof until placed securely in Waterproof housing

		
Waterproof case	bicycle stand	base 1
		
Fixed base	switch support 1	clip
		
Helmet base	bandage	adapter
		
Charge/Data cable	Quick start guide	

Thank you for purchasing the Gator GC100. This Quick Start Guide will help you learn the basics of using the action camera. For a more detailed manual please refer to our website at www.gatordriverassist.com

Inserting Micro SD Card

Note: Please choose a branded Micro SD card and format it on computer before use. The camera supports up to 32GB, Class 10 (Non Ultra).

Installing and removing battery

1. Slide latch across and lift battery cover up to open.
2. Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on the battery until it's in place.
3. Replace cover
4. To remove battery pull battery door latch upwards

Charging

1. Charging can be done by either connecting the camera to a computer or power adapter (not included)



Getting Started

Press & hold the mode button on the front of the camera for 3 - 5 seconds to turn it on. Press the mode button to cycle through camera modes.

1. Video mode- to record video
2. Photo mode- to take pictures

3. Playback mode- to view videos and pictures
4. Setup menu.

Video mode

When in recording mode symbol  is displayed on top of screen, press  red shutter button to start and stop recording. A red circle appears next to this symbol and flashes whilst recording.

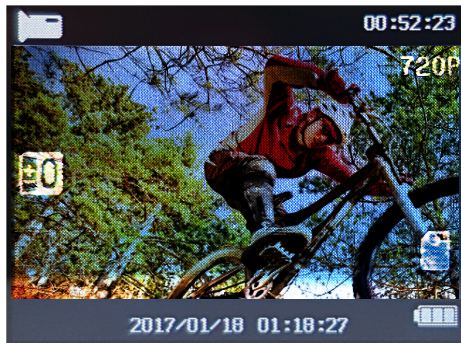


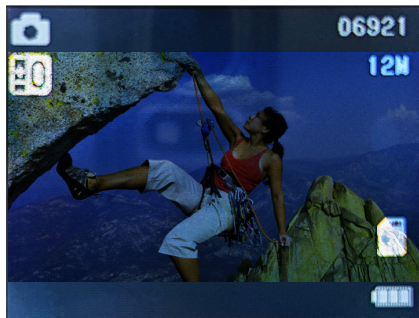



Photo mode

When in photo mode  symbol is displayed on top of screen, press  red shutter button to take a picture.



Playback mode

Use the up & down buttons to cycle through video and picture taken on the device. Press the  red shutter button to select & play. For file storage & playing after you are done recording, use a the USB cable provided to export the videos and pictures onto a computer to play. Or you can take the Micro SD card out and access the image data with a card reader.



Setup Menu

Press the up and down buttons on the side of the camera to cycle through setup settings. Press the shutter button to select setting. Use up and down arrows to select sub setting and press shutter button to confirm selection.

Video Resolution:

1080P @ 30 FPS, 720P @ 30 FPS, VGA

Loop Recording:

Off, 1 Min, 3 Mins, 5 Mins or 10 Mins

Exposure:

+2/3, +1/3, +0/0, -1/3, -2/3, -1/0, -4/3, -5/3 or -2/0

Picture Resolution:

12M, 10M, 8M, 5M, 3M, 2M, 1.3M & VGA

Record Audio

Off/On

Date/Time:

Year/Month/Day

Time

Format

Auto Power off:

Off, 1 Min, 3 Mins, 5Mins

Language:

English, Chinese, French, Dutch, Italian, Portuguese, Russian, Spanish,

Frequency:

50Hz - 60Hz

Screen LCD Saver:

Off, 3 Mins, 5Mins

Vehicle:

Off/On

Format:

All data will be deleted

Cancel/OK

Default Setting

Return menu setting to defaults

Cancel/OK

Date Stamp

Off/On

Delete:

Delete Current

Delete All

Cancel/OK

Protect:

Lock Current

Unlock Current

Lock All

Unlock All

Cancel/OK

Volume:

0-7

Version:

firmware version

Micro SD Cards:

This camera is compatible with 8GB, 16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

Charging the battery:

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light remains ON while the battery is charging.
3. The Charging Status Light will turn OFF when the battery is fully charged.

Charging time: 3.5 hours

Specifications

CPU: GP1247

Sensor: GC1024

Lens:

140 degrees

Screen:

1.5" LCD screen

Video/Compression format:

MP4/H.264

Video resolution:

1080P HD @ 30 FPS

720P HD @ 30 FPS

Picture format:

JPG

Picture resolution:

12MP 4032 x 3024

Storage format:

Micro SD card Class 10 Up to 32GB (Non Ultra)

Waterproof:

30M with case

Audio frequency:

Stereo

Battery:

Rechargeable 3.7V/900mAh Li-ion

Battery autonomy: 90 Minutes

Operating system: Windows XP/ Mac OS

