

Technical Assistance

If you need assistance setting up or using your Gator product now or in the future, call Gator Support.

Australia

TEL: 03 – 8587 8898

FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST

Please retain this quick start guide for future reference.

If you would like to download a more detailed function manual, or other Gator manuals/software, please visit the <http://gatordriverassist.com> website and click on 'Firmware & Manuals' for information on where to find the manuals/software.

This manual is considered correct at time of printing but is subject to change.

For latest manuals and updates refer to the website.



Quick start guide

GATOR

WiFi

GC300

 
 
**4K ULTRA HD WIFI
ACTION CAMERA**

4K
ULTRA HD




**Waterproof
30M**

Features

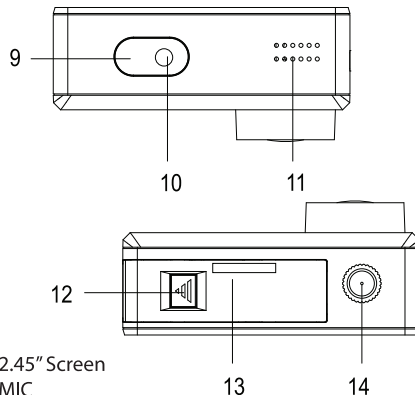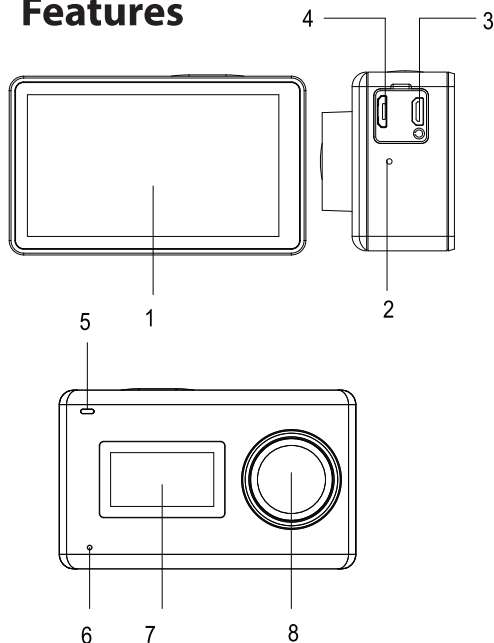

- 1. 2.45" Screen
- 2. MIC
- 3. HDMI Out (Cable not included)
- 4. USB
- 5. LED Indicator
- 6. MIC
- 7. Front info display
- 8. Camera
- 9. Shutter/ON/OFF
- 10. Video Indicator
- 11. Speaker
- 12. Battery switch
- 13. SD card slot (open the battery compartment)
- 14. Standard 1/4" thread for mounts

 Waterproof Housing

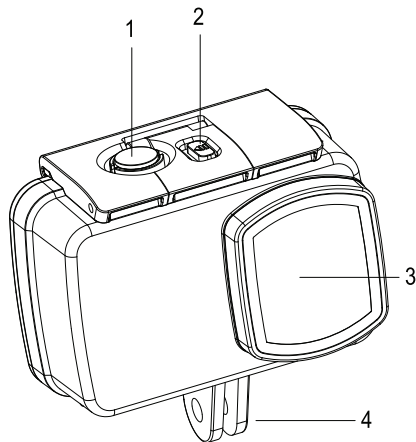

- 1. Shutter/ON/OFF
- 2. Case security lock
- 3. Camera
- 4. Bracket mount

Note: Camera is not waterproof until placed securely in Waterproof housing

 
Included Accessories



Thank you for purchasing the Gator GC300. This Quick Start Guide will help you learn the basics of using the action camera. For a more detailed manual please refer to our website at www.gatordriverassist.com


Inserting Micro SD Card

This camera is compatible with 8GB, 16GB, 32GB and 32GB Micro SD, Micro SD HC and Micro SDXC memory cards. **Note:** Please choose a branded Micro SD card and format it on computer before use. The camera supports up to 32GB, Class 10 (Non Ultra). For 64GB (2K,4K recordings) requires Ultra 1 Class 10 card. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

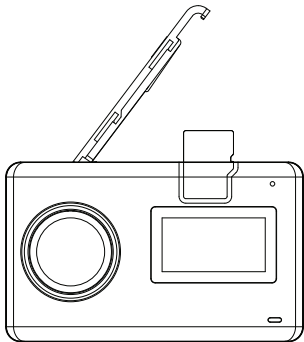

Installing and removing battery

1. Press the battery switch down and slide cover outwards. Cover will lift upwards.
2. Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on the battery until it's in place.
3. Replace cover
4. To remove battery pull battery tab upwards

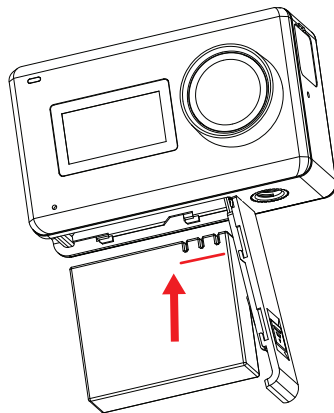

Micro SD Cards:

This camera is compatible with 8GB - 64GB Micro SD, Micro SD HC and Micro SDXC memory cards. You must use a Micro SD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

Charging the battery:

1. Connect the camera to a computer or USB power supply with cable supplied.
2. The charging LED indicator light turns red while the battery is charging.
3. The charging LED indicator light will turn off when the battery is fully charged.
4. Charging battery icon flashes on front and rear screen when the camera is turned on.
5. Charging time is approx 3.5 hours

Note: If recording is occurring when the battery reaches 0% the camera will save the file and power off.

* Spare batteries, model number (GCBAT2) can be purchased separately. Contact Gator Support

Getting Started

Press & hold the shutter ON/OFF button on the top of the camera for 3 - 5 seconds to turn it on or off. The GC300 is a touch screen model allowing you to change settings by simply touching the rear screen.

Mode settings

Touch the bottom of the rear screen to access 9 shooting modes. Select the shooting mode and click on the right lower corner settings icon to enter the settings for this mode. For each mode the settings will differ. Press the X icon to exit settings.

1. Normal Video
2. Time-lapse record
3. Slow motion
4. Normal photo
5. Photo Lapse
6. Sequence
7. Video+Photo
8. Car mode
9. Aqua mode

Video mode

When in recording mode a video camera symbol is displayed on top left of screen and a red circle ● appears next to it. Press the shutter button to start and stop recording. The shutter button and the circle on the screen now flashes red and a counter appears whilst recording.



Photo mode

When in photo mode a camera symbol is displayed on top left of screen , press the shutter button to take a picture. A counter appears showing the amount of pictures you can take with the available memory left on the Micro SD card.



Playback mode

In the bottom left corner, press the play icon. Press the arrow buttons to choose files. Press the play button icon to play the footage. Press the pause icon to pause. Press the return icon to exit. For file storage & playing after you are done recording, use a the USB cable provided to export the videos and pictures onto a computer to play. Or you can take the Micro SD card out and access the image data with a card reader.



Camera Mode Settings

Resolution:

4K 24FPS, 2K 30 FPS, 1080P 60 FPS, 1080P 30 FPS, 720P 120 FPS, 720P 60FPS, 720P 30 FPS, WVGA 30 FPS, VGA 240 FPS, VGA 30 FPS & QVGA 30FPS

Field of view:

Wide, Medium, Narrow

WDR:

Off/On

Stabilisation:

Off/On

Loop Recording:

Off, 3 Mins, 5 Mins or 10 Mins

Record Audio:

Off/On

Date Stamp:

Off/On

Sharpness:

Strong, Normal, Soft

White Balance:

Auto, Daylight, Cloudy, Tungsten, Fluorescent

Colour:

Color, Black & White, Sepia

ISO:

Auto, 100, 200, 400, 800, 1600

Time-lapse record:

Off, 1 Second, 5 Seconds, 10 Seconds, 30 Seconds,
1 Minute

Slow motion:

Off, -2x, -4x, -8x

Exposure:

+2.0, +5/3, +4/3, +1.0/ +2/3, +1/3, +0/0, -1/3, -2/3, -1.0,
-4/3, -5/3, -2.0

Quality:

Fine, Normal, Economy

Self Timer:

Off, 2S timer, 5S timer, 10S timer, 20S timer

Resolution Image:

16M, 14M, 12M, 10M, 8M, 5M, 3M, VGA

Burst:

Off, Burst 3, Burst 5, Burst 10

Photo Lapse Time:

Off, 5 Seconds, 10 Seconds, 30 Seconds, 1 Minute

Car Mode:

Will automatically start recording when camera is
turned on

Settings**Power On Mode:**

Access shooting modes

Auto Recording:

Off/On

Date/Time:

Year/Month/Day

Time

Language:

English, French, Spanish, Portuguese, Dutch, Italian,
Chinese, Russian

Auto Power off:

Off, 1 Min, 2 Mins, 3 Mins, 5 Mins, 10 Mins

Beep Sound:

Off/On

Frequency:

50Hz - 60Hz

Fisheye Setting:

Off/On

Screen Saver:

Off, 1 Min, 3 Mins, 5 Mins

Image Rotation:

Off/On

Format:

All data will be deleted

Cancel/OK

Default Setting

Return menu setting to defaults

Cancel/OK

 
Version

Software/Firmware version

Shortcut Menu

Slide your finger down from the top of the screen to display shortcut menu functions & up to exit.

1. Wifi ON/OFF
2. Wireless remote control
3. Screen lock
4. Shutdown

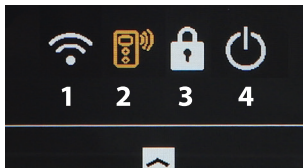

Downloading the APP

Search **OKCAM** from the APP Store or Play Store depending on your Smart phone OS and download to use as the Smart phone interface.



For Pairing:

Access the shortcut menu and select the WiFi Symbol. SSID (Gator Action Cam) and password (12345678) will be displayed. This can be changed in the App Setup menu. Turn on your WiFi on your Smart Phone and search for the SSID name. Once your Smart Phone finds the SSID name select connect on your phone and enter the password on the camera to pair.

Specifications

CPU: Novatek96660

Sensor: Sony IMX078

Lens: 170 degree A+ High resolution wide angle

Screen: 2.45" LCD touch screen

Video/Compression format: MP4/H.264

Video resolution:

4K 24FPS, 2K 30 FPS, 1080P 60 FPS, 1080P 30 FPS, 720P 120 FPS, 720P 60FPS, 720P 30 FPS, WVGA 30 FPS, VGA 240 FPS, VGA 30 FPS & QVGA 30FPS

Picture format: JPG

Picture resolution: 16M/14M/12M/10M/8M/5M/3M/2M

Storage format: Micro SD card Class 10 Up to 64GB (Non Ultra)

USB: Micro 5 pin 2.0USB

Waterproof: 30M with case

Audio frequency: Stereo

Battery: Rechargeable 3.7V/1000mAh Li-ion

Battery autonomy: 70 Minutes

Measurements: 65*39*21.5mm

Weight: 88g

Languages: English, French, German, Spanish, Italian, Portuguese, Simple Chinese, Japanese, Traditional Chinese, Russian

Operating system: Windows XP/ Mac OS

Wireless Remote Control

1. Switch screen (press to turn screen display ON/OFF)
2. Photo key (press once to take a picture)
3. Video key (press once to record video, press again to stop)
4. USB charging port (USB cable supplied for charging)

