


CE4K MCU Update guide

Note: When updating, power supply can't be off!

1. Decompress the MCU file (**mcurom.bin**) and copy several mp3 file to an empty Udisk(format it with FAT32 in advance) **root directory**.

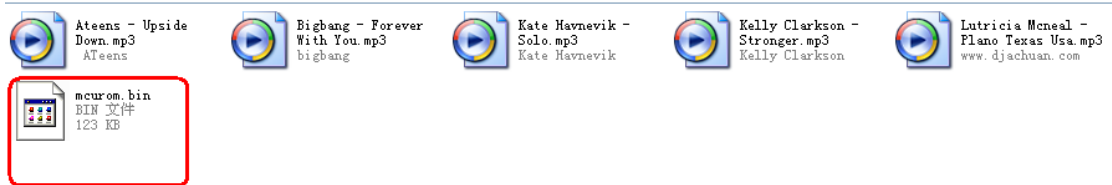


2. Power on the unit, with using 12V voltage, which can support 2.5A or upper current . Before update, make sure Parking should be set to “Off.”



3. Then insert the Udisk to the USB slot with the unit showing below main menu.



4. The program will update automatically as the following picture:

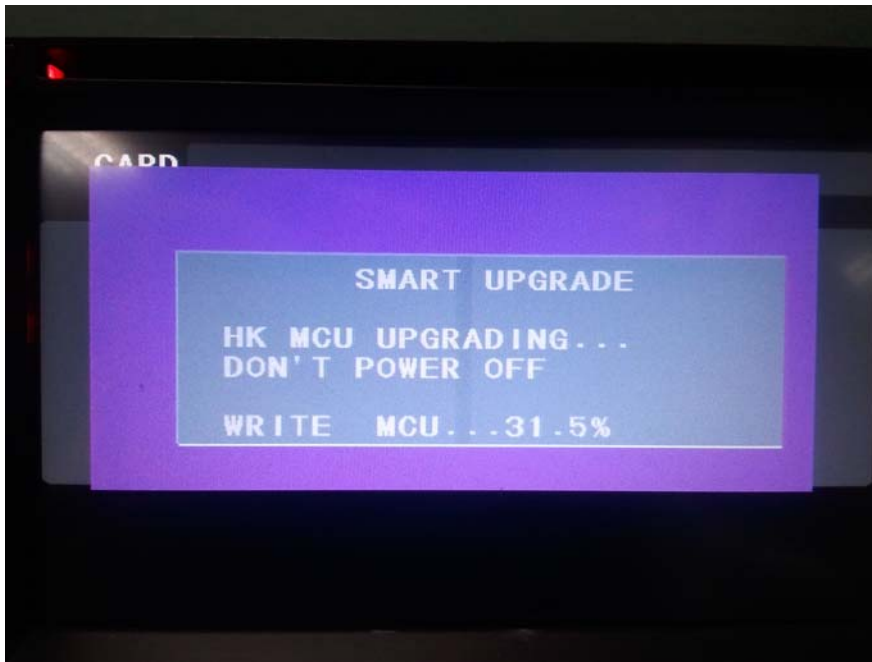

5. About 50 seconds, it will update complete, the unit will reset automatically. Please pull out the U-disk before the unit enters the system. (If really delay to pull out the U-disk please wait for the second updating, **don't put out the U-disk or power off the unit till update complete**)

-----END-----