

Always there to help you

Register your product and get support at
www.philips.com/welcome








CE162



User manual	1	Mode d'emploi	25
Benutzerhandbuch	51	Manual del usuario	79
Gebruiksaanwijzing	105	Manuale utente	131

     
PHILIPS





Contents


1	Safety	2	8	Listen to an external player	17
2	Your car audio system	3	9	Adjust sound	18
	Introduction	3			
	What's in the box	3			
	Overview of the system	4			
3	Install the car audio system	6	10	Enjoy features with AppsControl application	18
	Connect wires	6		For first time use	18
	Mount into the dashboard	7		Check the Bluetooth connection status	19
	Attach the front panel	8		Use the AppsControl application	19
4	Get started	9	11	Additional information	20
	For the first time use	9		Dimmer	20
	Set the time format	9		LCD Color	20
	Set the clock	10		Reset the system	21
	Select a source	10		Replace the fuse	21
	Select a listening zone	10	12	Product information	21
	Mute the button beep	10	13	Troubleshooting	22
5	Listen to radio	11		General	22
	Select a tuner region	11		About the Bluetooth device	22
	Select a tuner sensitivity	11	14	Notice	23
	Search for a radio station	11		Compliance	23
	Store radio stations in memory	11		Care of the environment	23
	Play with RDS	12		Trademark notice	24
6	Play from a storage device	14		Copyright	24
	Control play	14			
	Switch tracks	15			
7	Use Bluetooth devices	15			
	Connect a device	15			
	Play audio from a Bluetooth device	16			
	Make a call	16			

 

1 Safety

Read and understand all instructions before you use this device. If damage is caused by failure to follow instructions, the warranty does not apply.

 - Modification of the product could result in hazardous radiation of EMC or other unsafe operation.
- The device is designed for negative ground (earth) 12V DC operation only.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuits, do not expose the device to rain or water.
- The device shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles).
- Never insert objects into the ventilation slots or other openings on the device.
- Clean the device with soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the device.



2 Your car audio system

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Versions: V4, V7, V8, V9 (L1 and L2)
Sampling frequencies: 44.1 kHz, 48 kHz
Bitrates: 64-192 kbps and variable bitrates

- ID3 tag V2.0 or later
- **Unsupported files:**
AAC, WAV, and PCM files
DRM protected WMA files (.wav, .m4a, .m4p, .mp4, and .aac)
WMA files in lossless format

Introduction

With this system, you can:

- enjoy audio from a USB storage device, SD/SDHC card, iPod/iPhone, and external player;
- charge your iPod/iPhone,
- listen to radio stations, and
- make phone calls via Bluetooth.
- wireless control via Car app.

You can enrich sound output with these sound effects:


- Dynamic bass boost (DBB)
- Digital sound control (DSC)

Playable media:

- USB storage device
 - Compatibility: USB 2.0, USB 1.1
 - Class support: MSC (Mass Storage Class)
 - Maximum capacity: 32 GB
- SD/SDHC card
 - Maximum capacity: 32 GB
- Files
 - File system: FAT16, FAT32
 - Maximum number of folders: 99
 - Maximum number of tracks/files: 999
 - Maximum level of directory: 8
 - .mp3 files
Sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
Bitrates: 8-320 kbps and variable bitrates
 - .wma files



What's in the box

Check and identify the contents of the package:

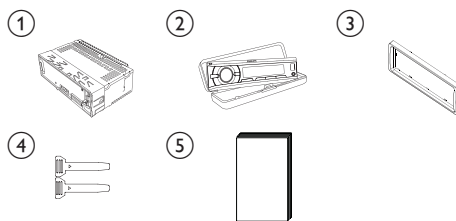

- ① Main unit (with a sleeve)
- ② Carrying case (with front panel included)
- ③ Trim plate
- ④ Disassembly tool X 2
- ⑤ User manual

Overview of the system

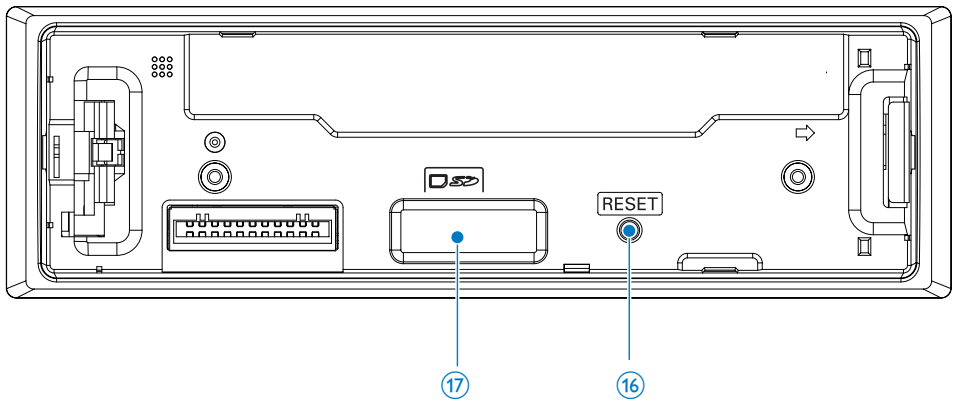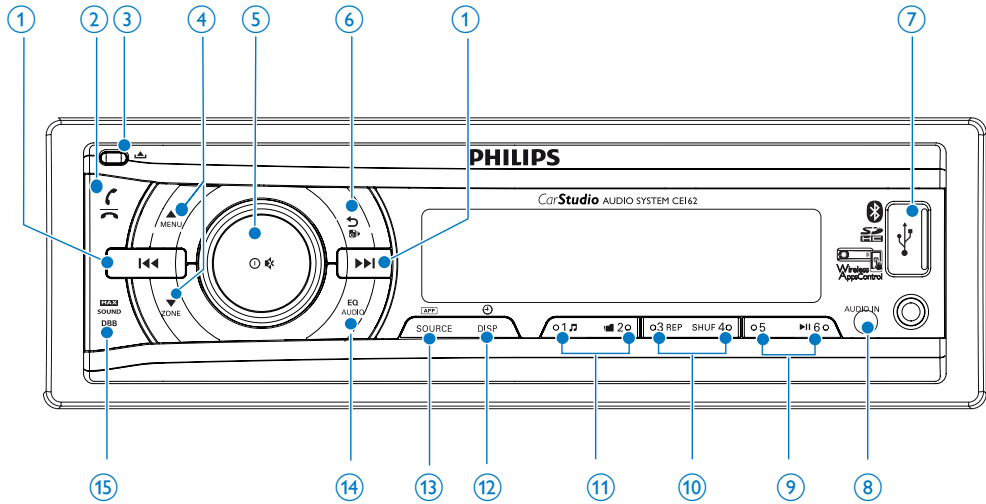

① ◀▶

- Tune to a radio station.
- Press to skip to the previous/next track.
- Press and hold to rewind a track or search fast forward.

② ☎

- Press to answer or redial a call.
- Press to hang up a call.

4 EN

 
- Press and hold to reject an incoming call.






 






③ 🔒

- Unlock the front panel.

④ ▲ / ▼

 - For .wma and .mp3 tracks on a storage device, press to select the previous folder.
- Press and hold to access the system menu.



- Press to select a tuner band.
 - Press and hold to switch music listening zone.
- ⑤  
- Press to turn on the system.
 - Press and hold to turn off the system.
 - Press to mute or restore sound.
 - Press to confirm an option.
 - Rotate to switch between menu options.
 - Rotate to adjust the volume level.
- ⑥  / 
- Return to previous menu.
 - Press and hold to save the location of the speed camera.
- ⑦ 
- Connect to a USB storage device.
 - Connect to a compatible iPod/iPhone.
- ⑧ **AUDIO IN**
- Connect to the audio output socket (usually the headphone socket) of an external device.
- ⑨  / 
- Start, pause, or resume the play of tracks.
 - In radio mode, press to select the preset radio station of No. 5 and 6.
 - In radio mode, press and hold to store the current radio station at channel No. 5 and 6.
- ⑩ **3 REP / SHUF 4**
- In radio mode, press to select the preset radio station of No. 3 and 4.
 - In radio mode, press and hold to store the current radio station at channel No. 3 and 4.
 - For .wma and .mp3 tracks, press repeatedly to select a play mode: play all tracks randomly (**[SHU ALL]**), play tracks in the current folder or album randomly (**[SHU FLD]**/**[SHU ALBM]**), or play all tracks in sequence (**[SHU OFF]**).
 - For .wma and .mp3 tracks, press repeatedly to select a repeat mode.
- ⑪  / 
- In radio mode, press to select the preset radio station of No. 1 and 2.
 - In radio mode, press and hold to store the current radio station at channel No. 1 and 2.
 - For .wma and .mp3 tracks on a storage device, press to access the folder list.
 - For .wma and .mp3 tracks on a storage device, press to access the track list.
- ⑫  / **DISP**
- Press repeatedly to display available information about the current track.
 - Press repeatedly to display available RDS information.
 - Press and hold to display the set clock.
- ⑬ **APP/SOURCE**
- Press repeatedly to select a source.
 - Press and hold to access **AppsControl** application after the Bluetooth is successfully connected with the smart phone.
- ⑭  EQ AUDIO
- Press repeatedly to select a preset sound equalizer.
 - Press and hold to activate the setup of bass, treble, balance, and fader.
- ⑮  VOL
- Press to enable or disable the maximum volume.
 - Press and hold to enable or disable the DBB (dynamic bass boost) sound effect.
- ⑯ **RESET**
- Press to reboot the system.
- ⑰ **Slot for SD/SDHC card**
- Insert an SD/SDHC card.

3 Install the car audio system

! Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

These instructions are for a typical installation. However, if your car has different requirements, make the adjustment accordingly. If you have any question regarding installation kits, consult your local retailer.

☰ Note


- This system is designed for negative ground (earth) 12V DC operation only.
- Always install this system in the car dashboard. Other locations can be dangerous as the rear of the system heats up during use.
- To avoid short-circuit: before you connect, make sure that the ignition is off.
- Make sure that you connect the yellow and red power supply leads after all other leads are connected.
- Make sure that all loose leads are insulated with electrical tape.
- Make sure that the leads do not get caught under screws iron parts that will move (e.g. seat rail).
- Make sure that all ground (earth) leads are run to a common ground (earth) point.
- Use only the supplied mounting hardware for a safe and secure installation.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- When you connect other devices to this system, make sure that the rating of the car circuit is higher than the total fuse value of all the connected devices.
- Never connect speaker wires to the metal body or chassis of the car.
- Never connect speaker wires with stripes to one another.

Connect wires


☰ Note

- Make sure that all loose leads are insulated with electrical tape.
- Consult a professional to connect wires as instructed below.

- 1 Check the car's wiring carefully and connect them to the the ISO male connectors.

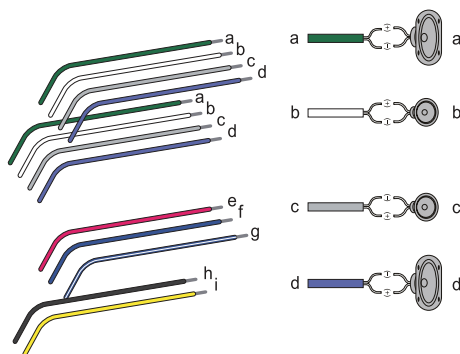


	ISO male connectors	Connect to
a	Green strip, black-edged green strip	Rear left speaker
b	White strip, black-edged white strip	Front left speaker
c	Gray strip, black-edged gray strip	Front right speaker
d	Purple strip, black-edged purple strip	Rear right speaker
e	Red strip	Ignition key +12V DC when ON/ ACC
f	Blue strip	Motor/electric antenna relay control lead
g	White-edged blue strip	Amplifier relay control lead
h	Black strip	Ground

 

ISO male connectors	Connect to
i Yellow strip	To the +12V car battery which is energized at all times

2 Connect the antenna and amplifier as illustrated, if applicable.

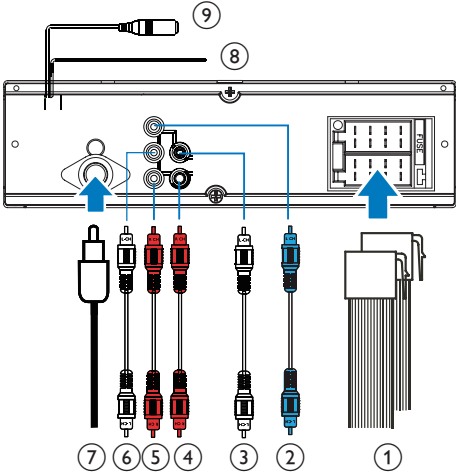

Sockets on rear panel	External sockets or connectors
1 For ISO male connectors	As indicated above
2 SUB-W OUT (blue socket)	sub-woofer
3 REAR OUT L (white socket)	Rear right speaker
4 REAR OUT R (red socket)	Rear left speaker
5 FRONT OUT R (red socket)	Front right speaker
6 FRONT OUT L (white socket)	Rear left speaker
7 ANTENNA	Antenna
8 OE SWC IR REMOTE IN (purple connector)	Ground
9 External Mic (black connector)	External microphone


Tip

- The pin arrangement for the ISO connectors depends on the type of your vehicle. To avoid damage to the unit, connect properly.


English


Mount into the dashboard

- If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
 - If the car battery is not disconnected, to avoid short-circuit, make sure that the bare wires do not touch each other.
- 1 Make sure that the car dashboard opening is within these measurements:

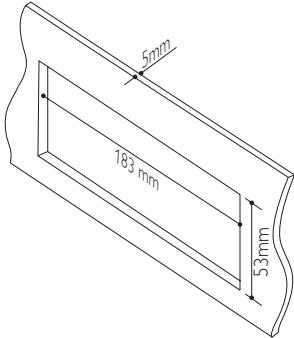


 2 Remove the mounting sleeve with the supplied disassembly tools.

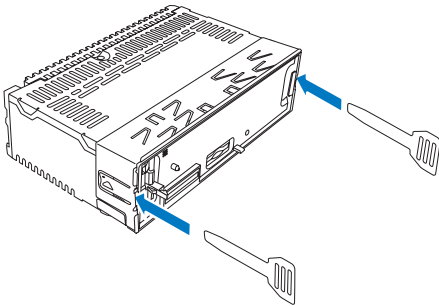





- 3 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.

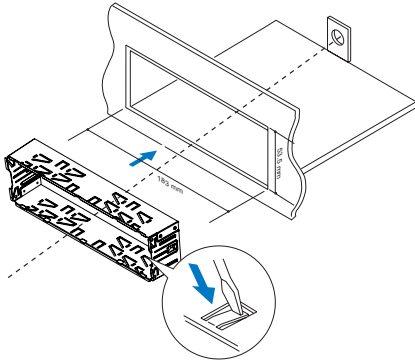

- 4 Slide the unit into the sleeve until you hear a "click".

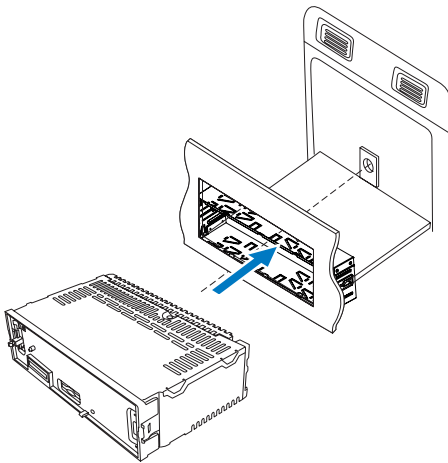


- 5 Attach the trim plate.

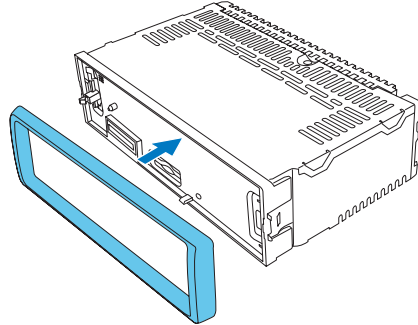


- 6 Reconnect the negative terminal of the car battery.

Attach the front panel

- 1 Insert the notch on the front panel to the chassis on the main unit.

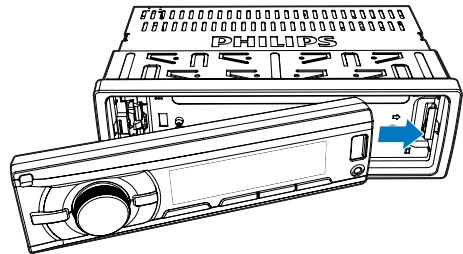


- 2 Press the left end of the front panel inwards until it is securely locked with a "click".

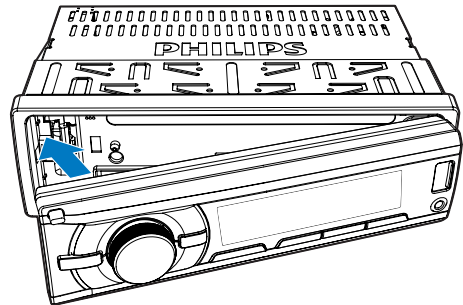


Detach the front panel

Note




- Before you insert an SD/SDHC card or reset the system, detach the front panel.
- Before you detach the front panel, make sure that the system is turned off.

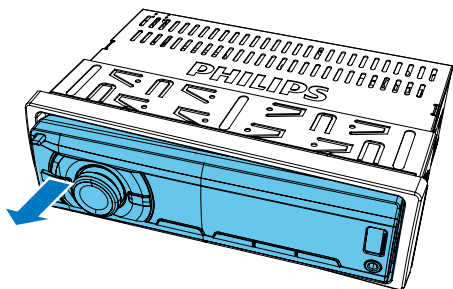- 1 Press  to release the front panel.
- 2 Pull the front panel outwards to remove it.







 
4 Get started

For the first time use

- 1 Press  to turn on the system.
↳ [PHILIPS] is displayed and then [SELECT OPERATING REGION] (select a radio region) scrolls.
- 2 When one of the following options is displayed, rotate  to select a radio region that matches your location.
 - [AREA EUROPE] (Western Europe)
 - [AREA ASIA] (Asia Pacific)
 - [AREA MID--EAST] (Middle East)
 - [AREA AUST] (Australia)
 - [AREA RUSSIA] (Russia)
 - [AREA USA] (United States)
 - [AREA LATIN] (Latin America)
 - [AREA JAPAN] (Japan)
- 3 Press  to confirm.
↳ The system switches to radio mode automatically.
 - To turn off the system, press and hold  until the screen backlight is off.

Set the time format

- 1 Press and hold  to access the system menu.
- 2 Press  /  repeatedly until [CLK 24H] or [CLK 12H] is displayed.
- 3 Rotate  to select [CLK 24H] or [CLK 12H].
 - [CLK 24H]: 24-hour time format
 - [CLK 12H]: 12-hour time format



Set the clock

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU / ZONE** repeatedly until **[CLK]** is displayed with time digits blinking.
- 3 Rotate **⊖** anti-clockwise to set the hour.
- 4 Rotate **⊕** clockwise to set the minute.

Display the clock

Press and hold **⊕ / DISP** until **[CLK]** and the set clock are displayed.

- To exit the clock display, press any button or rotate **⊖**.

Select a source

Press **APP/SOURCE** repeatedly to select a source.

- **[RADIO]**: Listen to FM/AM radio.
- **[AUDIO IN]**: Listen to the audio input through the **AUDIO IN** socket.
- **[USB]**: When a USB storage device or compatible iPod/iPhone is connected and recognized, you can select this source to play audio files that are stored on it.
- **[SD/SDHC]**: When an SD/SDHC card is inserted and recognized, you can select this source to play audio files that are stored on it.

Select a listening zone

 
- 1 Press and hold **ZONE** until one of the following options is displayed.
 - **[ALL]**: For all passengers
 - **[FRONT-L]**: For the front-left seat only
 - **[FRONT-R]**: For the front-right seat only
 - **[FRONT]**: For front passengers only

- 2 Press **MENU / ZONE** repeatedly to select a listening zone.

Mute the button beep

The beep sound of buttons is enabled by default.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU / ZONE** repeatedly until **[BEEP ON]** or **[BEEP OFF]** is displayed.
 - **[BEEP ON]**: Enable the beep sound of buttons.
 - **[BEEP OFF]**: Mute the beep sound of buttons.
- 3 Rotate **⊖** to change the setting.



5 Listen to radio

Select a tuner region

You can select a radio region that matches your location.

- 1 In radio mode, press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until one of the following options is displayed.
 - **[AREA EUROPE]** (Western Europe)
 - **[AREA ASIA]** (Asia Pacific)
 - **[AREA MID--EAST]** (Middle East)
 - **[AREA AUST]** (Australia)
 - **[AREA RUSSIA]** (Russia)
 - **[AREA USA]** (United States)
 - **[AREA LATIN]** (Latin America)
 - **[AREA JAPAN]** (Japan)
- 3 Rotate **OK** to select a region.

Select a tuner sensitivity

To search for radio stations with strong signals only or more radio stations, you can change the tuner sensitivity.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until **[LOC ON]** or **[LOC OFF]** is displayed.
- 3 Rotate **OK** to select a setting.
 - **[LOC ON]**: Search for radio stations with strong signals only.
 - **[LOC OFF]**: Search for radio stations with strong and weak signals.

Search for a radio station

Search for a radio station automatically

Press **◀** or **▶** to search for the previous or next radio station with strong signals.

Search for a radio station manually

- 1 Press and hold **◀** or **▶** until **[M]** blinks.
- 2 Press **◀** or **▶** repeatedly until the target frequency is displayed.

Store radio stations in memory

 


Note

- You can store a maximum of six stations in each band.

Store radio stations automatically

- 1 Switch the source to **[RADIO]**.
- 2 Press **MENU** or **ZONE** repeatedly to select a band.
- 3 Press and hold **AS/SOURCE** until **[STORE---** is displayed.
 - ↳ After the search is complete, the first stored radio station is broadcast automatically.
 - To select a stored radio station, press **1** **♪**, **2** **REP**, **SHUF** **4**, **5**, or **▶** **6**.



Store radio stations manually

- 1 Press **MENU** or **ZONE** repeatedly to select a tuner band.
- 2 Tune to the radio station that you want to store.
- 3 Press and hold **1** , **2** **REP**, **SHUF** **4**, **5** , or **6** to store the radio station at the selected channel.

Play with RDS

The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. If you tune to an RDS station, the station name is displayed.

Enable the RDS function



Note

- The RDS function is enabled by default.
- Only when the RDS function is enabled, RDS related settings can be accessed.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until **[RDS ON]** or **[RDS OFF]** is displayed.
- 3 Rotate **OK** to select **[RDS ON]**.
 - ↳ The RDS function is enabled.
 - To disable the RDS function, rotate **OK** to select **[RDS OFF]**.


Select a program type

Before tuning to RDS stations, you can select a program type to search for programs of the selected category only.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until **[PTY]** is displayed.

- 3 Press **OK** to access the list of program types.
- 4 Rotate **OK** to select a program type, and then press **OK** to confirm.

Item	Program type	Description
1	NEWS	News services
2	AFFAIRS	Politics and current affairs
3	INFO	Special information programs
4	SPORT	Sports
5	EDUCATE	Education and advanced training
6	DRAMA	Radio plays and literature
7	CULTURE	Culture, religion and society
8	SCIENCE	Science
9	VARIED	Entertainment programs
10	POP M	Pop music
11	ROCK M	Rock music
12	EASY M	Light music
13	LIGHT M	Light classical music
14	CLASSICS	Classical music
15	OTHER M	Special music programs
16	WEATHER	Weather
17	FINANCE	Finance
18	CHILDREN	Children's programs
19	SOCIAL	Social Affairs
20	RELIGION	Religion
21	PHONE IN	Phone In
22	TRAVEL	Travel
23	LEISURE	Leisure
24	JAZZ	Jazz Music
25	COUNTRY	Country Music
26	NATION M	National Music
27	OLDIES	Oldies Music
28	FOLK M	Folk Music
29	DOCUMENT	Documentary
30	TEST	Alarm Test
31	ALARM	Alarm

 

Use alternate frequencies

If the signal of an RDS station is poor, enable the AF (Alternate Frequency) function to search for another station that broadcasts the same program.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until **[AF ON]** or **[AF OFF]** is displayed.
- 3 Rotate **OK** to select a setting.
 - **[AF ON]**: Enable the AF function.
 - **[AF OFF]**: Disable the AF function.

Set the region for AF tuning

You can set the region for AF tuning.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until **[REG ON]** or **[REG OFF]** is displayed.
- 3 Rotate **OK** to select a setting.
 - **[REG ON]**: Only RDS stations in current region can be tuned to automatically.
 - **[REG OFF]**: All RDS stations can be tuned to automatically.

Receive traffic announcement

If you want to receive traffic announcement, enable the TA (Traffic Announcement) function.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until **[TA ON]** or **[TA OFF]** is displayed.
- 3 Rotate **OK** to select a setting.
 - **[TA ON]**: When a traffic announcement is on air, the system automatically switches to the tuner mode and begins to broadcast the traffic announcement. When the traffic announcement is over, the system returns to the previous mode.

- **[TA OFF]**: Traffic announcement does not cut in.

Tip

- When a traffic announcement cuts in, you can press **ESC** to switch the system to the previous mode.

Synchronize the system clock

You can synchronize the system clock with an RDS station that transmits time signals.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / **ZONE** repeatedly until **[CT ON]** or **[CT OFF]** is displayed.
- 3 Rotate **OK** to select a setting.
 - **[CT ON]**: Synchronize the system clock with the RDS station automatically.
 - **[CT OFF]**: The automatic clock synchronization with RDS station is disabled.

Tip


- The accuracy of time depends on the RDS station that transmits time signals.

6 Play from a storage device

This system can play .mp3 and .wma files that are copied onto a compatible storage device.

Note

- Philips does not guarantee compatibility with all storage devices.
- NTFS (New Technology File System) file system is not supported.

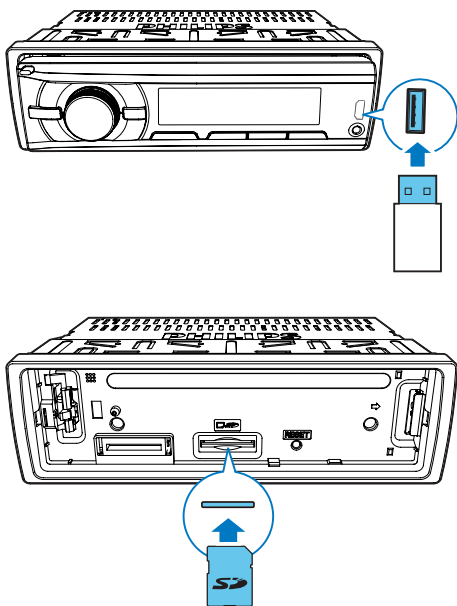


- 1 Connect a compatible USB storage device or SD/SDHC card.
 - For an SD/SDHC card, detach the front panel first, insert the card into the card slot, and then attach the front panel.

- 2 Switch the source to **[USB]** or **[SD/SDHC]**.
 - When a USB storage device is connected and recognized, the system switches the source to **[USB]** automatically.
- 3 If the play does not start, press **▶||6**.

Control play

Button	Function
MENU / ZONE	Press repeatedly to select a folder.
▶ 6	Pause or resume play.
◀◀ / ▶▶	Press to play the previous or next track.
◀◀ / ▶▶	Press and hold to rewind a track or search forward fast.
ⓘ / DISP	Press repeatedly to display available information about the current track.
3 REP	Press repeatedly to select a repeat mode: <ul style="list-style-type: none">• [REP ONE]: repeat the current track,• [RPT FLD]: repeat all tracks in the current folder, or• [RPT ALL]: repeat all tracks in the storage device.
SHUF 4	Press repeatedly to select a play mode: <ul style="list-style-type: none">• [SHU ALL]: play all tracks randomly,• [SHU FLD]: play tracks in the current folder randomly, or• [SHU OFF]: play all tracks in the storage device in sequence.

 

Switch tracks

During play, you can switch tracks or folders quickly.

Switch tracks directly

- 1 Press **1** to access the track list.
↳ The file name of current track scrolls.
- 2 Rotate to toggle through tracks.
- 3 Press to play the selected track.

Switch folders for a track

- 1 Press **2** to access the folder list.
↳ [ROOT] scrolls.
- 2 Rotate to toggle through folders.
↳ The name of current folder scrolls.
- 3 Press to select the folder.
- 4 Rotate to toggle through tracks in the folder.
- 5 Press to play the selected track.

7 Use Bluetooth devices

With this car audio system, you can listen to audio from a player or make a call through Bluetooth.

 
Connect a device

Note

- Philips does not guarantee the compatibility with all Bluetooth devices.
- Before pairing a device with this system, read its user manual for Bluetooth compatibility.
- Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- At one time, you can connect only one Bluetooth device to this system.
- The operational range between this system and a Bluetooth device is approximately 3 meters (9 feet).
- Any obstacle between this system and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.

On your device, follow the steps below.

- 1 Search for Bluetooth devices.
- 2 In the device list, select **CE162**.
- 3 Enter the default password "0000", and then confirm the password entry.
↳ If the pairing succeeds, [PAIRED] is displayed on the LCD screen of this system.
- 4 Enable or permit the connection with CE162.
↳ If the connection succeeds, [CONNECTED] scrolls and is displayed on the LCD screen of this system.
↳ If the connection fails, [FAILED] is displayed on the LCD screen of this system.



Disconnect a device

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** / repeatedly until **[DISCONNECT]** is displayed.
- 3 Press **OK**.
↳ **[DISCONNECT]** scrolls.



Tip

- You can also complete the disconnection on your device.

Reconnect a device

Some Bluetooth devices support the automatic reconnection with a paired Bluetooth device. If your device does not support automatic reconnection, reconnect it with this system manually.

- 1 Press and hold **MENU** to access the system menu.
- 2 Press **MENU** repeatedly until **[DISCONNECT]** is displayed.
- 3 Press **OK**.
↳ **[CONNECTING]** scrolls or **[FAILED]** appears.
↳ If **[CONNECT]** scrolls, this system is reconnected to the last connected device.



Tip

- You can also complete the reconnection on your device.

Play audio from a Bluetooth device

If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to tracks that are stored on the device through the system. If the device also supports Audio Video Remote Control Profile (AVRCP) profile, you can control play on the system or with its remote control.

- 1 Play a track on the connected device.
- 2 Press **APP/SOURCE** repeatedly to switch the source to **[BT AUDIO]**.
↳ Play starts automatically.
 - To pause or resume play, press **▶|◀**.
 - To skip to the previous or next track, press **◀◀ / ▶▶**.



Note

- If the connected device does not support the AVRCP profile, control play on the connected device.

Make a call



 
Note

- Keep the Bluetooth connection active between the system and your mobile phone.

Call a number

On your mobile phone, call a number.

- ↳ **[CALLING]** is displayed.



Redial the last called number

- 1 Press \hookrightarrow .
↳ [REDIAL] is displayed.
- 2 Press \odot \star to confirm.
↳ [CALLING] is displayed.

Pick up an incoming call

When the system receives an incoming call, the phone number or [PHONE IN] is displayed.

Press \hookrightarrow to answer the call.

Reject an incoming call

Press and hold \hookrightarrow until [END] is displayed.

End a call

To end an on-going call, press \hookrightarrow .


Transfer a call to mobile phone

By default, the voice comes from the loudspeakers during a call.

- 1 Press and hold Ⓜ until [TRANSFER] is displayed.
↳ The loudspeakers are muted, and the voice comes from your mobile phone only.
- 2 Take up your mobile phone for the conversation.

8 Listen to an external player



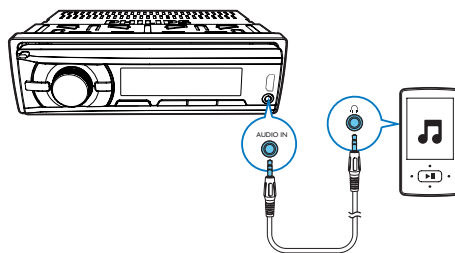


 

You can use the system to amplify the audio input from an external player; for example, MP3 player.



- 1 Switch the source to **AUDIO IN**.
- 2 Connect an audio in cable to
 - the **AUDIO IN** socket on the system, and
 - the audio output socket (usually the headphone socket) on the external player.
- 3 Play the external player.

9 Adjust sound

The following operations are applicable to all supported media.



Button	Function
	Rotate to increase or decrease the volume level.
	Press to mute the speakers or release them from mute status.
	Press to enable or disable the maximum volume.
	Press and hold to enable or disable the Dynamic Bass Boost (DBB) effect.
	Press repeatedly to select a sound equalizer.
	<ol style="list-style-type: none">1 Press and hold to activate the setup of customized sound equalizer.2 Press repeatedly to select an option: [BAS] (bass), [TRE] (treble), [BAL] (balance), or [FAD] (fader).3 Rotate  to adjust the setting.


 
10 Enjoy features with AppsControl application

To fully enjoy features of this product, download the application **AppsControl** from **App Store** or **Google Play**.

For first time use

When using the **AppsControl** app for the first time, you need to connect the car audio system with the **AppsControl** app through your smart phone.

- 1 Press  to turn on the car audio system.
- 2 Enable the Bluetooth function of your smartphone and search for Bluetooth devices that can be paired.
- 3 In the device list, select **CE162**.
- 4 Enter the default password "0000", and then confirm the password entry.
↳ When connection is successful,  displays on the CE162 screen.
- 5 Launch the **AppsControl** app and it will automatically connect with the car audio system.
↳ When connection is successful, **[Connected Ok]** is displayed.

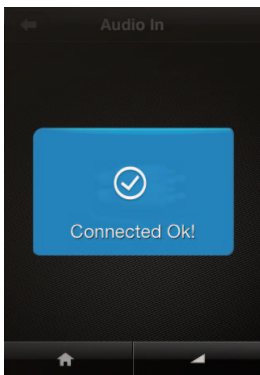

- The two-way control is successfully connected. You can control the **AppsControl** app both by your smart phone and by car audio system.

Check the Bluetooth connection status


- Press and hold **MENU** to access the system menu.
- Press **MENU / ZONE** to select **[BT MODE]**.
 ↳ **[BT MODE PHONE NAME < HFP -- A2DP -- APPS>]** scrolls on the screen.
 - If **APPS** on the above strings is not displayed, the connection between the car audio system and the **AppsControl** application fails, please try the Bluetooth connection again.

Use the AppsControl application


Note

- To enjoy the latest features, update the application on your phone when an update message prompts.
- After update, the interface and features may be different from the description in this section. Follow the actual operations.

- Launch the **AppsControl** application.
 ↳ The home screen is displayed.

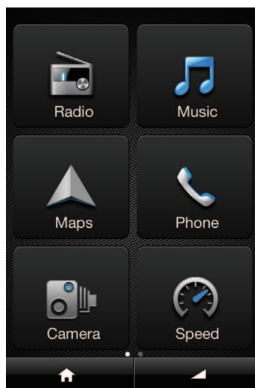

- To switch the interface for more features, swipe on the screen.
- Tap an icon to access its features or change settings.
 - Radio**: Listen to radio.
 - Music**: Play music.
 - Navigation**: Run the map application that is installed on your smart phone.
 - Phone**: Make a phone call.
 - Camera**: Record the speed camera location.
 - Speed**: Set speed alert and speed limit. If your current driving speed exceeds the limit you set, it will pop an alarm until you driving speed is lower than the limit.
 - Compass**: Display the direction.
 - External audio input**: Switch the source to the **AUDIO IN**.
 - USB**: Switch the source to USB storage device.
 - SD card**: Switch the source to SDHC card.
 - Bluetooth**: Enable/Disable the Bluetooth function on your smartphone (For Android only).
 - Voice**: Voice control (For Android only).

 

- (settings): Change settings
- : Return to the main interface
- : Add a shortcut of an application onto the current interface. Tap to display the dialog box, tap **Application** on the dialog box to display all applications that are installed on your phone, and then tap an application name to create a shortcut.
- To remove an icon from the interface, tap and hold it until a dialog box is displayed, and then tap .

11 Additional information

Dimmer

- 1 Press and hold **MENU**.
- 2 Press or repeatedly until **[DIMMER]** is displayed.
- 3 Rotate to select a setting:
 - **[DIMM HIGH]** (dimmer high)
 - **[DIMM LOW]** (dimmer low)


LCD Color

You can select your desired LCD color on this car audio.

- 1 Press and hold **MENU**.
- 2 Press or repeatedly until **[LCD COLOR]** is displayed.
- 3 Press .
- 4 Rotate to select a setting:
 - **[DEFAULT]** (default setting)
 - **[COLOR SCAN]** (color scan)
 - **[WHITE]** (white)
 - **[GREEN 1]** (green 1)
 - **[GREEN 2]** (green 2)
 - **[GREEN 3]** (green 3)
 - **[AMBER]** (amber)
 - **[PINK 1]** (pink 1)
 - **[PINK 2]** (pink 2)
 - **[PURPLE 1]** (purple 1)
 - **[PURPLE 2]** (purple 2)
 - **[BLUE 1]** (blue 1)
 - **[BLUE 2]** (blue 2)
 - **[USER COLOR]** (user color)

Reset the system

If the system works abnormally, reset the system to factory default settings.

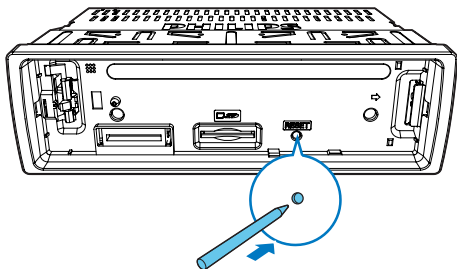


- 1 Detach the front panel.
- 2 Press the **RESET** button with the tip of a ball-point pen or toothpick.
↳ All settings are reset to factory default.

Replace the fuse

If there is no power, check the fuse and replace it if it is damaged.

- 1 Check the electric connection.
- 2 Remove the damaged fuse from the rear panel.
- 3 Insert a new fuse with the same specifications (15 A).

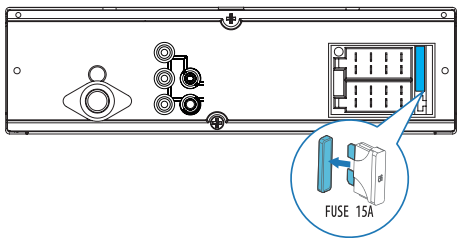

Note

- If the fuse gets damaged immediately after it is replaced, an internal malfunction may occur. In such case, consult your Philips retailer.

12 Product information

Note


- Specifications are subject to change without prior notice.

General

Power supply	12 V DC (11 V - 16 V), negative ground
Fuse	15 A
Suitable speaker impedance	4 - 8 Ω
Maximum power output	50 W \times 4 channels
Continuous power output	22 W \times 4 RMS (4 Ω 10% T.H.D.)
Pre-Amp output voltage	2.0 V
Aux-in level	500 mV
Dimensions (W \times H \times D)	188 \times 58 \times 110 mm
Weight	0.63 kg

Radio

Frequency range - FM	87.5 - 108.0 MHz (100kHz per step in auto search and 50kHz per step in manual search)
Usable sensitivity - FM (S/N = 20 dB)	8 μ V
Frequency range - AM(MW)	522 - 1620 KHz (9 kHz) 530 - 1710 kHz (10 kHz)
Usable sensitivity - AM(MW) (S/N = 20 dB)	30 μ V

 

13 Troubleshooting



Warning

- Never remove the casing of this product.

To keep the warranty valid, never try to repair the product yourself.

If you encounter problems when using this product, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the product is nearby and the model number and serial number are available.

General

No power or no sound

- The power supply from car battery is cut off, or the car battery runs out of energy. Power the system with car battery.
- Car engine is not on. Turn the car engine on.
- Cable is not correctly connected. Check connections.
- The fuse is burnt. Replace the fuse.
- Volume is too low. Adjust volume.
- If the above solutions do not work, press the **RESET** button.
- Make sure that the current track is in a compatible format.

Noise in broadcasts

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.

Preset stations are erased.

- Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

Cannot switch the source to iPod/iPhone

- Check whether the iPod/iPhone is securely connected.
- Check whether the iPod/iPhone is compatible with this system.
- Check whether the iPod/iPhone battery is nearly empty. Connect it to this system for charging first.

Display shows ERR-12.

- Data error: Check the USB storage device or SD/SDHC card.

About the Bluetooth device

Music playback is unavailable on the system even after successful Bluetooth connection.

- The device cannot be used with the system to play music.

The audio quality is poor after connection with a Bluetooth-enabled device.

 
- The Bluetooth reception is poor: Move the device closer to the system or remove any obstacle between the device and the system.

Cannot connect with the system.

- The device does not support the profiles required for the system.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- The system is not in the pairing mode.
- The system is already connected with another Bluetooth-enabled device. Disconnect that device or all other connected devices and then try again.

The paired mobile phone connects and disconnects constantly.

- The Bluetooth reception is poor: Move the mobile phone closer to the system or remove any obstacle between the mobile phone and the system.



- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of the system.
- For some mobile phones, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the system.

14 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Compliance

CE 1177

This product complies with the radio interference requirements of the European Community.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www.philips.com/support.

 
Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

 
 
 
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.

Other trademarks and trade names are those of their respective owners.

Copyright

2013 © WOOX Innovations Limited. All rights reserved.

Specifications are subject to change without notice. WOOX reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



Specifications are subject to change without notice

2013 © WOOX Innovations Limited. All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

CE162_12_UM_V1.0

