

WATERPROOF

stadiumpro

PORTABLE PA SYSTEM

Bluetooth



Rechargeable
10Hrs Playtime*



Waterproof



Bluetooth V4.0
Connectivity



USB 3 Charge, Play
& Wireless Mic Ready



Peak Power



Mic/Instrument
Input 6.5MM



AUX Input 3.5MM



Waterproof
Compartment



Jog Wheel Control



AM/FM Radio



EQ Presets

User Manual



Taking care of the internal battery

This unit is equipped with a rechargeable lead acid battery. In order to avoid battery damage, this unit must be fully charged immediately after use before storing the device.

WARNING:

To meet waterproof standards the waterproof cover on the top and the rear power input cover must be properly closed and sealed. Do not leave electronic devices inside or exposed to water. To prevent damage to your device, please do not close the waterproof compartment if your device exceeds 20mm in height.

USB 3 WIRELESS READY:

The PAWATER is USB 3 compatible with Stadium USB Wireless Microphone models UHFUSB1A-2A

Feature List	01
Unpacking	02
Layout	03
Battery/Charger	05
Connections	06
Key Function	08
Function Operation	10
Power On/Off	10
Adjusting the volume	10
Adjusting the Mic volume	10
Bluetooth mode	11
Pairing a Bluetooth Device	11
Reconnect to the Bluetooth Device.....	12
Delete paired information	12
Bluetooth disconnected.....	13
Play music.....	13
USB Play	14
Playback control	14
EQ mode	15
Play mode	15
Repeat mode	16
USB Flash Drive/Udisk folder	16
Delete file	17

 
Delete all	17
Wireless Mic	18
Connecting the Mic	18
Adjusting the Mic	18
Radio Mode	19
Auto search	19
AM/FM mode (Listening).....	20
Delete station	21
Delete all stations.....	21
AM/FM Channel Save	22
System Settings.....	23
Backlight Time.....	23
Language	23
Auto Power	24
Contrast	24
View Firmware Version	25
Factory Set.....	25
True Wireless Stereo Connection of Two PAWATER's	26
Connection	26
TWS mode	27
Voice Assistant	27
Menu Tree	28
Specifications	30
Technical Assistance	31

- IP67 dust proof & waterproof
- Shock resistant
- Bluetooth V4.0 connectivity
- Rechargeable, long life battery with 10+ hours of playing time*
- Standby time 100 hours
- Inputs for 1/4" (Microphone or Guitar), 1/8" (Mini Stereo)
- AM/FM radio with 6 presets
- 8" Woofer + 8" passive radiator + 3" mid-range/tweeter
- 100W peak power
- Back-lit LED display
- Jog wheel selection control
- USB Charging
- USB 3 Compatible with Stadium USB Wireless Microphones
- High speed USB charging port
- Waterproof compartment
- Pair 2 PAWATER for enhanced stereo sound experience (Bluetooth audio only)


* Hours of use will depend on the average output volume

■ Unpacking

Once you have unpacked your product, make sure that all the parts shown below are available. If any pieces are missing or broken, please promptly call your dealer.

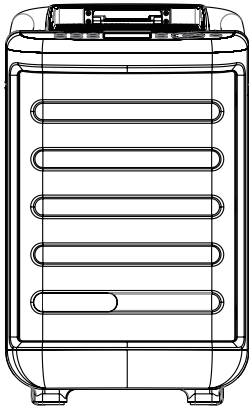

PAWATER

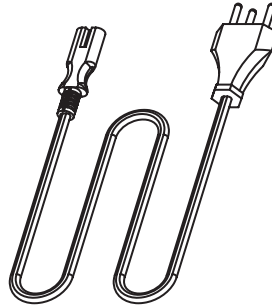 


Power cable




User manual

Layout

 Top View

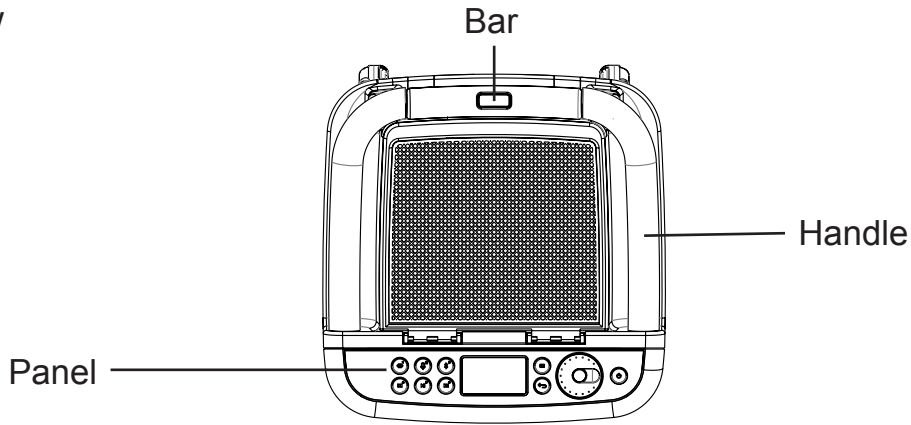

Side View

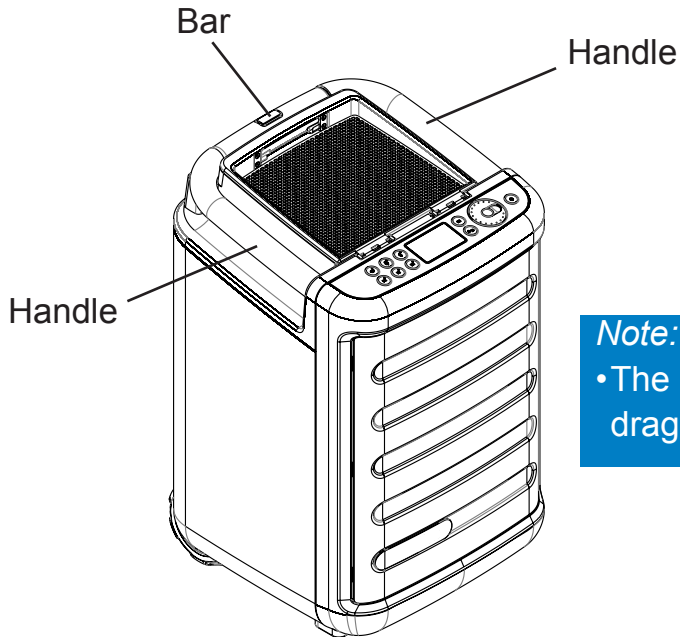 


Note:

- The bar should only be used for dragging not lifting


Rear View

Open

 
Power Cable
Jack Cover

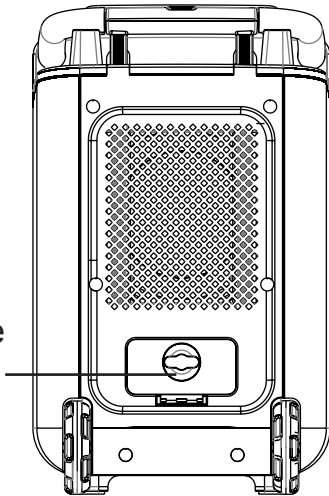

Power Cable
Jack Cover

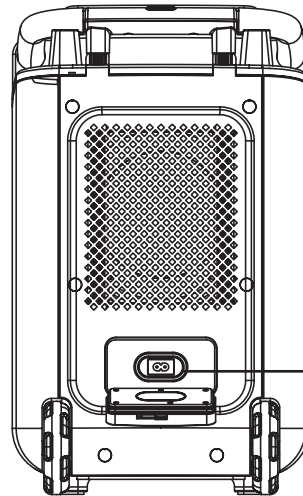 


Bottom View

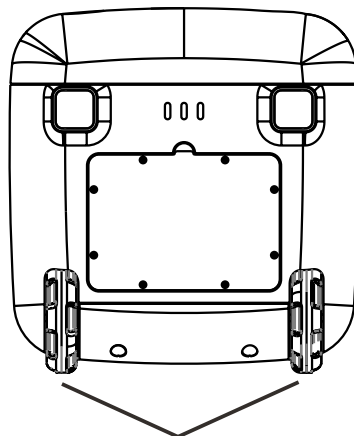 

Wheels


■ Battery/Charger

 Insert the included power cable (as following pictures) to charge the speaker. Note: The PAWATER can be used with the power cable while it simultaneously charges the battery. **When the power cable is connected, movement of the battery indicator shows the battery is charging.**

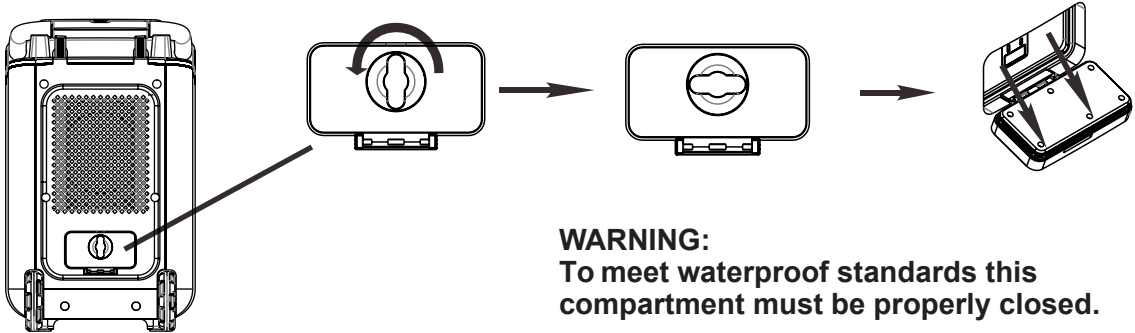

WARNING:
To meet waterproof standards this compartment must be properly closed.

 1. Rotate the knob counter clockwise.
2. Pull cover down.

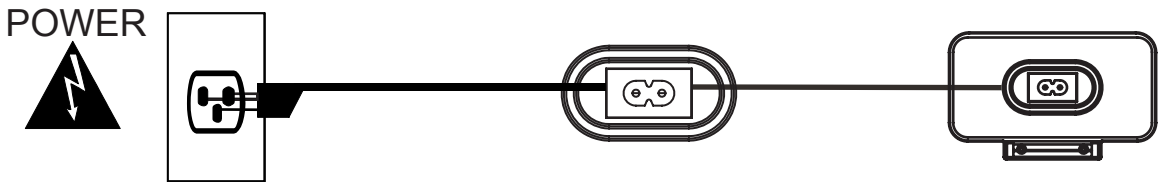


Taking care of the internal battery

This unit is equipped with a rechargeable lead acid battery. In order to avoid battery damage, this unit must be fully charged immediately after use before storing the device.


■ Connections

 stadiumpro

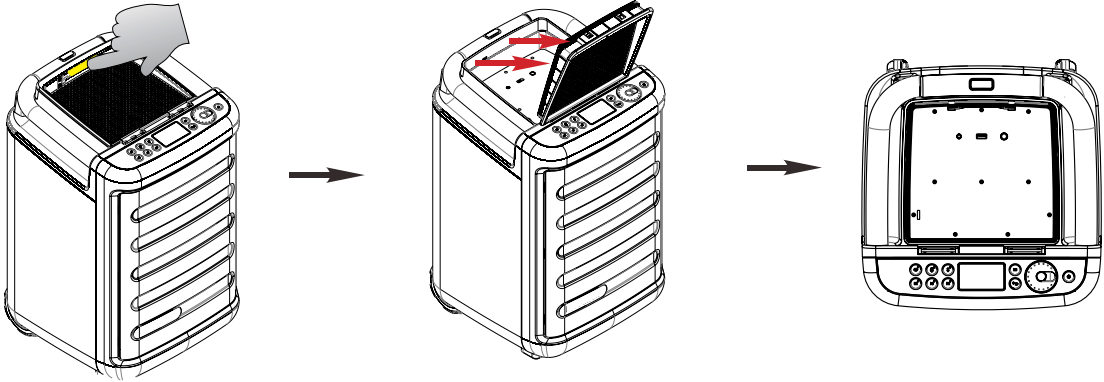

1. Press the **clasp in**.
2. Pull the cover up.

 To meet waterproof standards this compartment must be properly closed. Do not leave electronic devices inside or exposed to water. To prevent damage to your device, please do not close the waterproof compartment if your device exceeds 20mm in height.

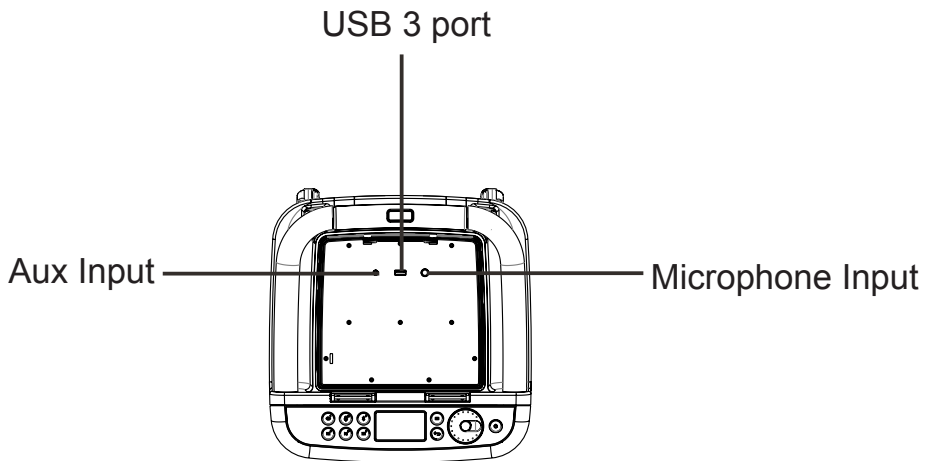


■ Connections

Microphone Input: To suit a guitar or other musical instruments.

Auxiliary(AUX) Input: Used to connect a music player, such as CD player, smartphone or tablet. The PAWATER will enter **AUX mode** automatically.

 USB 3 Port: Connect your **device's USB cable** here for charging your smartphone or tablet. Use your **USB Flash Drive** to play music from. Use with a dongle for **Stadium Wireless Microphones**. **PC OUT** use with USB cable and use PAWATER to record your performance to a computer.

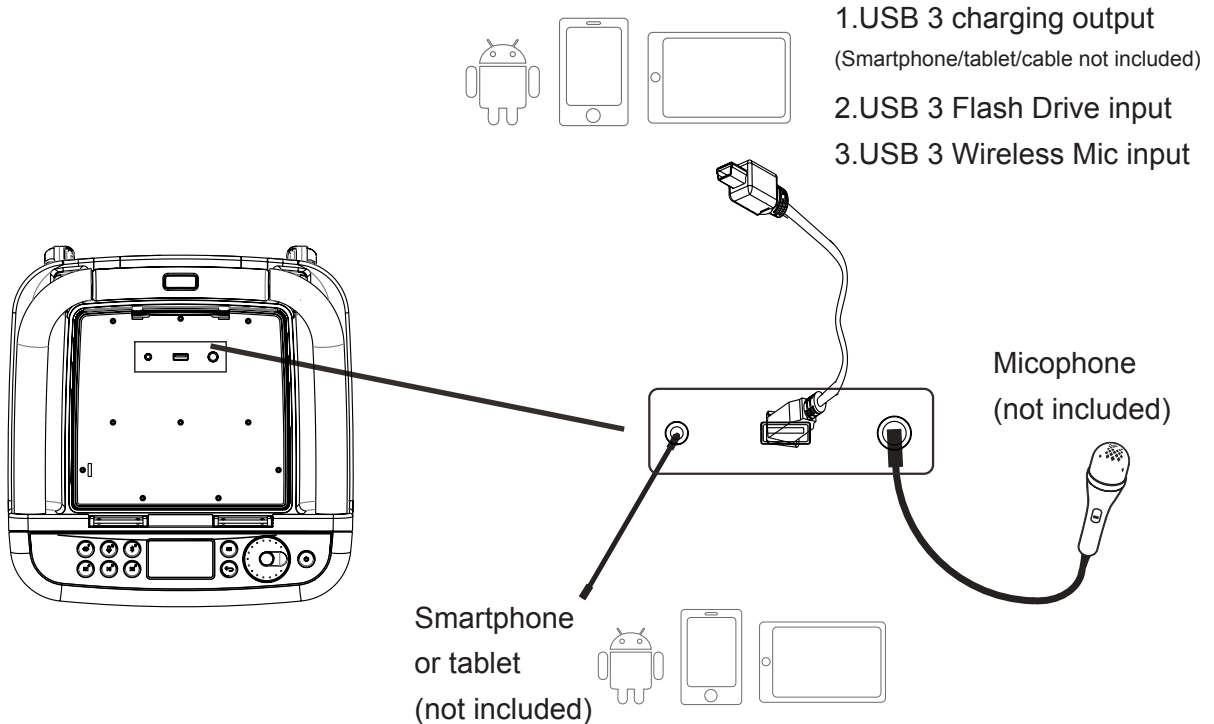

Key Function

stadiumpro



 
Power Button: Press and hold this button to turn speaker on or off.



Menu Button: Press this button to enter or exit to menu.



Return Button: Press this button to go back to previous menu.

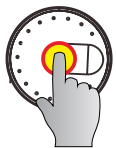

Jog Wheel:

- Roll the wheel to switch between different modes **Music, Aux, Radio, Bluetooth, USB Device, Settings** cyclically in mode selection.
- Roll the wheel to adjust the volume in music or radio mode.
- Press the button in the center of wheel to confirm the selection.

■ Key Function

stadiumpro



Play/Pause Button:

- Press this button to Play or Pause a track.
- Press this button to confirm the selection in the menu.



Link Button: Press this button to link with another speaker for stereo performance. (Press this button on both speakers)



Voice Assistant Button: Press this button to activate your Voice Assistant (like Siri or Google Now).



Bluetooth Button: Press this button to enter pairing mode.



Track Buttons:

• Press these buttons to go to the previous/next track and station.



• Press these button to roll forward in menu.

Function Operation

Power On/Off



Power On: Press and hold the button to power on the  speaker.

Power Off: Press and hold the button to power off the speaker.



When power is turned on the PAWATER will enter the main menu.

This unit sequence is **Music - Aux - Radio - BT - USB - Settings**.

Press the center of the wheel  or  to confirm your selection and to enter the submenu.

Adjusting the volume

1. Roll the wheel  to adjust the volume (0~15 levels).

2. Press the center of wheel  or  to confirm.

Adjusting the Mic volume

1. Press  to select **Mic volume** in any mode.

2. Press the center of wheel  or  to confirm the selection.

3. Roll the wheel  to adjust the volume (0~15 levels).






4. Press the center of wheel  or  to confirm.

■ Function Operation


Bluetooth Mode

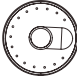Note: Before operating the following functions, you **MUST** enter Bluetooth mode.

Follow these steps:

1. Roll the wheel  (or you can press  ) to select **Bluetooth** ("Bluetooth mode" verbal response will be heard).
2. Press the center of wheel  or  to confirm.

Pairing a Bluetooth Device

1. Turn on your **Bluetooth device**.
2. Navigate to your Bluetooth device's setup screen, find **PAWATER** and connect, **BT Connected** will be displayed on the LCD and the PAWATER will tell you "connection successful".
3. Press  to go back to the previous menu.







Notes:

- If the pairing is not complete within 3 minutes, the speaker will quit the pairing mode. You need to repeat the steps of pairing again.
- If you reboot the PAWATER after the connected , the PAWATER will connect to the last connected device automatically.






Function Operation


Bluetooth Mode

Reconnect to the Bluetooth Device

1. Press  to enter **Bluetooth menu**.
2. Roll the wheel  (You can also press ⁴ or ⁶) to select **Reconnect**.
3. Press the center of wheel  or ⁵ to confirm.

Delete paired information

1. Press  to enter the **Bluetooth menu**.
2. Roll the wheel  to select **Delete paired**.
3. Press the button  at the center of wheel or ⁵ to confirm the selection.
4. Press  to go back to the previous menu.

You can also press and hold ³ for 3 seconds to delete paired information.







NOTE:

If experiencing problems pairing to a previously paired device you may need to unpair your other paired devices and or "Forget Device" then repair.

Function Operation






Bluetooth Mode

Bluetooth disconnected

1. Press  to enter **Bluetooth menu**.
2. Roll the wheel  (You can also press  or ) to select **BT Disconnected**.
3. Press the center of wheel  or  to confirm.

Play music

After PAWATER is connected to your Bluetooth device.

- Press  or  on PAWATER to play or pause.
- Press  to play previous track.
- Press  to get to the next track.
- Press  to pause music and go back to the main menu.

Notes:

- Pair and connect your Bluetooth device with the PAWATER before using this feature
- A music player app is required on your device to support this feature.
- If a call is received when you are listening to music, the music will pause automatically.






Function Operation

USB Play






Music function only can be used by connecting with music player or device's USB cable.

Note: Before operating following functions, select the Music menu and enter it.

Follow these steps:

1. Roll the wheel  (You can also press  or ) to select **Music** ("Music play" verbal response will be heard) .
2. Press the center of wheel  or  to confirm.


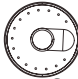








Playback control

- Press  on PAWATER to play,
- Press  to pause.
- Press  briefly to play previous track.
- Press  briefly to play the next track.
- Press  to exit play music and go back to the main menu.





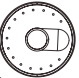







Function Operation

USB Play

EQ mode

1. Press  to enter the **music menu**.
2. Roll the wheel  (You can also press  or ) to select **EQ**.
3. Press the center of the wheel  or  to confirm the selection.
4. Then roll the wheel  to select EQ (**Normal - Pop - Rock - Jazz - Classic - Country, Low Bass**).
5. Press the center of the wheel  or  to confirm.
6. Press  to go back to the previous menu.











Play mode

1. Press  to enter the **music menu**.
 2. Roll the wheel  (You can also press  or ) to select Play mode.
 3. Press the center of wheel  or  to confirm the selection.
 4. Roll the wheel  (You can also press  or ) to select Play mode or the track you want to play.
- There are 6 modes: **All - Repeat one - Repeat folder - Normal - Random-Brows**
5. Press the center of wheel  or  to confirm.
 6. Press  to go back to the previous menu.



■ Function Operation

USB Play

Repeat mode

1. Press  to enter the **music menu**.
2. Roll the wheel  (you can also press  or ) to select **Repeat mode**.
3. Press the center of wheel  or  to confirm the selection.
4. "A" flashed on upper part of the LCD and press  to select the start of repeat.
5. "B" flashed on upper part of the LCD and press  to select the end of repeat.
6. Press  to reset the repeat mode.
7. Press  to exit the repeat mode.

USB Flash Drive













1. When you insert a Flash Drive with music into the USB drive, the PAWATER will read the Flash Drive and start playing tracks automatically
2. Press  or  to skip through tracks.

■ Function Operation













USB Play

When using a Flash Drive and the music is paused, the following functions are available

Delete file

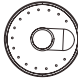1. Press  to enter the **music menu**.
2. Roll the wheel  (You can also press  or ) to select **Delete file**.
3. Press the center of wheel  or  to confirm the selection.
4. Roll the wheel  (You can also press  or ) to select OK or cancel.
5. Press the center of wheel or  to  confirm.
6. Press  to back to the previous menu.

Delete all


1. Press  to enter the **music menu**.
2. Roll the wheel  (You can also press  or ) to select **Delete all**.
3. Press the center of wheel  or  to confirm the selection.
4. Roll the wheel  (You can also press  or ) to select OK or cancel.
5. Press the center of wheel or  to  confirm.
6. Press  to back to the previous menu.

■ Function Operation








Wireless Mic

NOTE: Wireless Mic is only available in Bluetooth mode, AUX mode and Radio mode. Please refer to the **Function Operation** to enter these mode.

Connecting the Mic

1. Plug the USB receiver of wireless microphone into the PAWATER USB port and then the blue light on the USB receiver will light up.
2. Press  on the Mic, the receiver will then light up green to confirm connection.

Adjust the Mic volume






1. Press  to select Mic volume in Bluetooth, AUX or Radio mode.
2. Press the center of wheel  or  to confirm the selection.
3. Roll the wheel  to adjust the volume (0~15 levels).
4. Press the center of wheel  or  or  to confirm and exit volume adjustment state.

Function Operation

Radio Mode

 




Note: Before operating following functions, select the Radio menu and enter it.

Follow these steps:

1. Roll the wheel  (You can also press  or ) to select **Radio** ("Radio mode" verbal response will be heard).
2. Press the center of wheel  or  to confirm.

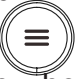Press to enter Radio menu, this unit sequence is
Auto search - Mic volume - AM(FM) Mode - Delete station - Delete all station.






Auto search

 
1. Press  to enter the **Radio menu**.
2. Roll the wheel  (You can also press  or ) to select **Auto search**
3. Press  to back to the previous menu.


Function Operation

Radio Mode

AM/FM mode (Listening)

1. Press  to enter the **Radio menu**.
2. Roll the wheel  (You can also press  or ) to select **FM mode** or **AM mode**.
3. Press the center of wheel  to confirm, the mode you select will display on LCD.

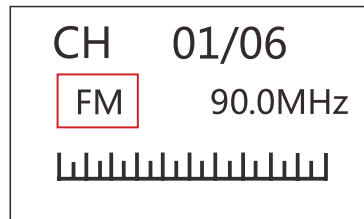








4. Press  to back to the previous menu.

Function Operation

Radio Mode








Delete station

Note: You should be listening to the preset station that you want to delete.

1. Press  to enter the **Radio menu**.
2. Roll the wheel  (You can press  or ) to select Delete station,
3. Press the center  of wheel or to delete current  station.
4. Press  to back to the previous menu.

Delete all station

Note: You should be listening to the preset station that you want to delete.

1. Press  to enter the **menu**.
2. Roll the wheel  (or press  or ) to select **Delete all station**.
3. Press the center of wheel  or  to delete current station.
4. Press  to back to the previous menu.

 

Function Operation


Radio Mode

AM/FM Channel Save

There are 6 preset number keys for AM station or FM station.

While listening to a station you want to store

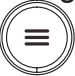 1. Press  to enter the **Radio menu**
2. Select **Save CH** in the **radio menu** and press  to confirm your selection.
3. The LCD will show the number keys available, press the number key to assign the current station.

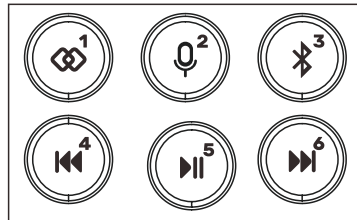






Preset number key

If you want to listen to a stored station, press and hold a preset button (1~6) to go to the stored radio station.











Function Operation

System Settings











Note: Before operating following functions, you MUST select the Settings and enter it. Just following these steps:

1. Roll the wheel  (You can also press  or ) to select Settings ("System settings" verbal response will be heard).
2. Press the center of wheel  or  to confirm.

Backlight Time

1. Roll the wheel  (you can also press  or ) to select Backlight.
2. Press the center of wheel  or  to confirm.
3. Roll the wheel  (you can also press  or ) to select from **Always ON - 5 Seconds - 10 Seconds - 15 Seconds - 20 Seconds - 25 Seconds.**
4. Press the center of wheel  or  to confirm.














Language

1. Roll the wheel  (you can also press  or ) to select Blacklight.
2. Press the center of wheel  or  to confirm.
3. Roll the wheel  (you can also press  or ) to select from **Chinese Simplified - English - Chinese Traditional.**
4. Press the center of wheel  or  to confirm.









Function Operation

System Settings

Auto Power

1. Roll the wheel  (you can also press  or ) to **Auto Power**.
2. Press the center of wheel  or  to confirm.
3. Press the center of wheel  or  to select **Auto Power**.
4. Roll the wheel  (you can also press  or ) to select from **Disable - 15 Minutes - 30 Minutes - 45 Minutes - 60 Minutes**.
5. Press the center of wheel  or  to confirm.
6. Press  to back to the previous menu.







Contrast

1. Roll the wheel  (you can also press  or ) to select **Contrast**.
2. Press the center of wheel  or  to confirm.
3. Roll the wheel  to select contrast from 0~15 levels.
4. Press the center of wheel  or  to confirm and back to the previous menu.











Function Operation

System Settings

View Firmware Version.

1. Roll the wheel  (You can also press  or ) to select **Firmware Ver..**
2. Press the center of wheel  or  to view.
3. Press  to back to the previous menu.

 
Factory Set.

1. Roll the wheel  (you can also press  or ) to select **Factory Set.**
2. Press the center of wheel  or  to confirm.
3. Roll the wheel  (you can also press  or ) to select **OK** or **cancel**.
4. Press the center of wheel  or  to confirm and back to the previous menu.

Function Operation

True Wireless Stereo Connection between two PAWATER's Connection

Note: Pair one PAWATER with your Bluetooth device before following operation.

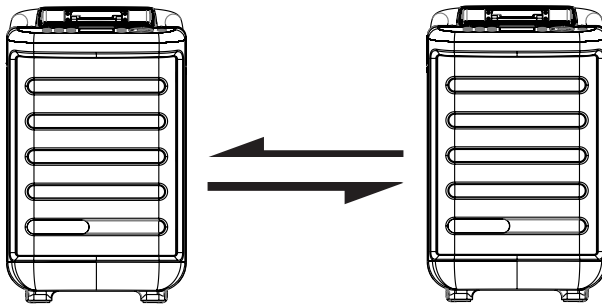

1. Turn on second PAWATER and enter bluetooth mode

1. Press  on second PAWATER, a beep sounds during connection.

2. TWS will display on the LCD of both PAWATER's if connection is successful.



Note:

- The maximum TrueWireless Stereo connection range between two PAWATER's is **10 metres**.
- The TWS connection between the two PAWATER's will not automatically reconnect after the speakers are turned off

■ Function Operation

True Wireless Stereo Connection of Two PAWATER's

TWS mode

Once two PAWATER's are connected, both of PAWATER's will play the music from you device.

Master Routing is set to Left, the Slave Routing setting is Right.




If you want to switch the True Wireless Stereo (TWS) mode, press and hold

There are 3 modeS:

 
- Master Left, Slave Right
- Master Right, Slave Left
- Master Stereo, Slave Stereo

 
Voice Assistant

Note: This function only available in Bluetooth mode.

Press  to activate your Voice Assistant (like Siri or Google Now).

Once activated, the speakerphone mic on your PAWATER will hear your voice commands and transfer them to the voice assistant on your device.

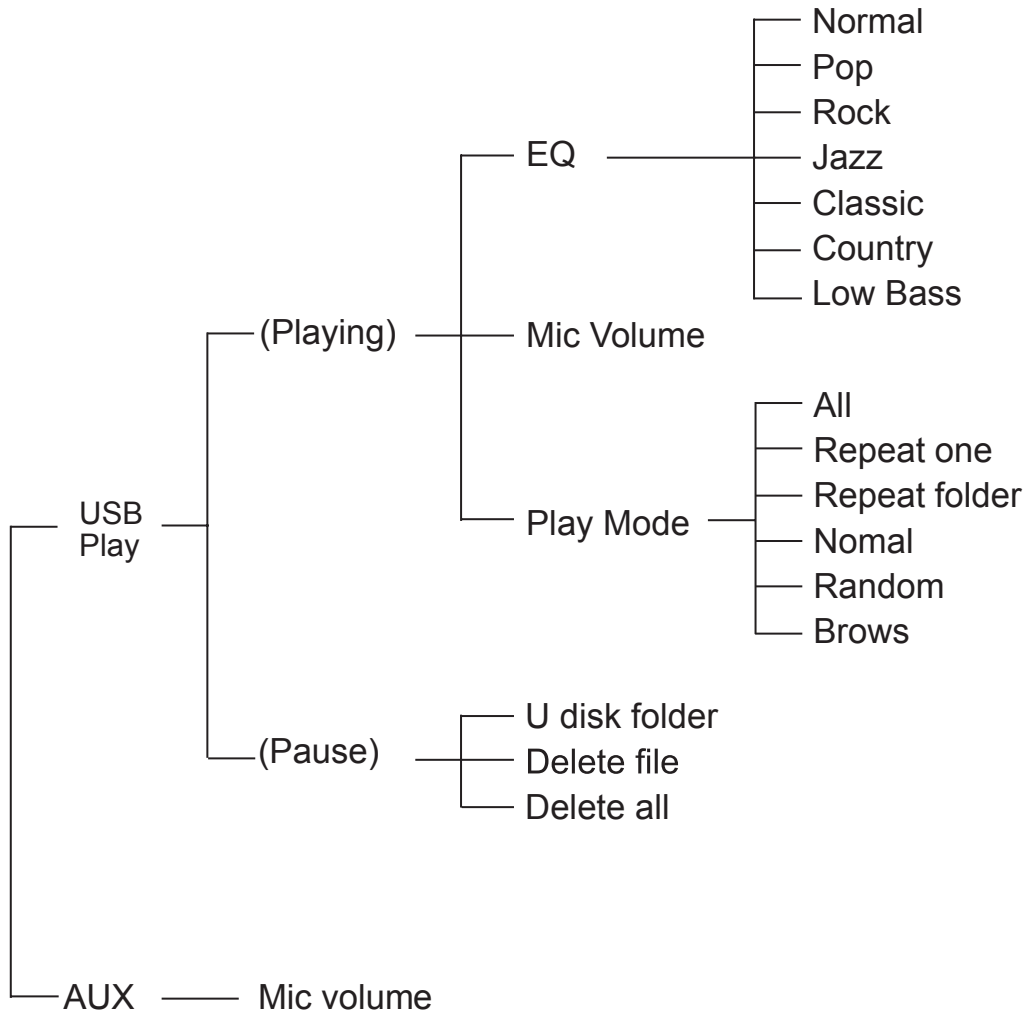

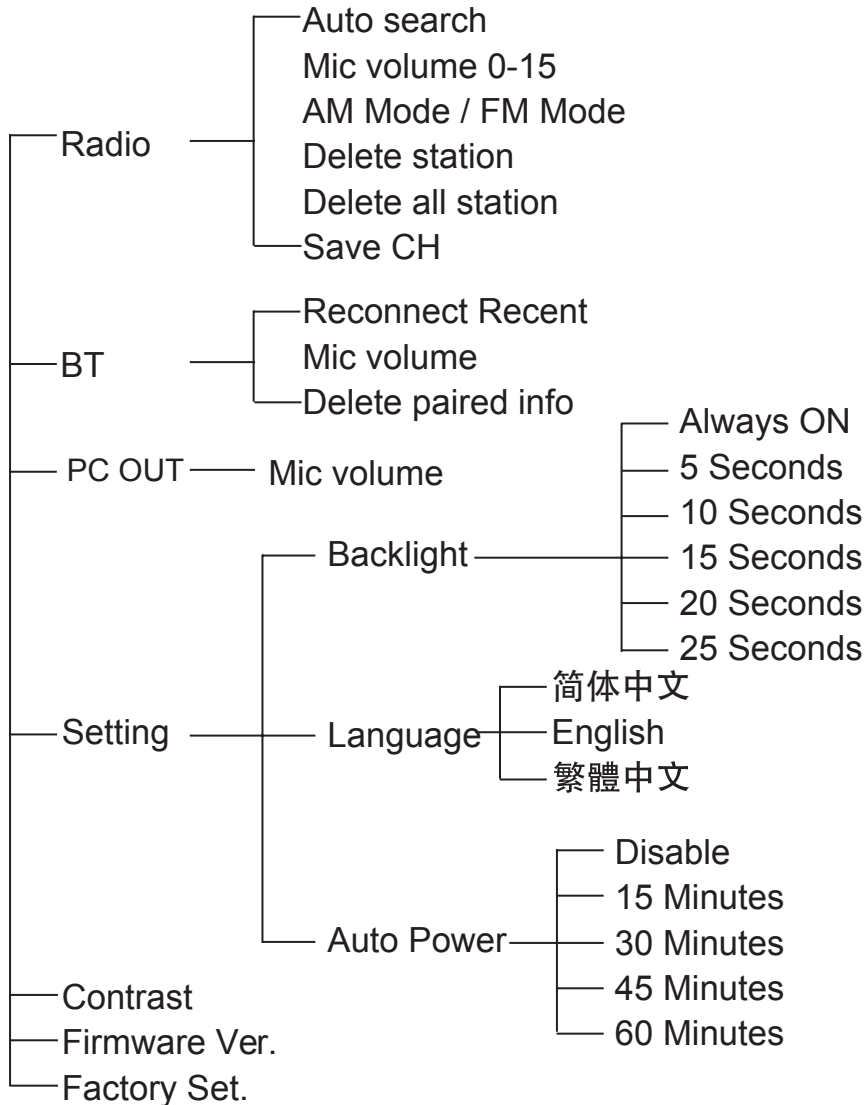

Specifications

Dustproof / Waterproof	IP67
Woofer	8" (203.2mm), 40hms/30W
Tweeter	3" (76.2mm), 40hms/15W
Amplifier	Class D
Speaker output power	100 W (peak)
S/N Ratio	90dB
Frequency Response	50Hz-20kHz
Battery	12V 7Ah lead-acid battery
Display	128x64 LED display
Bluetooth	V 4.0
Bluetooth frequency band	2.402-2.480 GHz ISM spectrum
Bluetooth Range	10m (up to 30m in open area)
TrueWireless Stereo range	10m from between two speakers
USB3	5V 2.1A, Charge, Play & Wireless Mic ready
FM	87-108 mHz
AM	500-1710 kHz
AC power input	100-230V, 50/60HZ
Fuse	Glass tube (slow-blow) Φ 5.2x20mm, 250V, 1A
Charging time	Approx 8 hours
Playing time	100 hours standby, 10+ hours play time*
Storage Temperature	-40°C to 50°C
Operating Temperature	-5°C to 35°C
Size / Weight	525mm*333mm*319mm / 13.3KG

* Hours of use will depend on the average output volume

If you need assistance setting up or using your Stadium Pro product now or in the future, call Stadium Support.

Australia

TEL: 03 – 8587 8898

FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST



Please retain this user guide for future reference.

If you would like to download a digital copy of this manual, or other Stadium manuals/software, please visit the stadiumsound.com.au website.

This manual is considered correct at time of printing but is subject to change. For latest manuals and updates refer to the website.

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author.

