

To change the tone of the drum pads, press the KIT button to cycle through the different options listed in the Drum Tone Directory.

To switch the position of the Snare and Kick pads, press the SPECIAL button.

Play along with a song or pre-recorded tracks by connecting an audio device to the MP3 input jack on the product.

Use the USB cable to connect the product to your personal computer.

Troubleshooting

If the Roll Up Drums experiences a problem, turn the product off and unplug it from the power supply (if it's plugged in), and wait approximately 5-10 seconds. Reconnect the power supply and turn the product on. This will restore the default settings.

If the Roll Up Drums makes a buzzing sound, make sure there are no other electronic devices nearby that might be causing interference and that the product is sitting on a smooth, even surface.

Sound quality issues may occur when used in a room that experiences a dramatic change in temperature or a fluctuation in humidity levels. If this happens, make sure the product is on a level surface and try the functions again. If the issues still persists, relocate to another room with more stable environmental conditions.

Care & Maintenance

Wipe the product down with a soft, dry cloth to clean. Do not submerge in water or use detergents.

After use, store the product in a cool, dry place.

Avoid exposure to high temperatures, moisture, or high levels of humidity.

Specifications

- Power: DC 5V
- Power Input/Output: 2.5W/2W
- Speakers: Built-in high quality dual speaker system with super bass effect
- Volume control: 10 levels
- Dimensions: 430x310x60mm
- Inputs: Micro USB Jack for charging/computer connectivity, MP3 Jack
- Charger not included
- Drum pads: 1 SNARE, 3 TOMS, 1 CRASH, 1 RIDE, 1 HI-HAT
- Foot Pedals: 1 BASS DRUM, 1 CLOSED HI-HAT
- Drum Tones: 5 options
- Demo song: 8 options
- Drum Rhythms: 3 options

Package Contents

- Portable electronic drum pad with built-in speakers
- Two wooden drumsticks
- Two pedals for the bass drum and HI-HAT functions
- Micro USB power cable
- Audio cable and Instruction Manual

Technical Assistance

If you need assistance setting up or using your Stadium product now or in the future, call Stadium support Australia

TEL: 03 – 8587 8898 FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST

This manual is considered correct at time of printing but is subject to change. For a copy of this manual, more information and updates please go to our website.

Copyright © 2017 by TDJ Australia

Scan QR code for more products in the STADIUM range



stadiumsound.com.au

stadium

Instruction Manual Roll Up Drums

Model: ROLDRUM



This instruction manual offers a product overview that includes operating instructions, safety precautions, functions, care and maintenance, and warranty information. Using this product for any other purpose other than those outlined in this instruction manual may void the product warranty.

Safety Precautions

When the Roll Up Drums is connected to a power source using the Micro USB power cable, make sure to remove the power cable after use. Turn off the Roll Up Drums using the power switch located on the back of the product.

Be sure to place the unit on a flat surface and do not move the product when in use, as doing so may cause the product to function improperly.

Never scratch the product with sharp objects as rips or tears may cause permanent damage to the product.

When storing the product, you can roll it up, but be sure not to fold or over-bend the drum pads, as this can damage the product and cause it to stop working properly.

Handle with care-do not damage the connection between the drum pads and built-in speakers.

Avoid exposing the product to strong electromagnetic waves.

Do not modify, disassemble or attempt to disassemble this product.

Handle with care and avoid any drops or impacts.

Avoid exposing the product to environments with excessive moisture, humidity, or dust/dirt.

Product Overview



Number	Label	Functions
1	ON/OFF	Power switch
2	USB/DC 5V	USB power supply connection
3	MP3	MP3 player input connection (Control MP3 volume with the MP3 device)
4	PHONES	Audio output connection port for use with personal headphone or speaker system
5	PEDAL	Connection port for dual-pedal interface of HI-HAT control and Kick control. When the HI-HAT pedal is pressed, it produces a closed HI-HAT tone; when the HI-HAT pedal is not pressed, it produces an open HI-HAT tone. When the KICK pedal is pressed, it produces the BASS DRUM tone. This creates a realistic drum set effect with dual-pedal interaction

Number	Label	Functions
6	KIT	Press this button to cycle through and select the different tones
7	CLICK	Press this button to cycle through three different metronome patterns: 4/4, 3/4, and 6/8 time. To stop the metronome, press the Play/Stop button.
8	PLAY/STOP	Play and stop demo song or metronome pattern
9	DEMO	Press this button to cycle through, select and play the available demo songs
10	SPECIAL	Swap the positions of SNARE and KICK pads
11	VOLUME +	Volume up
12	VOLUME-	Volume down

Functions Of LED Light

The first and last LED lights on the front of the speaker (numbers 13 and 17 on the diagram above) will illuminate when the user plays the Roll Up Drums.

The second LED light (number 14 on the diagram above) will turn on when the drum kit is powered on, to indicate that the device is currently working and receiving power.

The forth LED light (number 16 on the diagram above) will turn on when the drum kit is powered by external power, to indicate that the device is currently charging.

Drum Tone Directory (KIT Button)

The list below shows the order in which the KIT button will cycle through the different drum tones that are available. After the 5th option, pressing the KIT button again will cycle back to the 1st Option.

1st	POP	2nd	ROCK
-----	-----	-----	------

3rd	LATIN	4th	ELECTRO/EDM
5th	PERCUSSION		

Demo Song Directory

The list below shows the order in which the DEMO button will cycle through the different demo songs that are available. After the 8th option, pressing the DEMO button again will cycle back to the 1st option.

1st	HEAVY ROCK	2nd	FUNK
3rd	LATIN	4th	DANCE
5th	SAMBA	6th	CHA-CHA
7th	SWING HI-HAT	8th	UPBEAT ROCK

Using the Roll Up Drums

Plug the USB cable into the computer's USB port or a USB wall adapter that plugs directly into an outlet to provide power to the drum pad.

To record songs played on the product, recording software is needed. To use the product to record songs on a computer, plug the USB power cable into a USB port on a computer.

Use the ON/OFF switch on the back of the built-in speakers to power on or power off.

Use the PHONE JACK to connect headphones, Use the volume keys to adjust the headphone or built-in speaker volume.

Press the CLICK button to start the metronome in 4/4 time. Press it again to cycle through the different time signatures (4/4, 3/4 and 6/8).

Use the DEMO button to cycle through and listen to the different Demo songs available. To stop the Demo song from playing, press the PLAY/STOP button.