

## Playback the recording.

To play along to a demo song, press the Demo button to cycle through the different options as listed in the Demo Song Directory, and press STOP button to stop the demo playing.

To change the tone of the keyboard, press the Tone button to cycle through the different options listed in the Keyboard Tone Directory.

## Care & Maintenance

Wipe the keyboard down with a soft, dry cloth to clean. Do not submerge in water or use detergents.

After use, store in a cool, dry place.

Avoid exposure to high temperatures, moisture, or high levels of humidity.

## Specification

- Power: DC 5V (Wall USB power supply sold separately)
- Speakers: Built-in high quality stereo speaker system
- Battery: 4 AAA batteries (enables 10-12 hours playing), not included
- Piano Tones: 8 options
- Demo Songs: 6 options

## Tone Directory

Preset	Tone	Preset	Tone
1st	Acoustic Grand Piano	2nd	Orchestral Harp
3rd	Church Organ	4th	Tubular Bell
5th	Electric Guitar (jazz)	6th	Violin
7th	String Ensemble 1	8th	Acoustic Guitar (steel)

## Demo Song Directory

Preset	Name	Preset	Name
1st	Somewhere the Peach Blossoms Bloom	2nd	Tibet Plateau
3rd	Heart Rain	4th	Kangding Love Song
5th	Mariage d'amour	6th	For Elise

## Technical Assistance

If you need assistance setting up or using your Stadium product now or in the future, call Stadium support Australia

TEL: 03 – 8587 8898 FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST

This manual is considered correct at time of printing but is subject to change. For a copy of this manual, more information and updates please go to our website.

Copyright © 2017 by TDJ Australia

Scan QR code for more products in the STADIUM range



[stadiumsound.com.au](http://stadiumsound.com.au)



# Instruction Manual Portable Electronic Drum Pad

Model: ROLPIANO



This Instruction Manual provides a detailed overview of the Electronic Roll-Up Piano, its functions, features, as well as safe operation. Using this product for any purpose outside the scope of this instruction manual may void the product warranty.

Read all directions carefully and keep this manual as reference.

## Safety Precautions

Please remove the AAA batteries after using to avoid leakage.

Do not install rechargeable batteries in this device, only regular alkaline batteries will function properly. Do not mix regular alkaline batteries with rechargeable batteries. Do not mix the new batteries with old batteries; Please note that when the USB power cable is connected, the battery power will be cut off automatically.

When finished using the keyboard, be sure to disconnect the USB power cable and turn off the power with the Power button.

Use on a level surface for optimal experience.

Prevent the keyboard from coming in contact with any sharp objects. Any rips or tears may cause the product to malfunction or cause permanent damage.

When storing, roll the keyboard up gently. Excessive or forcible bending of the keys may damage the product and void the warranty.

Do not pull or twist the connection area between the keys and the control box to prevent damage.


Avoid exposing the product to strong electromagnetic waves.

Do not disassemble, attempt to disassemble or modify the product in any way, may void the warranty.

Handle with care and avoid any drops or impacts.

Avoid exposing the product to environments with excessive moisture, humidity, or dust/dirt.

## Product Overview

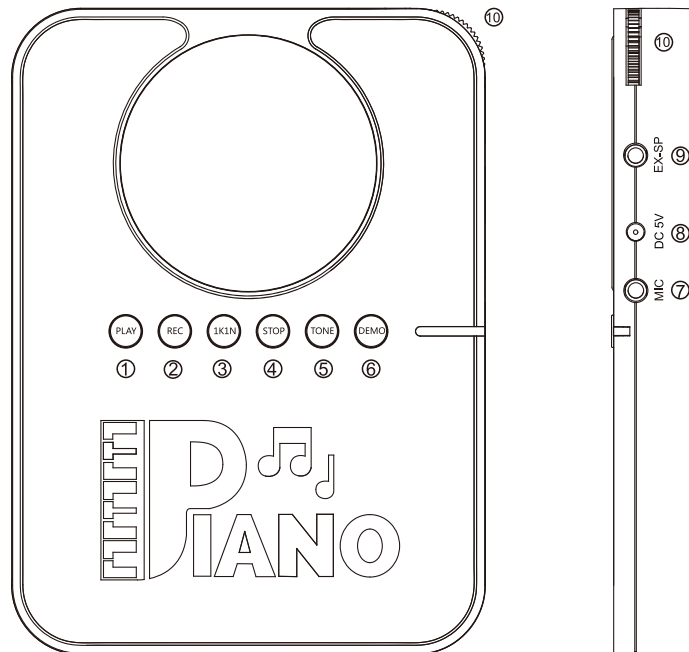

Number	Label	Functions
①	PLAY	Play the recording notes after recording
②	REC	Record the notes

③	1K1N	Press "1K1N" to activate song learning mode. Press any coloured key to select a preset song. Then press the piano keys to play/practice over the top of the backing music. After the end of the song, press any coloured key to select up to 6 preset songs.
④	STOP	Press this button to stop demo song or other.
⑤	TONE	Press this button to cycle through and select the different tone available for this piano.
⑥	DEMO	Press this button to cycle through, select and play the available demo songs.
⑦	MIC	Connect with microphone.
⑧	DC 5V	Power supply connection. (USB power supply sold separately)
⑨	EX-SP	Audio output connection port for user with personal headphone or external speaker system.
⑩	SW/ Volume	Power switch and volume control.

## Using the Roll Up Piano

Either install 4x AAA alkaline batteries (not included) in the battery compartment on the back on the product, or plug the supplied power cable into a computer's USB port or a USB wall adapter (not included) to provide power to the piano.

Turn the SW/ Volume switch until it clicks to turn the piano on or off. Once it is on, you can connect headphones, external speakers or use the Volume buttons to adjust the built-in speakers.

Turn the SW/ Volume dial to the right or left to adjust a suitable volume level. To record yourself playing, press REC button. Press the Play button to playback recording.