 


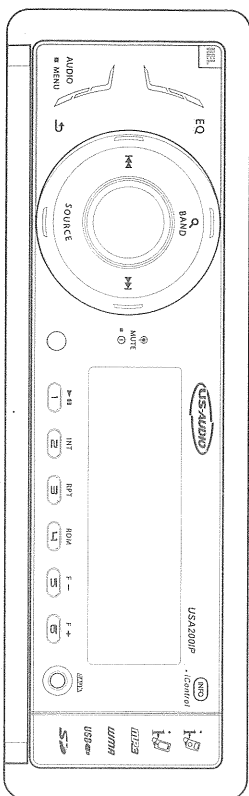

INSTRUCTION MANUAL

 
Model.: USA200IP

SUPPORT USB/SD INTERFACE
iPod/iPhone FULL CONTROL
CAR MP3/WMA PLAYER/RECEIVER



WMA MP3 USB SD
UNIVERSAL SERIAL BUS

3. THE MAJOR FUNCTION OF THIS UNIT

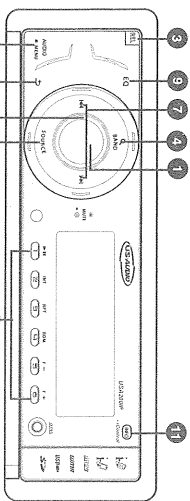


No.	Item	Descriptions														
1	MUTE	Short press this button to turn the Mute On/Off.														
2	POWER	Press this button to turn the unit on. Press & hold this button again to turn the unit off.														
3	AUDIO MENU	Press this button to access into the Audio Menu mode to adjust the below options: EQ(Preset Equalizer)/BAS(X-Bass)/ BAS(Bass Level)/TRE(Treble Level)/BAL (Balance)/FAD(Fader)														
4	SYSTEM MENU	Press & hold this button to access into the System Menu.														
5	REL	Press this button to open the control panel.														
6	BAND	Short press this button to change between BAND FM1,FM2,FM3, AM1(MW1) or AM2 (MW2).														
7	Q	Under media playback mode, press this button to access into the direct line number searching. Press this button twice to access into the Music Folder/File searching mode. Rotate the encoder knob to navigate thru Folder and File list. Once the desired file appears on the LCD, press Power/ Mute button to confirm and start the file playback.														
8	BACKWARD	momentarily to fast forward/backward.														
9	PRESET NUMERIC BUTTONS	Under Tuner mode, short press the Numeric buttons to recall the preset stations. Press & hold the Numeric buttons to store the listening station. Under media playback mode, short press the Numeric buttons to perform the below operation: <table><tr><td>Number</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td></tr><tr><td>Button</td><td>Repeat</td><td>Play</td><td>Pause</td><td>Stop</td><td>Folder Up</td><td>Folder Down</td></tr></table>	Number	1	2	3	4	5	6	Button	Repeat	Play	Pause	Stop	Folder Up	Folder Down
Number	1	2	3	4	5	6										
Button	Repeat	Play	Pause	Stop	Folder Up	Folder Down										
10	EQ	Press this button to select the preset Equalizer setting:EQ OFF -> CLASSIC -> POP -> ROCK menu or mode.														
11	INFO	Short press this button to quick return to previous menu or mode.														
12	INFO	Press this button briefly into the Clock mode.														
13	INFO	Under media playback mode, press this button repeatedly to display ID3 information. Clock->Play time->Folder->Album->Song->Artist Under iPod mode, press this button enter into the iPod control mode.														

1. INSTALLATION


The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your customer car audio dealer or a company supplying kits. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

 To attach the front panel, please insert the right side of the panel in the chassis until it is correctly engaged. Press the left side of the panel until the mechanism locks it into place.


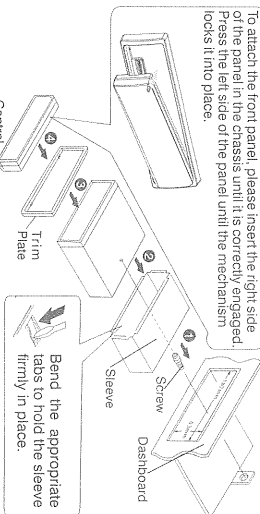


Remove the unit

 1. Press the Panel Release button.
2. Push the left side of the panel rightward
3. Pull the panel towards you to disengage it from the chassis.

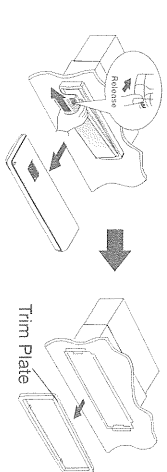

  2. CONNECTING THE SYSTEM

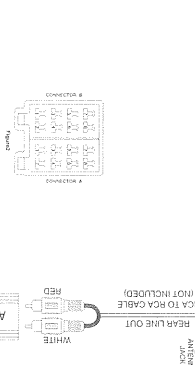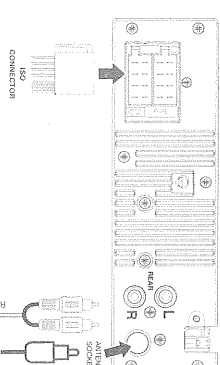

Pin	Function	Pin	Function
1	Power	11	Power
2	Ground	12	Power
3	Power	13	Power
4	Power	14	Power
5	Power	15	Power
6	Power	16	Power
7	Power	17	Power
8	Power	18	Power
9	Power	19	Power
10	Power	20	Power

4. ADJUST SYSTEM MENU SETTING

Press and hold AUDIO/MENU button to access into the System Menu. Press **14/15** repeatedly to select the item to be adjusted, then Rotate Encoder/Volume knob to select a value / option.

AS STORE (Auto Store)

Under the Tuner mode, press the Power/Mute button to access into the Auto Store mode. The six strongest stations of the selected band are saved in preset channel automatically: FM1, FM2, FM3(1-6), AM1, AM2.

SEEK DX (Local/Distance Select)

This feature is used to designate the strength of the signals at which the radio will stop during automatic tuning. "Distance" is the default, allowing the radio to stop at a broader range of signals. To set the unit to select only strong local stations during automatic tuning, rotate the Encoder Volume knob until "LOC" appears in the display.

AREA (Tuner Frequency Spacing)

This option allows the selection of the frequency spacing appropriate for your area. AREA U.S.A. is the default setting. Rotate the Encoder Volume knob to select the U.S.A., LAT(Latin), EUR(Europe) or RUS(Russia) options.

TIME SET

The time on the clock will be set to 12:00 as the default. Program the current time by rotating the volume control clockwise to adjust the minutes and counter clockwise to adjust the hours.

BEEP ON/OFF (Beep Tone)

The beep tone feature allows the selection of an audible beep tone to be heard each time a button is pressed on the face of the radio. "Beep Off" is the default display. Rotate Encoder Volume knob to select the "Beep Off" option.