

**INSTALLATION INSTRUCTIONS**


**AWCH01**

HONDA CIVIC 2016>


**NOTE:** Instruction diagrams from Step 26 onwards, show a European Left Hand Drive Vehicle. The application is the same for Right Hand Drive Vehicles

**PARTS LIST**

Wireless charger attachment kit  
Upper silicone mat  
Upper tray mat and Wireless charger unit

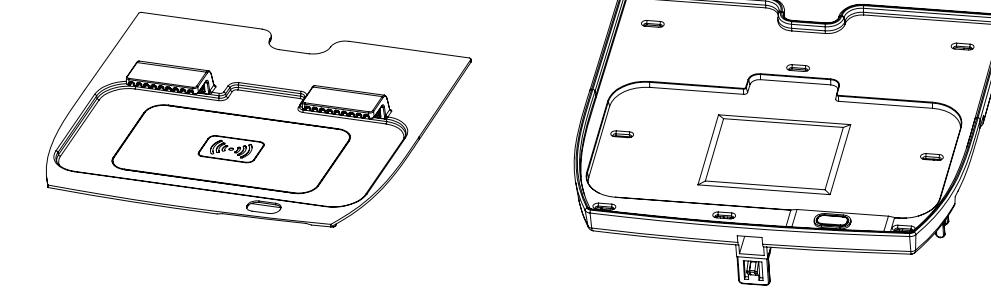

Wireless charger harness

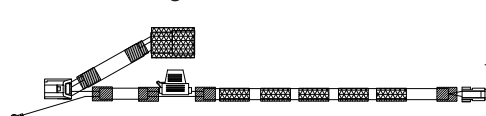


Wire ties



**TOOLS AND SUPPLIES REQUIRED**

- Phillips screwdriver
- 10 mm Open end wrench
- Ratchet
- 10 mm Socket
- Masking tape
- Scissors
- Diagonal cutters
- Isopropyl alcohol
- Shop towel

Illustration of the Wireless Charger Installed in the Vehicle

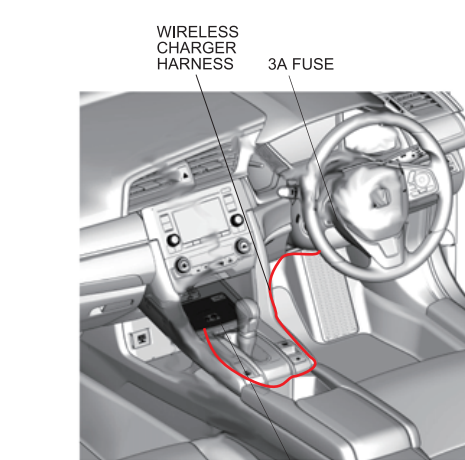

**INSTALLATION**

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by do-it-yourselfers.  
Some of the diagrams used in this installation manual show the European left hand drive vehicles. The application is the same for right hand drive vehicles.

1. Disconnect the negative cable from the battery.

2. Remove the driver's dashboard lower cover, unplug the vehicle connectors, and aspirator hose.

3. Remove the left console armrest.

4. Attach masking tape to the area shown.

5. Remove the left center console trim.

6. Remove the right console armrest.

7. Attach masking tape to the area shown.

8. Remove the right center console trim.

9. Remove the A/C control unit, and unplug the vehicle connectors.

10. Remove the console rear panel, and unplug the vehicle connectors, if equipped.

11. Remove the shift lever console panel.

12. Remove the upper tray mat.

13. Remove the console panel.

14. If equipped, remove the lower tray mat.

15. Using a plastic trim tool, remove the switch panel, and unplug the vehicle connectors.

16. If equipped, release the vehicle clip, and unplug the vehicle connector.

17. Remove the lower tray.

18. Remove the left side panel.

19. Remove the right side panel.

20. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the urethane tape will attach.

21. Using scissors, cut one urethane tape in half, and attach one piece of urethane tape to the vehicle panel.

22. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the urethane tape will attach.

23. Attach one piece of urethane tape to the vehicle panel.

24. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the fuse label will attach.

25. Attach the fuse label to the wireless charger harness fuse case.

26. Plug the wireless charger harness 4-pin connector into the fuse box.

27. Line up the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

28. Secure the wireless charger harness to the vehicle harness with one wire tie.

29. Plug the wireless charger harness 6-pin connector into the vehicle 6-pin connector.

30. Attach the wireless charger harness 6-pin connector to any of the positions shown.

31. Remove the vehicle ground bolt, and install the wireless charger harness ground terminal with vehicle ground bolt as shown. Do not put the ground terminal caking on top of one another.

32. Route the wireless charger harness as shown. Line up the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

33. Secure the wireless charger harness to the vehicle harness with two wire ties.

34. Secure the wireless charger harness to the wireless charger harness 6-pin connector with one wire tie with clip B.

35. Secure the wireless charger harness to the vehicle harness with two wire ties. Go to step 40.

36. Route the wireless charger harness as shown. Line up the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

37. Secure the wireless charger harness to the vehicle harness with three wire ties.

38. Secure the wireless charger harness to the wireless charger harness 6-pin connector with one wire tie with clip B.

39. Secure the wireless charger harness to the vehicle harness with two wire ties.

40. Route the wireless charger harness along the vehicle harness as shown.

41. Route the wireless charger harness as shown.

42. Route the wireless charger harness as shown. Line up the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

43. Secure the wireless charger harness to the vehicle harness with two wire ties.

44. Secure the wireless charger harness to the vehicle panel with one wire tie.

45. Secure the wireless charger harness to the vehicle harness with two wire ties.

46. Route the wireless charger harness as shown.

47. Reinstall the left and right side panels and the lower tray.

48. Attach one wire tie with clip A to the white tape on the wireless charger harness, secure the wire tie with clip A to the lower tray. If the vehicle is equipped with the accessory light, secure the wireless charger harness to the vehicle harness with one wire tie with clip A.

49. Reinstall the switch panel, the lower tray mat, and the console panel.

50. Plug the wireless charger unit 2-pin connector into the wireless charger unit.

51. Install the upper tray mat to the console panel with five clips.

52. Plug the 20A blade fuse into the fuse box. If the 20A fuse is already plugged, do not plug the 20A blade fuse.