


Aerpro Stands for Repco

Components:

6 x "L shaped" legs



6 x Leg Extensions



6 x Leg Joiners with 6mm Hex Bolts



3 x Rectangular Base



3 x Triangular Base




24 x Slats (3 x 8pcs)




3 x Rounded Header Display



3 x Opaque Perspex

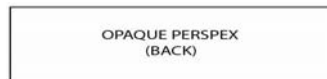

3 x Clear Perspex Covers

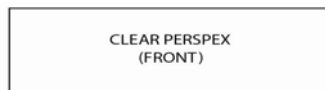


3 x Display Header Stickers




3 x Black tape strips



65 x Small Hooks



10 x Large Hooks



Assembly:

1. Remove hex bolts from leg joiner
2. Insert leg joiner in “L Shaped” leg and bolt through hole provided until flush with “L Shaped” leg.
3. Attach leg extension to joiner and insert second bolt through hole provided until flush with leg extension.
4. Attach 1 x slat to base of legs, attach rectangular base and attach one triangular base for support.
5. Repeat steps 1 to 4 until you have 3 stands in a triangle.
6. Join all 3 stands using triangular bases.
7. Attach remaining slats (8 per stand)
8. Attach each rounded header display
9. To make header display: lay out all 3 pieces of opaque perspex length ways. Peel display sticker back and starting 50mm in from the edge, attach to opaque perspex whilst applying with a ruler to ensure there are no bubbles. It will overlap by approximately 50mm to the next piece of perspex. Continue with remaining stickers until last piece of sticker is overhanging (keep backing on last bit of sticker) then insert into rounded header display, peel last bit of sticker away and attach to first piece of perspex completing the circle.
10. Remove brown covering from all 3 pieces of clear perspex and insert into rounded header display.
11. Use black tape to cover top and bottom gap between each header runner edge.
12. Secure tops of each leg together using a metal clip or cable tie.
13. Attach hooks and merchandise as per plan-a-gram.

Please call Sam on 03 8587 8889 if you have any questions.