

USER/INSTALLATION MANUAL

INSTALL KIT
TO SUIT **FALCON**

BA-BF

& TERRITORY

SX-SY


Product and Install Information

If you would like to find more information on this product or download an up to date digital copy of this manual, please visit the <https://aerpro.com> website and search for your model or scan the QR code below.

<https://aerpro.com/FP9750GK>



<https://aerpro.com/FP9750SK>

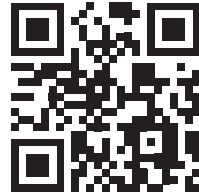

<https://aerpro.com/FP9750PB>



An installation and setup video is also available on our site




Inclusions

- 1 x Double DIN facia kit
- 1 x Built-in HVAC and steering wheel control unit
- 1 x Main wiring harness
- 1 x Universal SWC patch lead
- 1 x Video in/out lead
- 1 x Mounting kit
- 4 x M6 Bolts
- 1 x User/Install manual



Product Structure

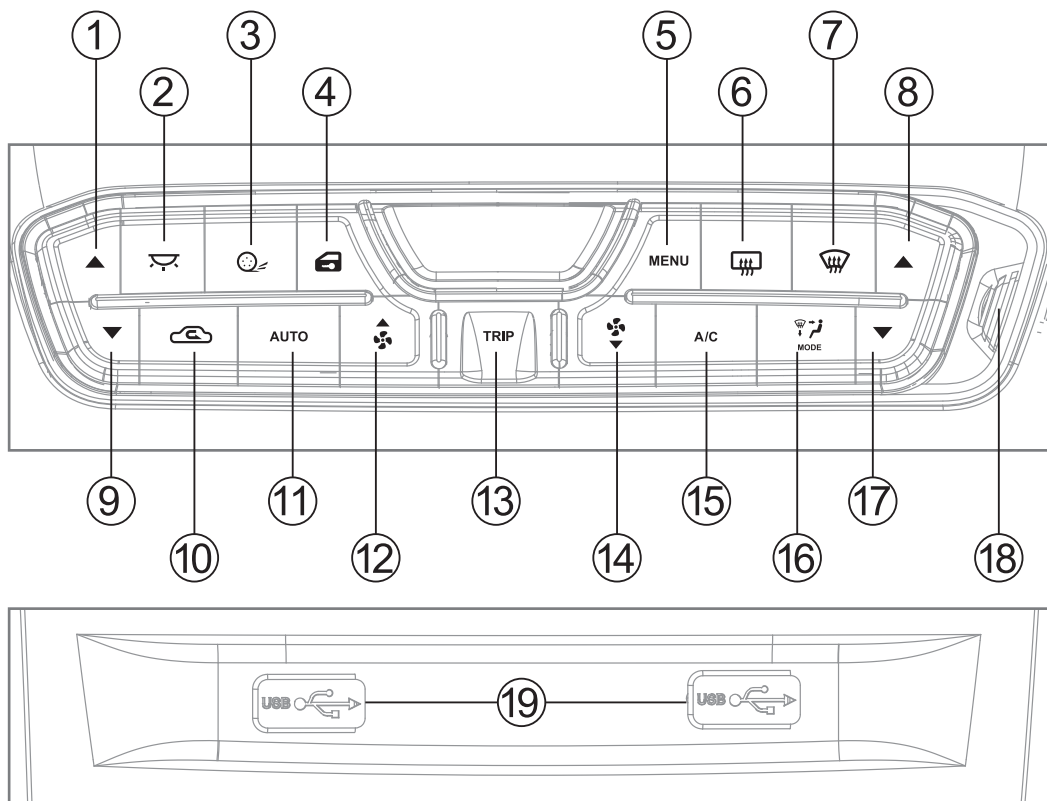


- | | | |
|------------------------------------|--------------------------------------|--|
| 1. Temperature UP (Passenger side) | 7. Front demister | 13. Trip computer |
| 2. Interior light | 8. Temperature UP (Drivers side) | 14. Fan speed DOWN/ Menu Navigation |
| 3. Traction control | 9. Temperature DOWN (Passenger side) | 15. Air conditioner ON/OFF |
| 4. Auto door lock | 10. Air circulation | 16. Mode |
| 5. System menu | 11. Auto climate control (Dual Zone) | 17. Temperature DOWN (Drivers side) |
| 6. Rear demister | 12. Fan speed UP/ Menu Navigation | 18. Temperature Sensor |
| | | 19. USB passthrough (headunit dependant) |

Interface Functions

NOTE: The Climate control buttons will not work without ignition power, including Door Lock & In-Cabin Light



Front Demister

Fresh air is blown through the heater core and then ducted to and distributed over the interior surface of the vehicles windshield

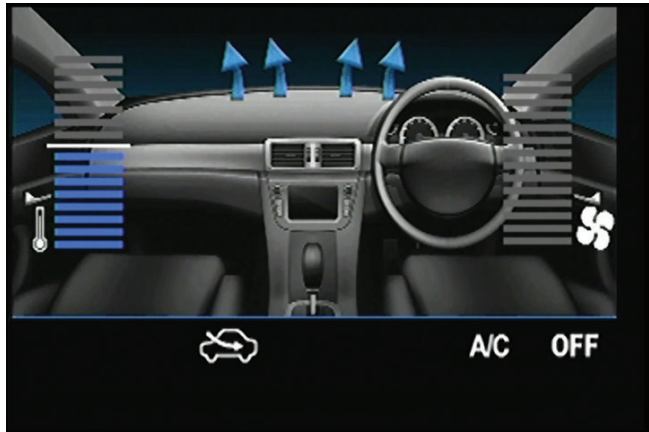

Rear Demister




The demister clears condensation from the rear back glass and is used for Remote Key Learning (See page 19 of this manual)

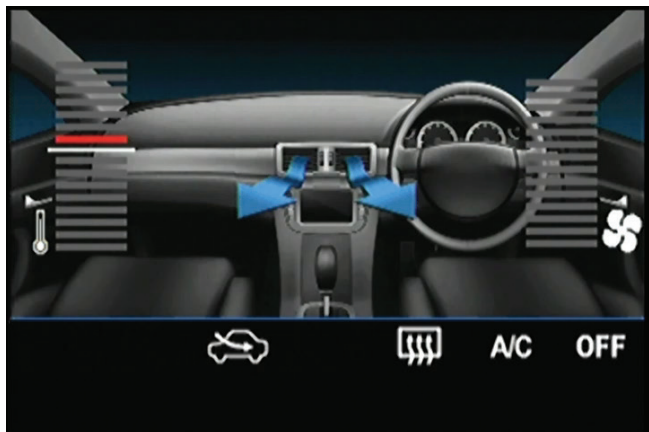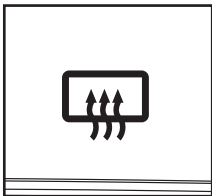

Interface Functions

Air Circulation Mode






Changes between fresh air drawn in directly from the outside of the vehicle, or recirculation where the air is drawn from inside the cabin

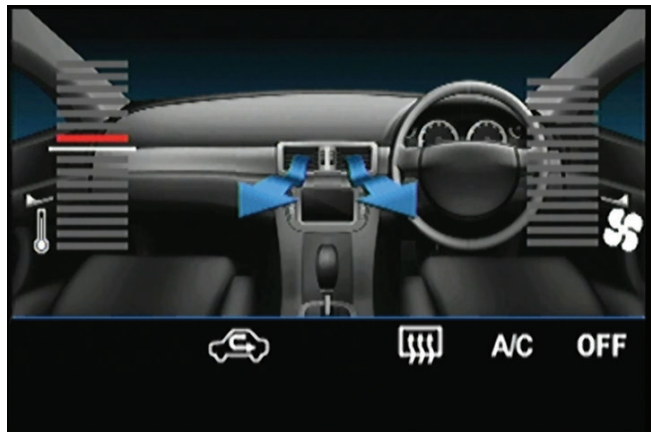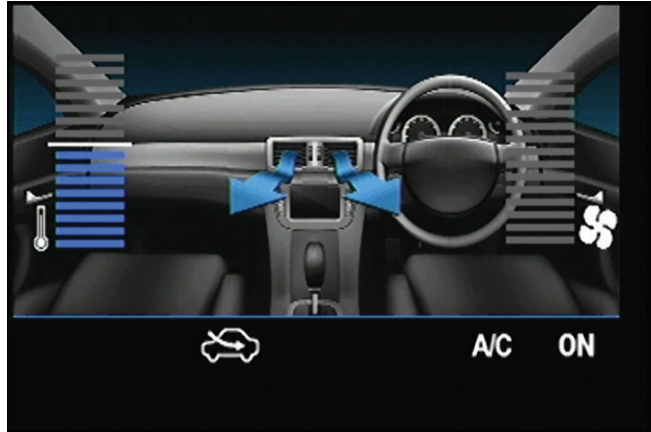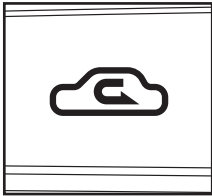

Interface Functions

Mode




Changes the vent positions for heating and cooling

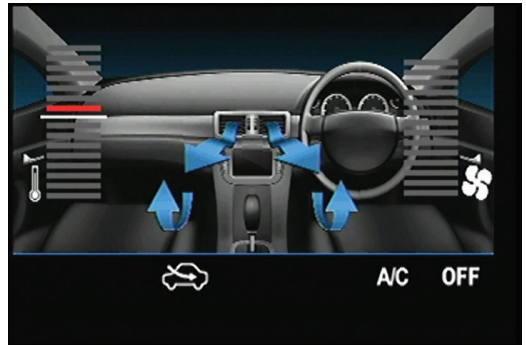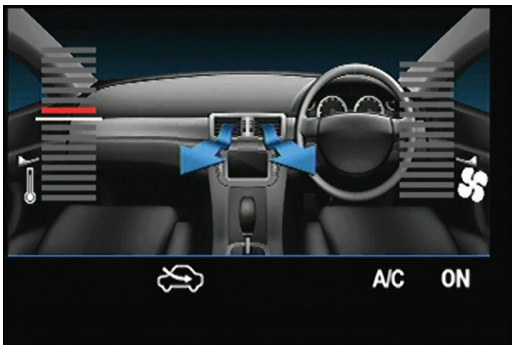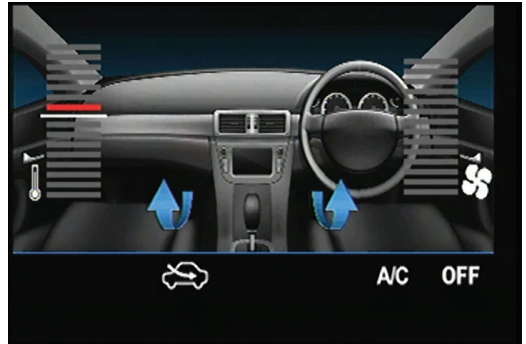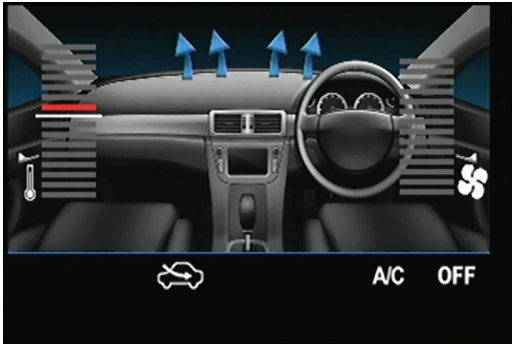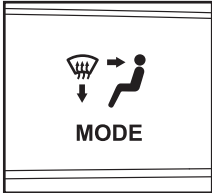

Interface Functions

Heating & Cooling Temperature



Press up to increase temperature, press down to decrease temperature. Left hand side buttons adjust passenger side (Front & Rear). Right hand side buttons adjust drivers side (Front & Rear) temperature settings

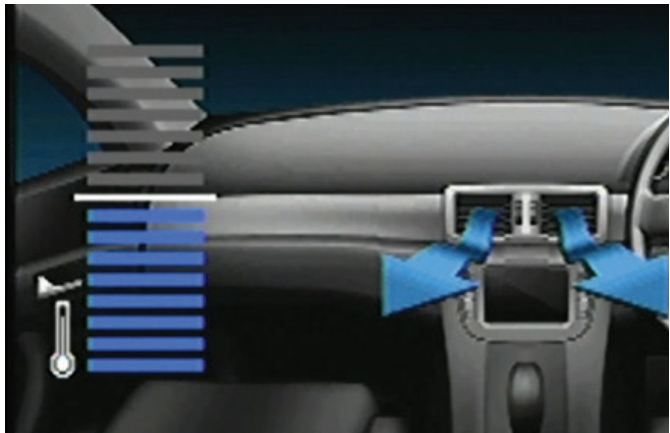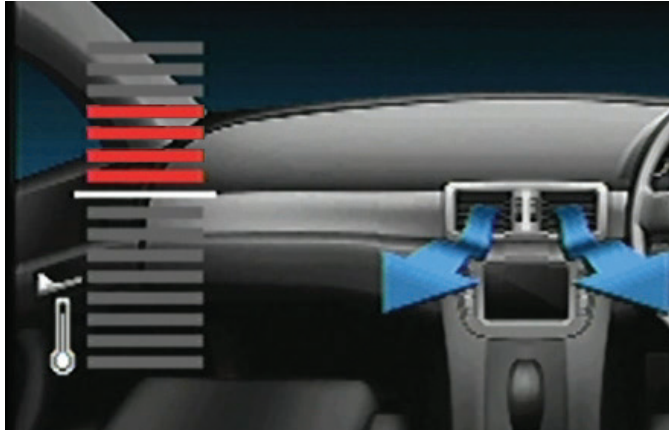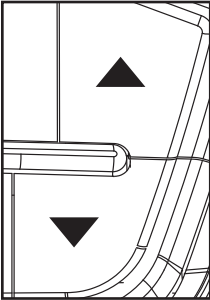

Interface Functions


Air conditioning On or Off

Press to turn the air conditioning On/Off or vice versa. This can be changed and reversed in the setup menu. **NOTE: Holding down the A/C button completely turns the A/C heating and cooling system off on Dual Zone models**

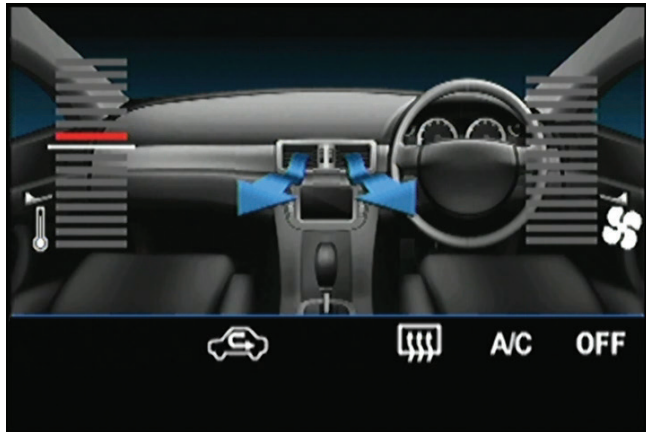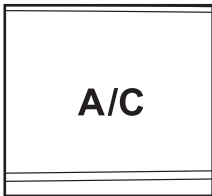

Fan Speed Adjustment

Pressing these will turn the fan speed up and down. **NOTE: With the A/C on and fan speed set to zero, there still will be a small amount of cold air pushed out through the vents**

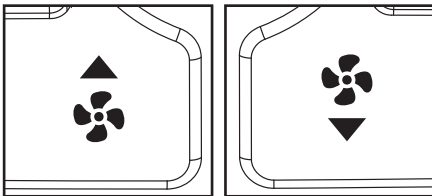


Interface Functions

Trip Computer

This displays information relating to Average speed, Average fuel use, Trip time, current fuel use and remaining fuel in kilometres. Pressing the trip button in this menu will allow you to cycle through the different trip related information for reset. First the average speed will begin to blink. Hold down the trip button to reset the average speed. A beep sound will confirm reset. Tapping the Trip button will move onto the next trip setting for reset. Once you have cycled past the time information and it is no longer blinking, hold down the Trip button to exit.

NOTE: Trip button only works when not in the climate control display or settings menu.

Trip Reset and current fuel consumption only works for dual zone models.


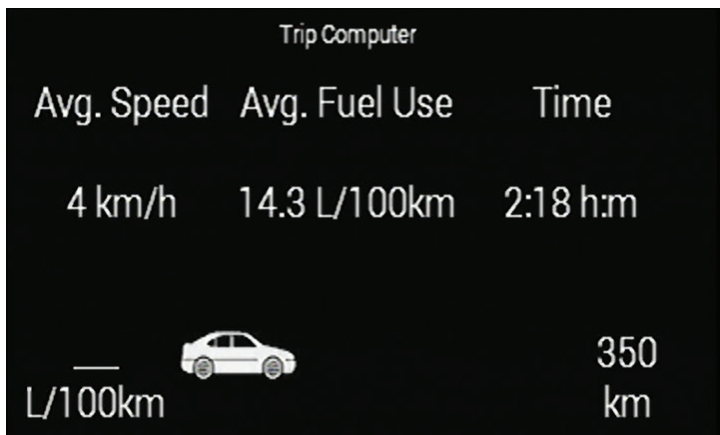


Interface Functions

Auto Function

Press to automatically control the climate control to a specified temperature.

NOTE: This will only work on Dual Zone models

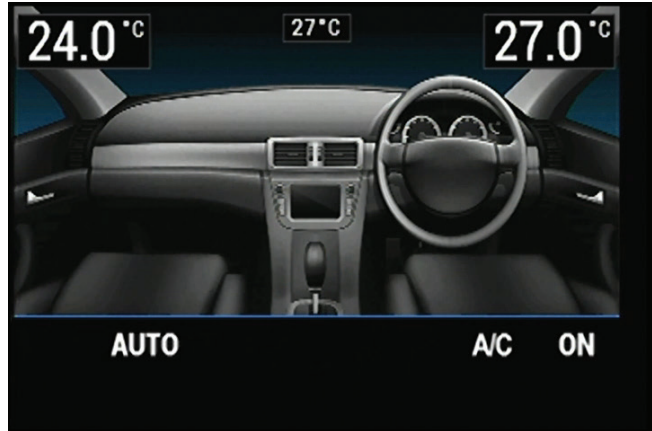
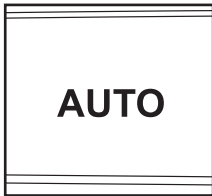


Interface Functions

Auto Function (Semi Auto)

Press to manually control the climate control to a desired temperature.

NOTE: This will only work on Dual Zone models

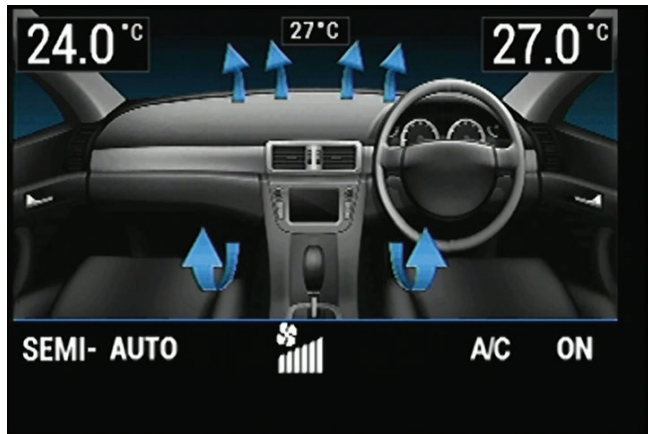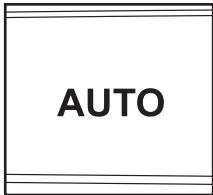

Press again to turn the climate control off




Interface Functions

NOTE: The Climate control buttons will not work without ignition power, including Door Lock & In-Cabin Light

Auto Door Lock


Press to lock and unlock all doors in the vehicle

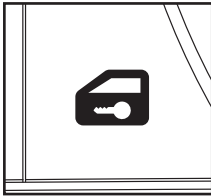

Traction Control

Press to turn vehicles traction control on or off

NOTE: Only works on supported models prior to upgrade

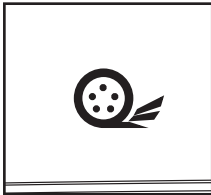

Interior Light




Press to turn the vehicles factory interior light on or off



Menu Functions


Configuration Menu

Press and hold the menu button for a few seconds to display the Configuration Menu. Press menu button to enter into sub menus and again to change settings. Press the Fan UP/DOWN buttons to navigate up and down between sub menus

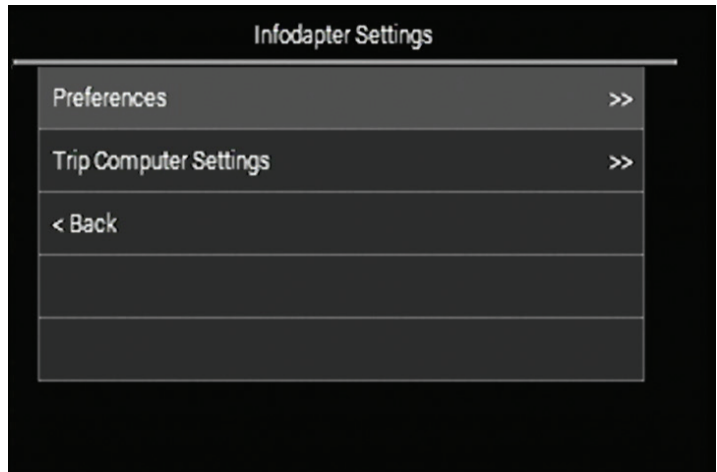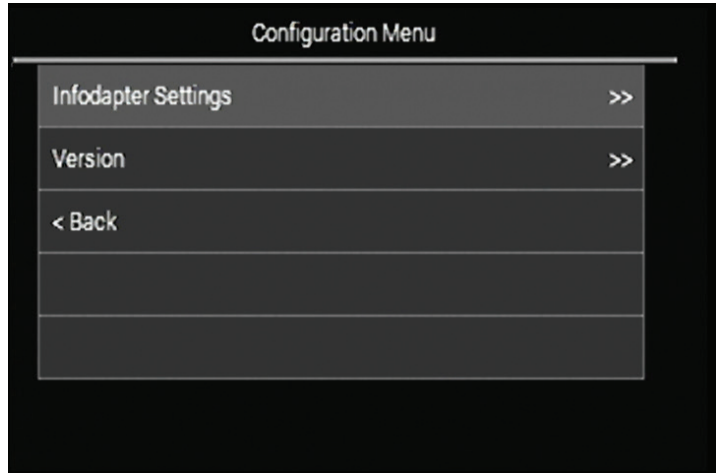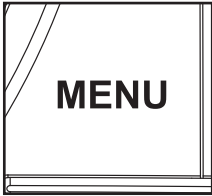

Menu Functions

Select Infodapter settings/preferences to access (4 menus)

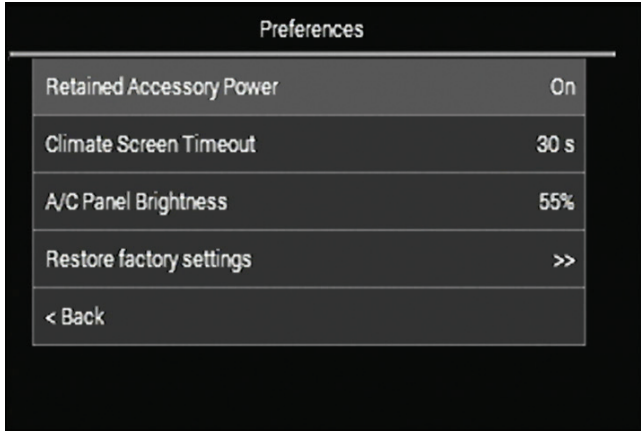

Retained Accessory Power

Controls what the headunit does after the vehicle is turned off. When Off is selected the headunit will turn off when the key is taken out of the ignition. When ON is selected the headunit will turn off when the key is taken out of the ignition and the drivers door is opened

Climate Screen Timeout

Adjust the time it takes the Infodapter screen to return to the Headunit Screen

A/C Panel Brightness


Used to adjust the brightness of the LED back light of the climate control buttons

Restore Factory Settings

Restore all factory settings to default

Menu Functions

Select Infoadapter settings/trip computer settings to access (5 menus)

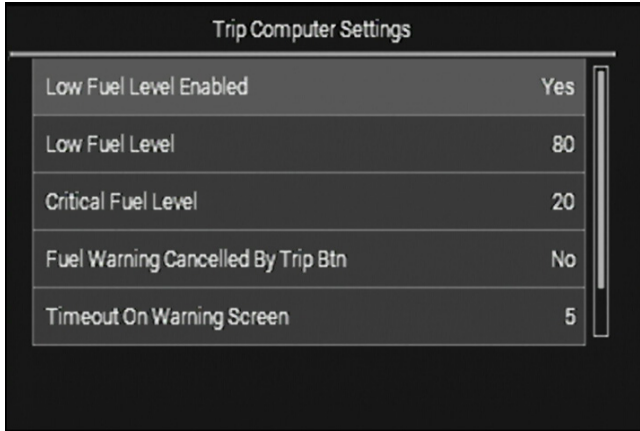

Trip Computer Settings	
Low Fuel Level Enabled	Yes
Low Fuel Level	80
Critical Fuel Level	20
Fuel Warning Cancelled By Trip Btn	No
Timeout On Warning Screen	5

Low Fuel Level Enabled

Display Trip Computer warning when Range drops below specified value

Low Fuel Level

Value of Range left in vehicle before Low Fuel warning appears

Critical Fuel Level

Value of Range left in vehicle before Critical Fuel warning appears

Fuel Warning Cancelled By Trip Btn

If enabled, pressing the Trip Button when a low fuel warning appears will cancel the warning and return you to the previous screen



Timeout On Warning Screen

Time it takes for display to return to previous screen from the Trip Computer

Menu Functions

Installer Menu

When in the configuration menu, press and hold the fan UP/DOWN buttons at the same time to access the installer menu

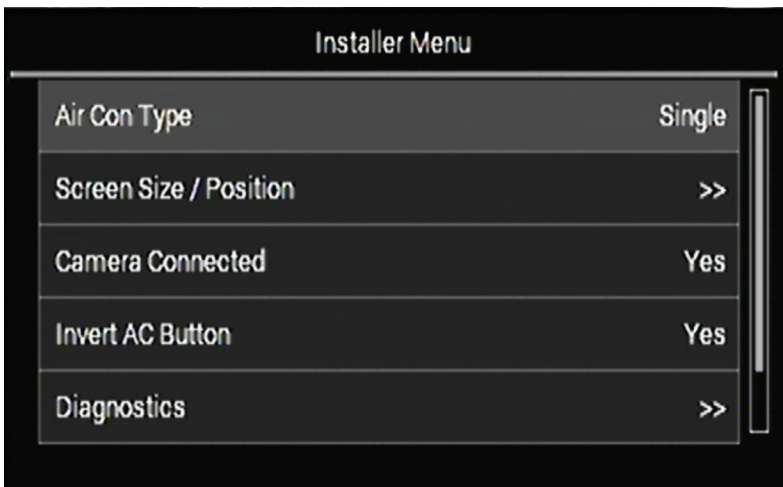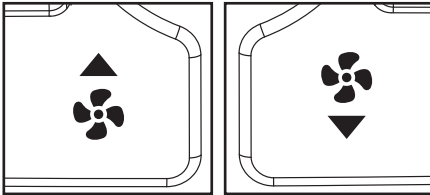


Air Conditioner Type

Choose between a single or dual climate system. **NOTE: Dual climate systems can run as a single zone system. Changing between single and dual zone type will change and auto correct the Invert AC Button setting. This can also be manually changed**

Menu Functions

Screen Size/ Position

Allows the user to change the Infoadapter screen to fit to your headunits display

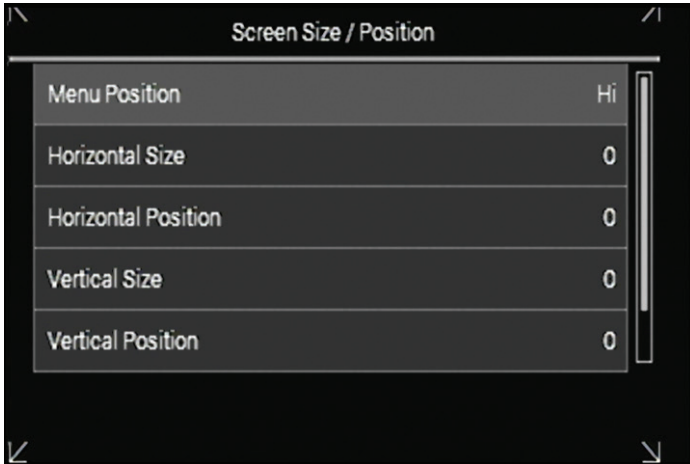

Camera Connected


Turns the reverse camera function On or Off if an aftermarket or factory reverse camera is fitted

Invert AC Button

This inverts the AC toggle. If you can still feel cold air coming out of your vents when AC is off, change this option

Diagnostics


Information on system

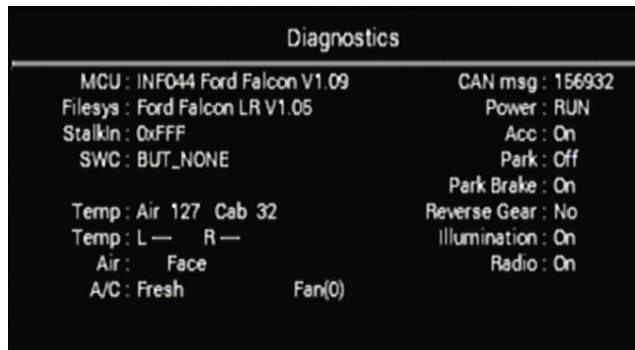

Remote Learning

These instructions will allow you to program a new remote and/or key to your BA or BF Falcon or SX / SY Territory

1. To program the remotes you will need to have all the remotes available for the vehicle as you need to relearn them all
2. To program the key you will need to have 2 keys available for the vehicle
3. Sit in the vehicle with the doors closed
4. Turn the ignition to the ACC position and press the rear demister button 3 times, within 5 seconds

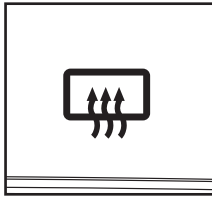

5. Then press a button on the 1st remote to be trained, the door locks will cycle
6. Then press a button on the 2nd remote to be trained and the door locks will cycle again
7. Repeat this step for the rest of the remotes to be trained to the vehicle
8. The first keypad trained will result in one door lock cycle, the second will result in 2 door lock cycles, and so on. There is a limit of 8 remotes per vehicle
9. Turn the ignition to the OFF position to exit the learning mode

Your remotes are now programmed to your vehicle

INSTALLATION



BEFORE

AFTER

Aerpro

POWER SOURCE


Tools Needed

Use the following tools to make dismantling the car and the installation of the new facia easier. **NOTE: Do not use power tools, only use the tools recommended below and do not over tighten screws as they may damage the facia kit.**


1. Panel Remover




2. Phillips Head Screwdriver



3. 8 mm Ratchet

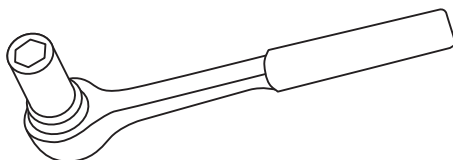


4. Side Cutters

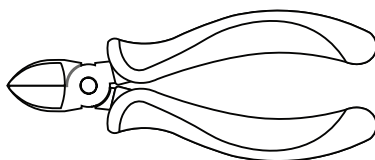


5. Small Pick



6. Cable Ties



7. Electrical Tape

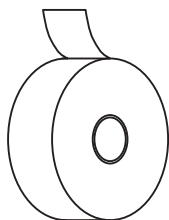

Centre Console Disassembly

Removing gear shift trim (Auto)

Shift the gear stick down to the “D” drive position



Lift the front of the panel then pull the panel up to completely remove



Side Panel Disassembly

Removing side trim

Undo the screw then lift up from the bottom and pull down from the top to remove the left side panel



Repeat to remove the right side panel



Pocket Disassembly

Removing tissue box and power socket

Remove the 2 screws holding the tissue box in place



Pull out the tissue box, disconnect the power harness from the socket and put the tissue box aside



Top Panel Disassembly

Removing top panel trim

Remove the top panel by **CAREFULLY** prying the edges away from the dash.

NOTE: *Age and sun damage can make this panel brittle and can break easily*



Remove the top panel and put it aside. Remove the screw at the top holding the factory unit in place and put aside



Headunit Removal

Removing factory headunit face plate

Remove the 2 x 8 mm bolts from the left side of the factory unit





Remove the 2 x 8 mm bolts from the right side of the factory unit





Headunit Removal

Pull the unit away from the dash until it is loose (pic1) and unplug the 4 connectors and the antenna connector from beneath the factory unit (pic2-3). Remove the factory unit and place it on a bench

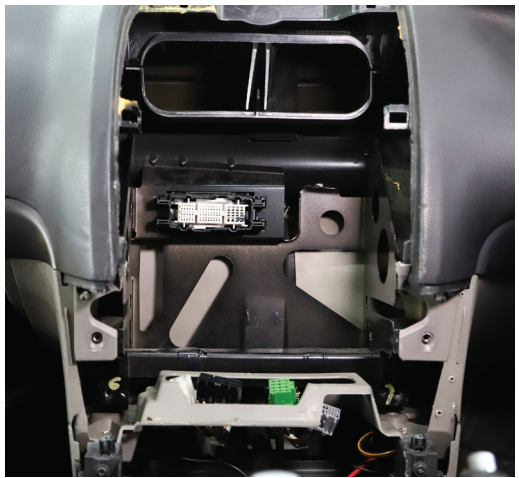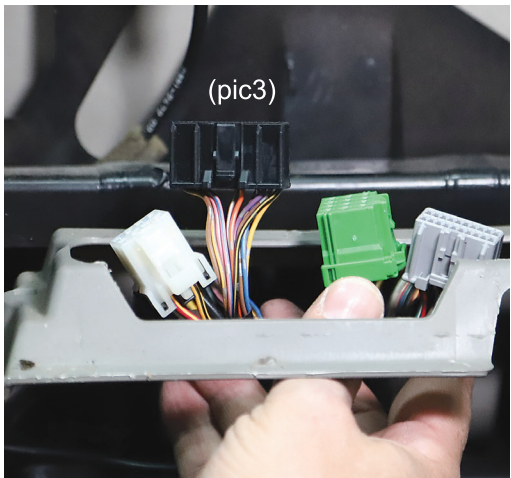


Headunit Disassembly

Remove the 4 x screws from both the left and right factory brackets

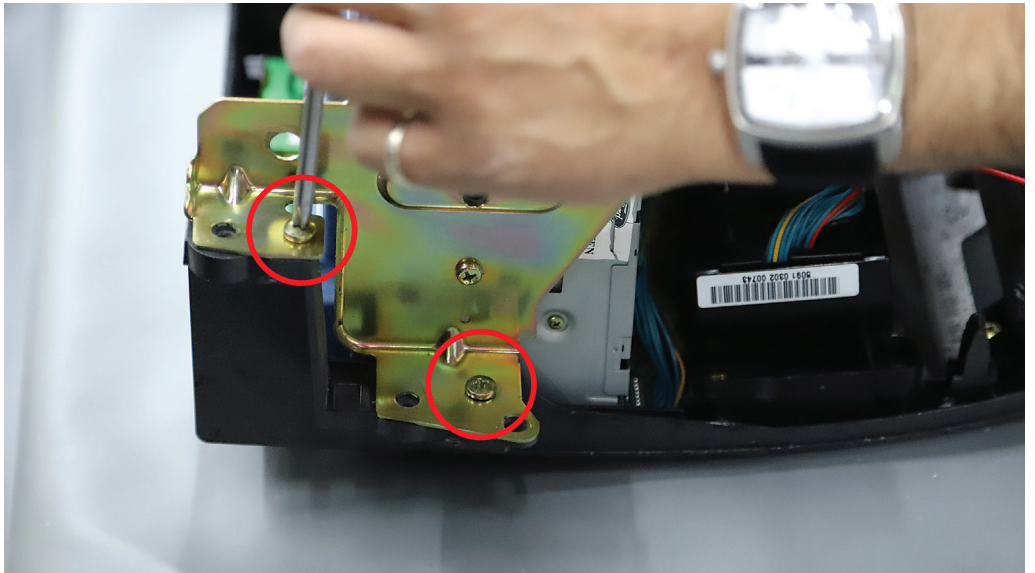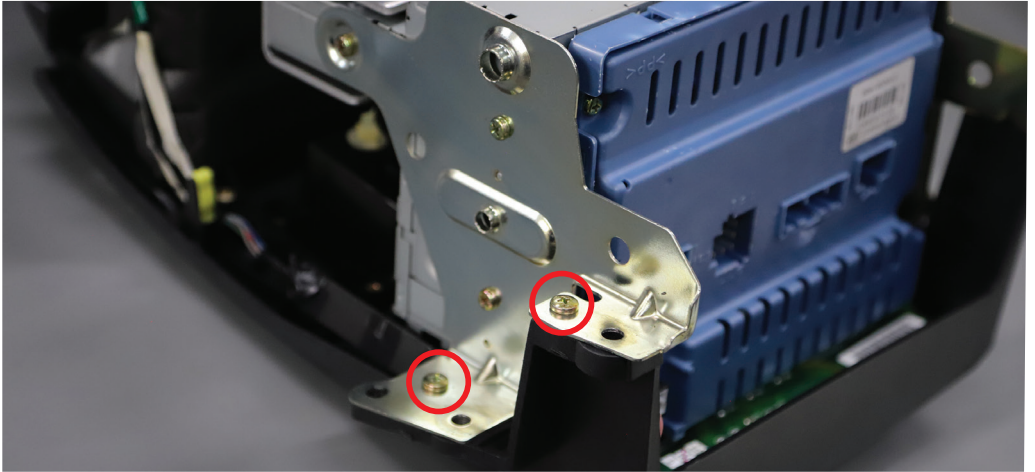


Headunit Disassembly

Remove the green plug and unscrew the earth strap

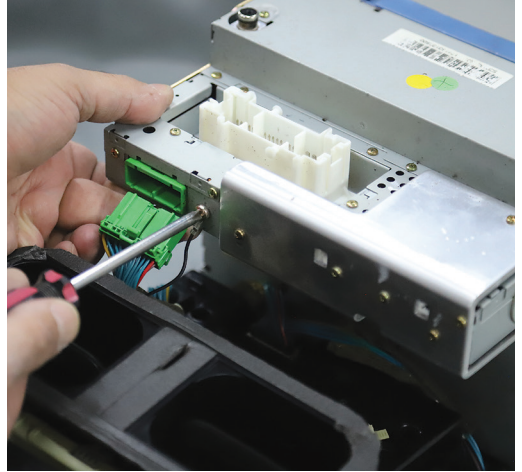




Remove the factory unit from the plastic

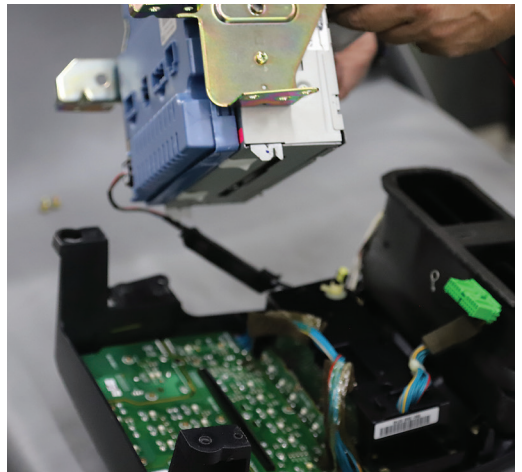

Module Disassembly

Removing The FOB Transceiver Module




Remove the 2 screws from the transceiver, remove and put it aside

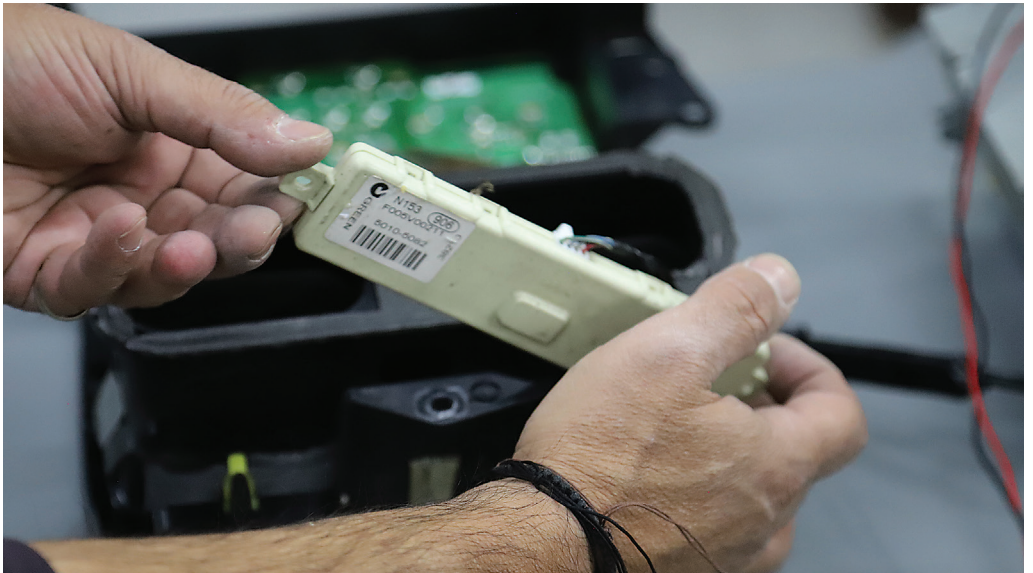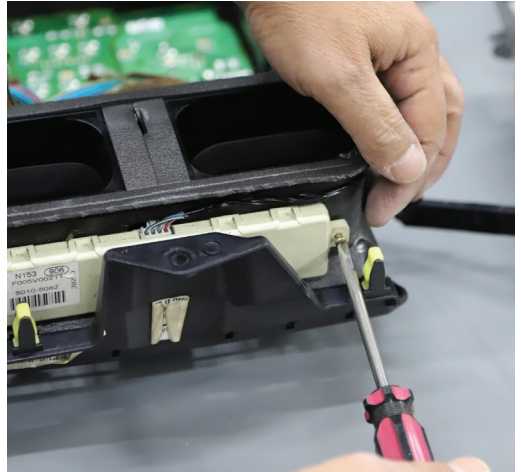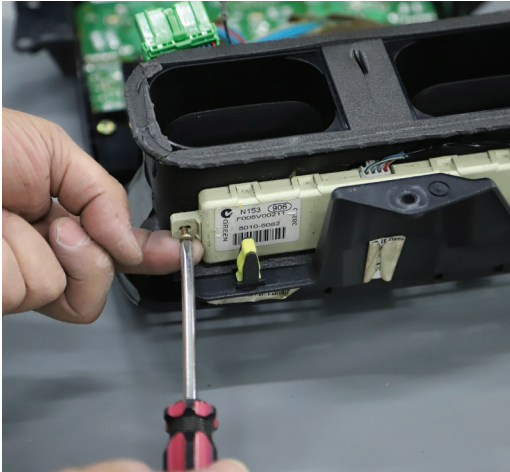

Vent Disassembly

Removing The Vent From Factory Facia

Remove the 3 screws holding the vent in place, remove it and put it aside

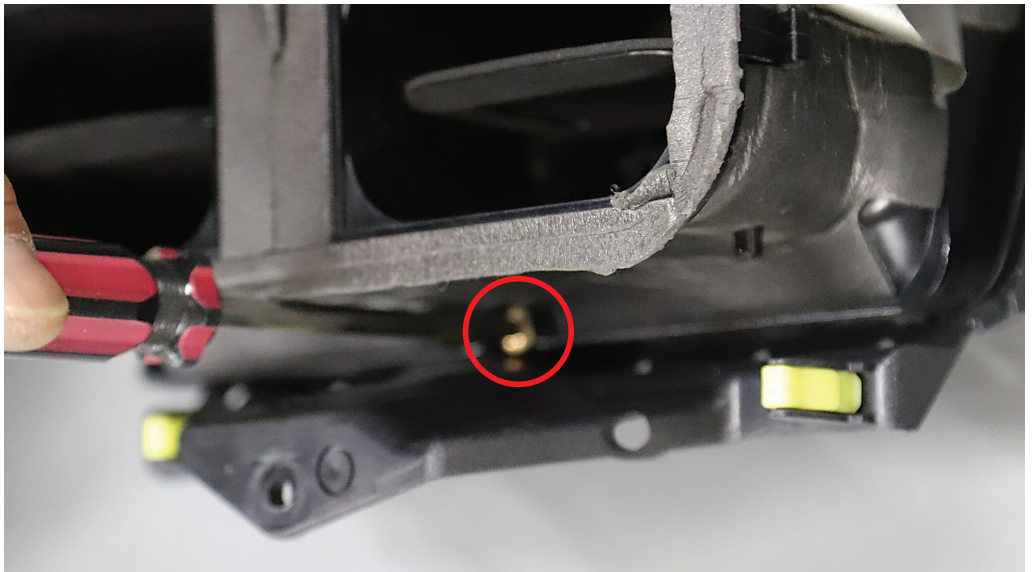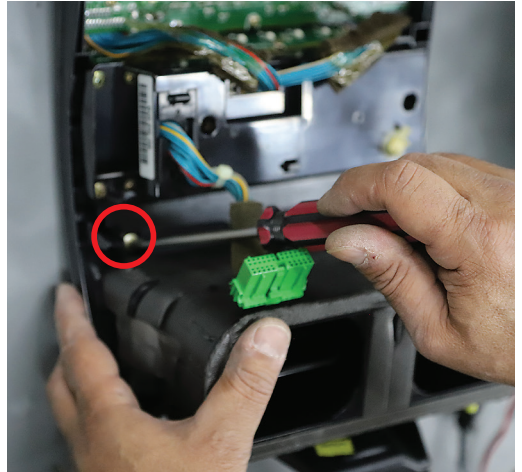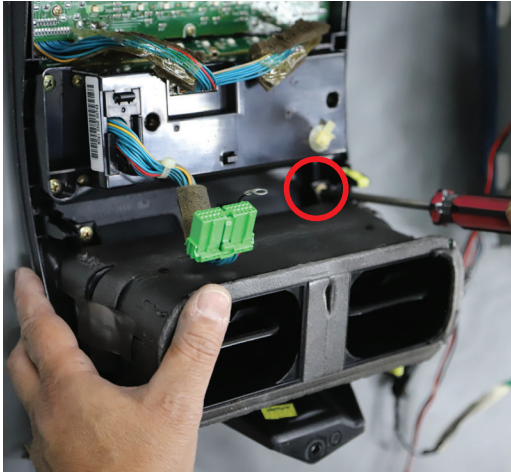



Mounting Clips

The new fascia comes with pre installed mounting clips. The factory fascia mounting clips can also be retained and reused if needed.



Control Module Removal

Remove 4 screws from Body Control Module (coloured plastic module). Discard and use supplied 4 x M6 bolts when remounting

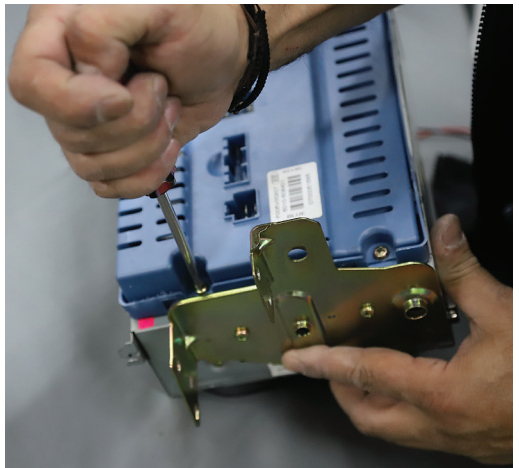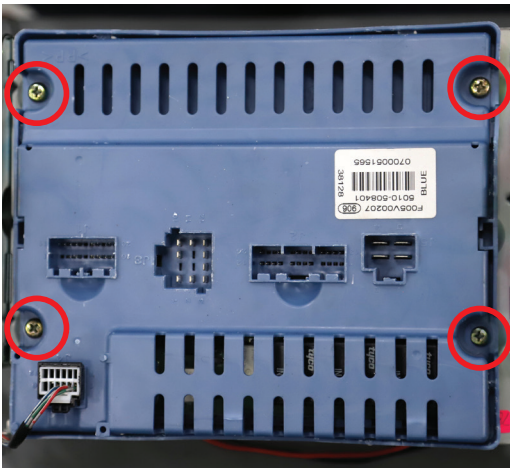


Changing The Dip Switch

DIP switches can be changed to match the headunit and rear camera being used with this installation kit. Make these changes before installing the kit. Check the rear camera and steering wheel control requirements for your devices.


Step1. Access the DIP switches via the cutout on the back of the Infodapter

Step2. Using a pick tool, flick the switches to the required setting

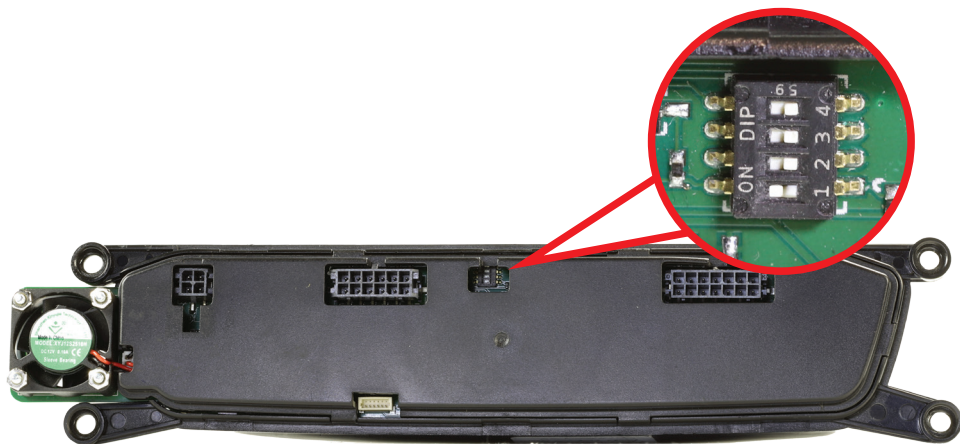

Dip Switch Settings

Up = On, Down = Off

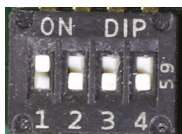

- 1:** Pioneer & Sony code change. Dip 1 is ON for Pioneer models, Dip 1 is OFF for Sony models. Check your headunits menu first to make sure the steering wheel controls are activated. Refer to page 2-31 of this manual for more information. Default is ON for most other models.
- 2:** Setting for reverse camera. ON = PAL, OFF = NTSC. The default setting is OFF (NTSC).
- 3:** Resets the display settings back to default. If the display settings have been manipulated in a way that it is no longer possible to make adjustments, change the DIP switch #3 from OFF to ON and back. This will reset the screen settings to the factory defaults. During this procedure the screen background will change to red. While the background is red, no settings can be made.
- 4:** Not applicable


Vent Assembly

Re-attaching Factory Vent To New Facia

Place the new plastics on a soft surface and turn it over so it is lying face down



Line up the vent to the new plastics and attach it using the 3 screws taken out earlier.
NOTE: Please use a screwdriver (not a power tool) to hand tighten the screws. Do not over-tighten the screws as it may damage the facia

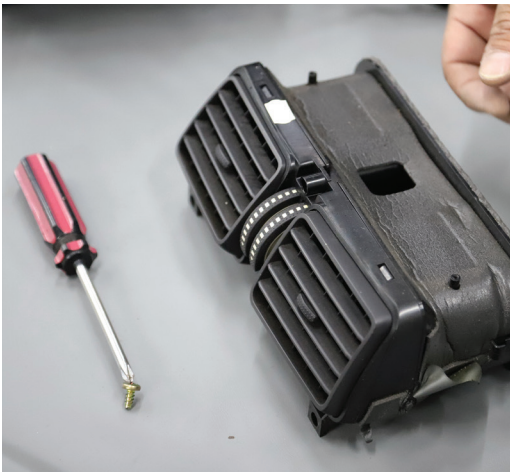

Vent Assembly



Re-attaching FOB Transceiver Module

Mount the module back onto the vents




Re-attaching Body Control Module

Mount the Colour Body Control Module to the metal bracket on new plastics using the 4 M6 bolts provided and connect the lead from the FOB Transceiver Module

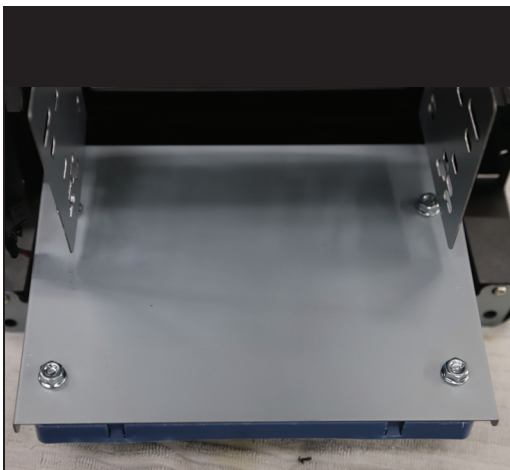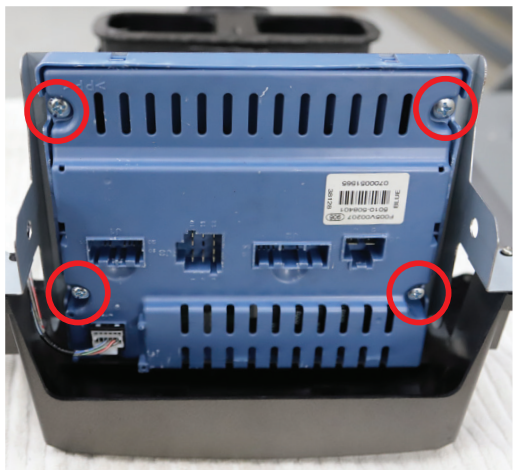



Body Control Module Mounting

Note: Before going further, it is a good idea to check that the Colour Body Control Module retaining bracket is fitted correctly. If the mounting bracket is the wrong way around, and mounted incorrectly the BCM will hit the back of the heater box and the plugs will not reach. Make sure that the bracket is fitted as shown below

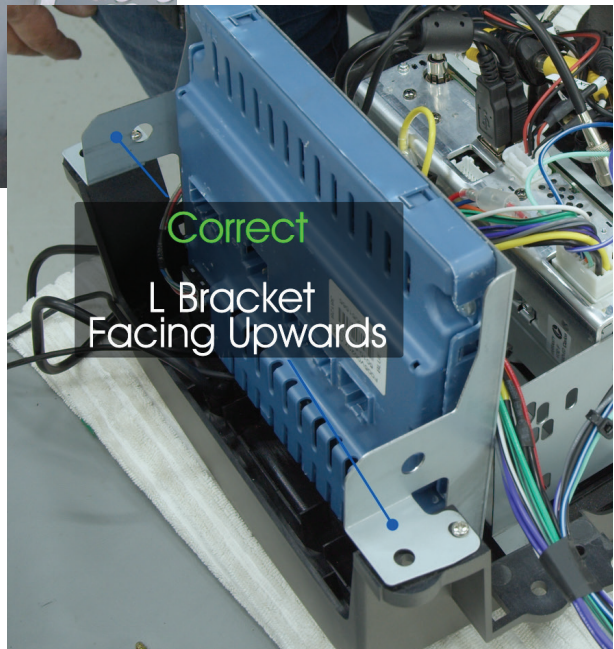



Mounting Aftermarket Headunit

Mount the aftermarket head-unit to the mounting brackets. Leave the screws a little bit loose to allow adjustment of the screen to the desired depth. Tighten the screws

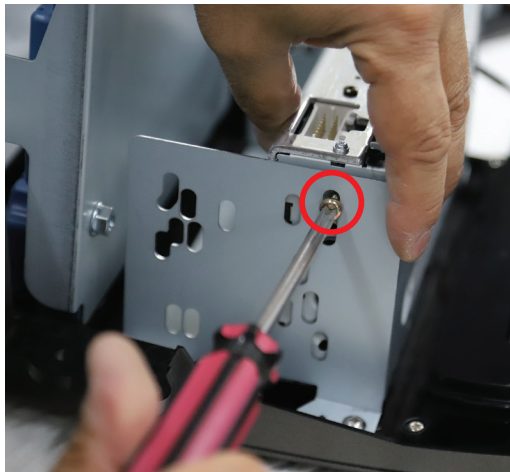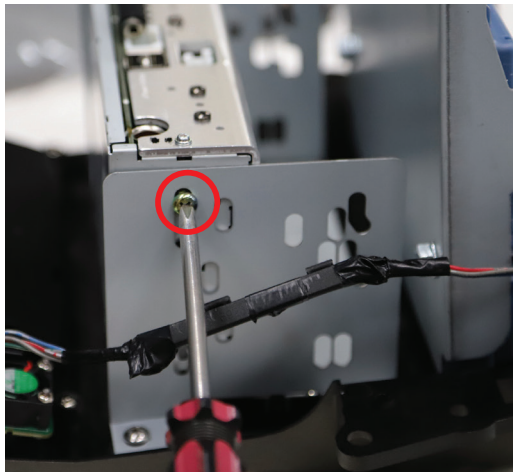

Connecting USB Pass Through & Reverse Camera

Connect the USB/USB's if present.

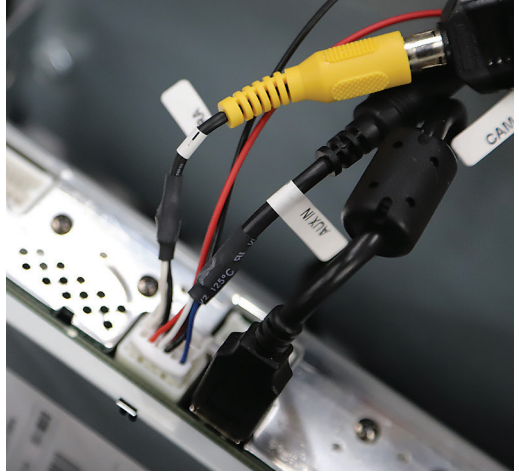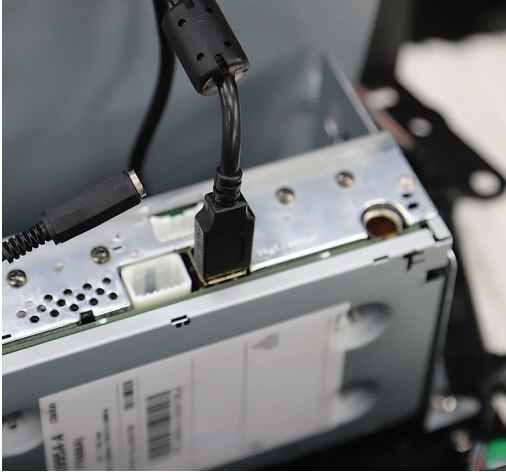



Connect the 4 pin video plug, and connect the yellow RCA plug to the reversing camera input on the aftermarket head unit. Connect the purple reverse output wire to headunit reverse trigger. This will allow the climate controls to display on the aftermarket head unit. The reversing camera wiring must be completed between the facia and the aftermarket radio, even if a reversing camera is not to be installed, otherwise the vehicle's display will not show on the aftermarket screen. The female yellow RCA socket connects to the reverse camera.



Connecting Steering Wheel Controls

Connect an Aerpro APP series (brand specific) secondary harness (sold separately) and a patch lead to the aftermarket unit. Connect to ISO plugs in main harness and connect to module



NOTE: It is important to connect brand specific or correctly modified universal patch lead to module before powering up

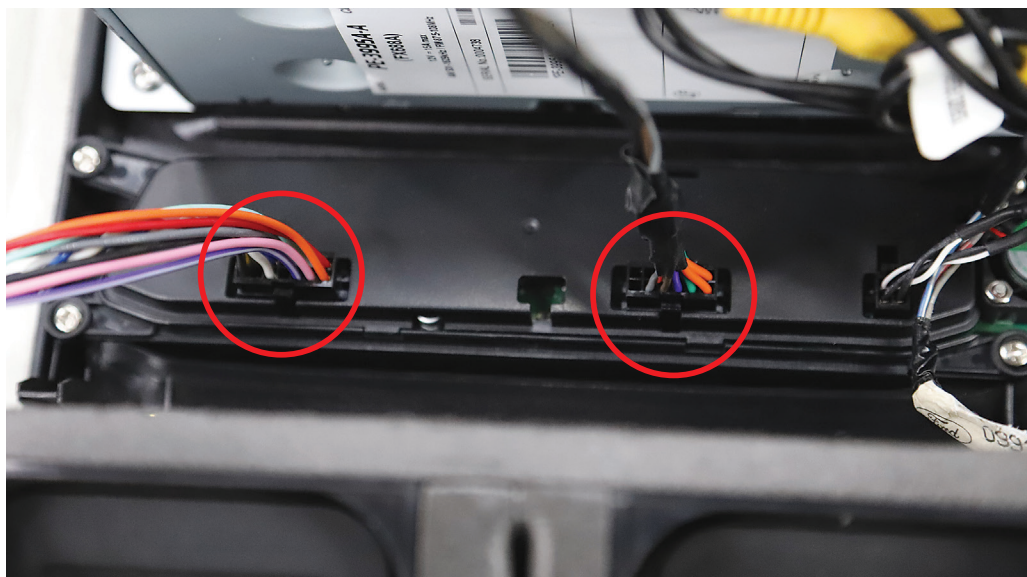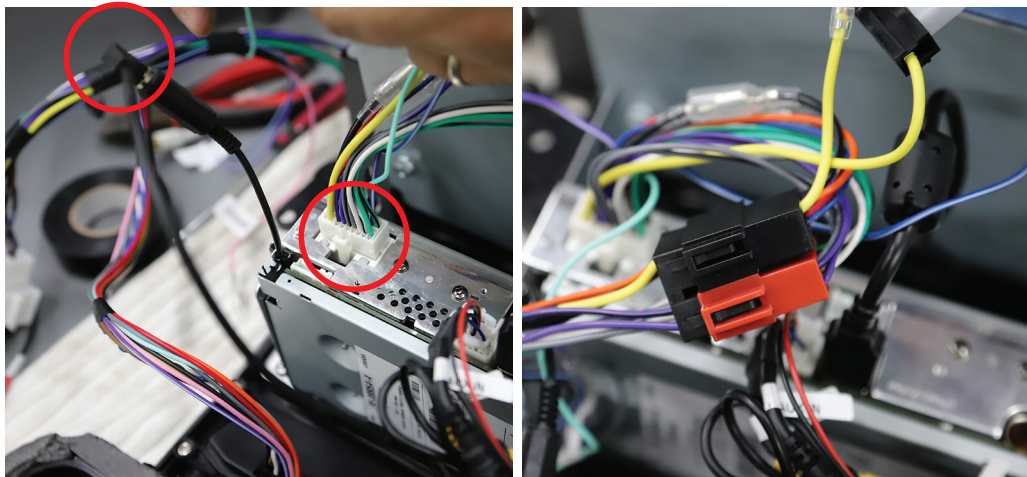

Connecting Antenna

Connect any other cables like the park brake, reverse and speed pulse if applicable. Tape up any unused cables.


If you find the factory antenna lead is not long enough to connect to the back of the new headunit, you may need to purchase an aerial extender like the APP332 model (sold separately). See (pic1) below for positioning

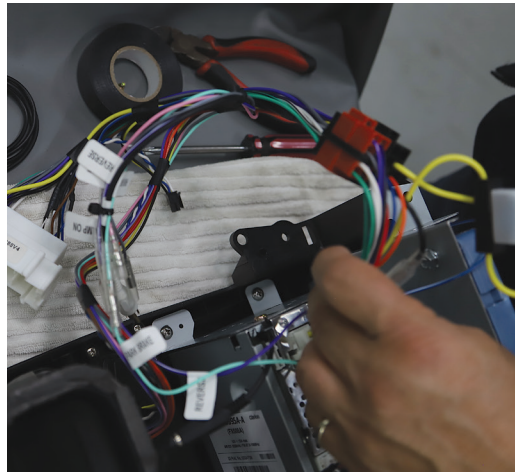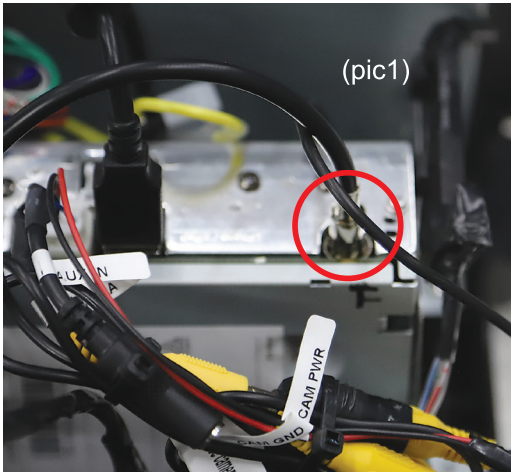


OEM Reverse Sensor (Vehicle Option)

Retaining the OEM reverse sensor alerts

Attach the reverse sensor connector to the Aerpro AP1WAMP amplifier module (sold separately)

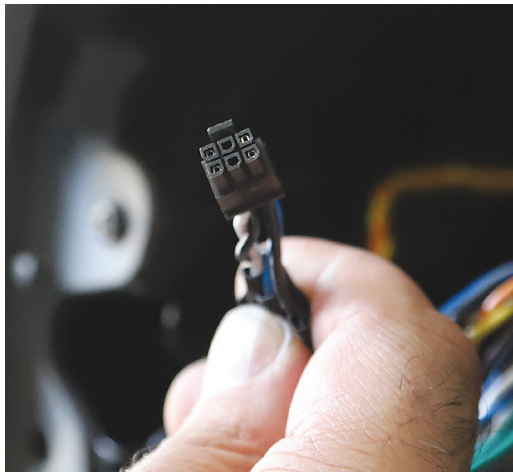



Place the audio amplifier behind the headunit

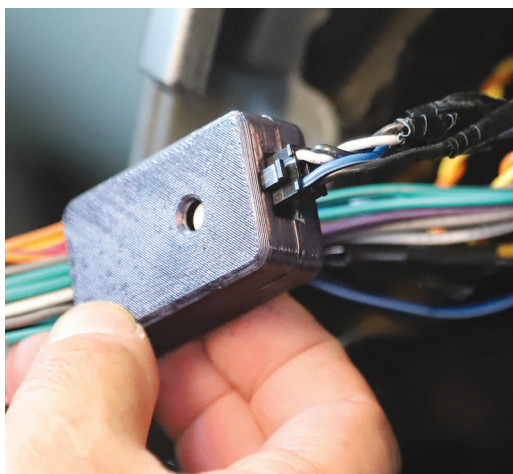

OEM Reverse Sensor (Vehicle Option)



Attaching the extension speaker

Connect the 3.5mm extension jack of the Aerpro CBXS extension speaker (sold separately) to the amplifier module input

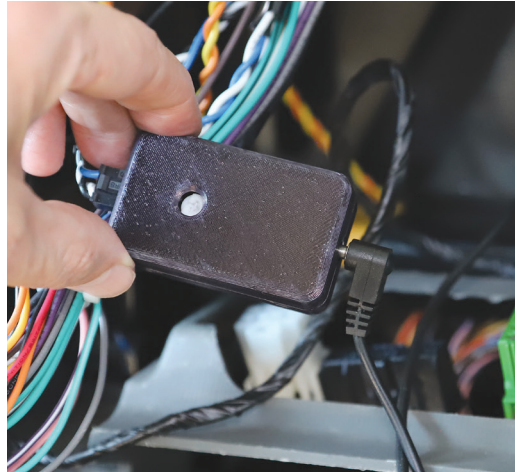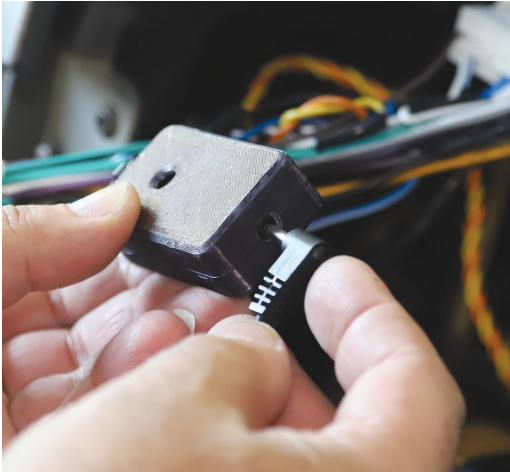


Securely mount the extension speaker in an appropriate position. You can adjust the volume of the amplifier module by turning the adjustment dial.

NOTE: Prior to testing we suggest to set the dial to the 12 o'clock position

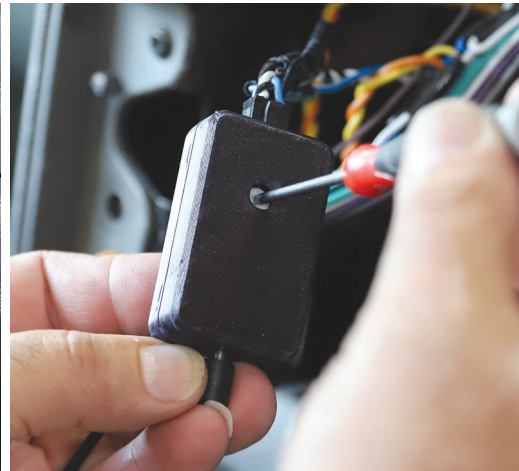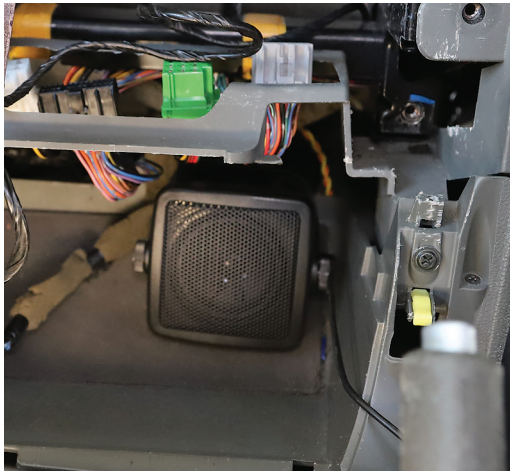

Main Harness Installation

Plug the main harness into the vehicle. Due to the limited depth we recommend using a mechless head unit (No CD/DVD player) for this kit as some head units are too deep to fit within the space available.

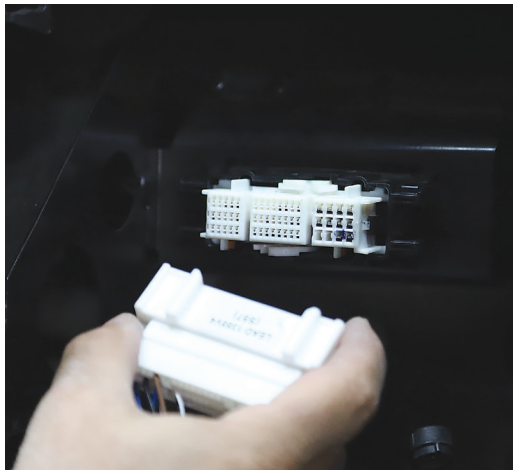

Facia Kit Installation

Place into position taking care to keep all cables out of the way. Make sure the antenna cable is placed into the back of the headunit



Facia Kit Installation

Re-attach the four connectors to the body control module. Switch the vehicles parking lights on to test illumination of the HVAC buttons. Turn on the vehicles accessories to test the steering wheel controls and audio



Facia Kit Installation

Once all of the functions have been tested, screw in the top section and bolt in the bottom section using the one screw and the 4 bolts retained earlier



Replace the tissue pocket, reconnect the power socket, replace the top trim (**CAREFULLY**), replace the left and right side panels and screw back in.
Replace the gear shift panel

Technical assistance

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support. Australia

TEL: 03 – 8587 8888



FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST

Please retain this user guide for future reference.


If you would like to find more information on this product or download a digital copy of this manual, please visit the <https://aerpro.com> website and search for your model. An installation video is also available on our site.

This manual is considered correct at time of printing but is subject to change. For latest manuals and updates refer to the website.

Copyright © 2021 by TDJ Australia


All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author.

Wiring diagram

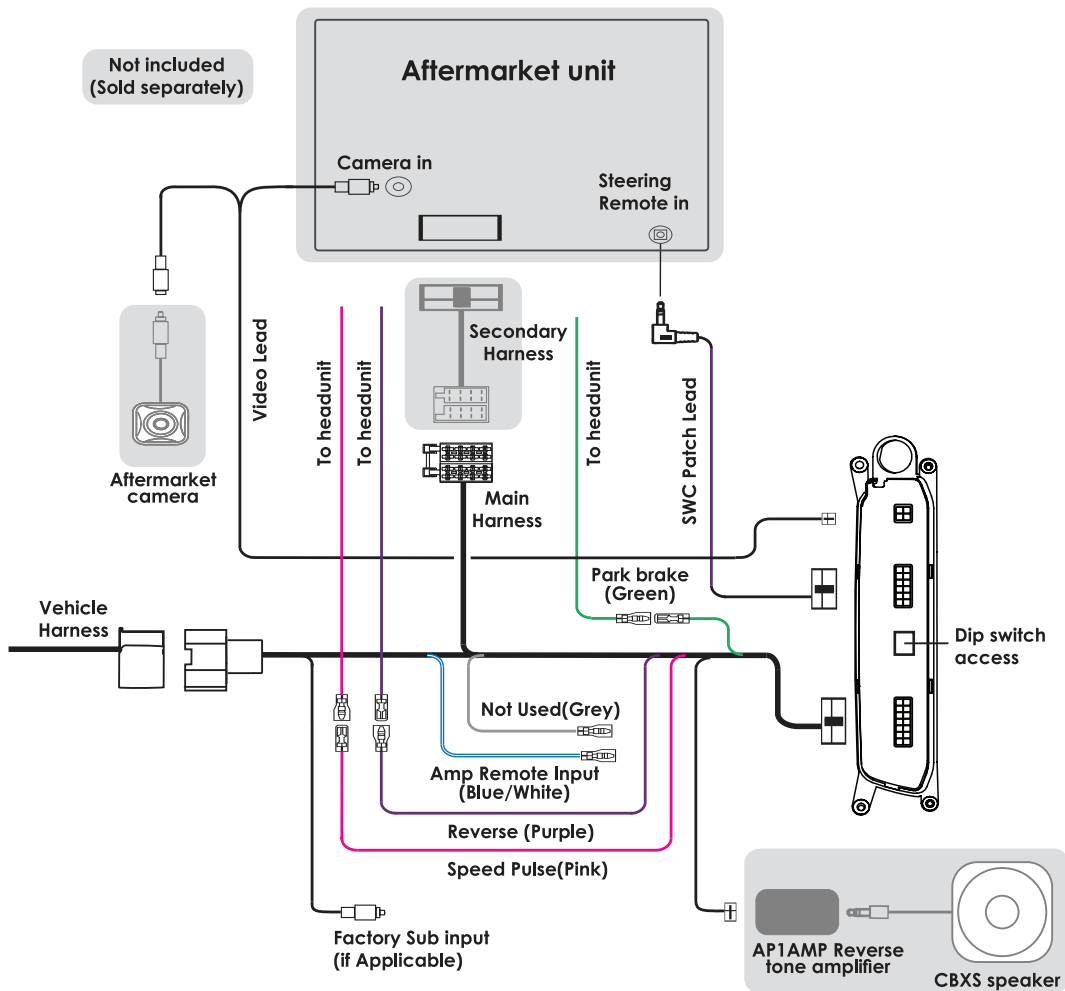


SWC Patch Harness Configuration


Use 3.5mm Jack for these Head-units




ALPINE
Cut Green Link




CLARION
Cut Purple Link



PIONEER
No cutting required



SONY
No cutting required




Use Key 1 Bullet terminal for these Head-units




Philips, Nakamichi
Cut Orange & Purple Wire




Kenwood
Cut Orange & Green Wire




JVC
Cut Green & Purple Link




Zenec
Cut all 3 wires, solder Orange and Green together as shown



Use KEY 1, KEY 2 and GND Bullet terminals for Self Learn Head-units



Self Learn Head-units
No cutting required



For best results or to reset the control module with a new brand, please make modifications to the patch lead first, before connecting to the steering wheel control module and before powering the module up.

SWC Patch Harness Configuration

Kenwood/JVC: Some Kenwood and JVC radios have 2 steering control inputs. A 3.5mm socket (Remote IN) and Blue with Yellow trace wire. To send direct translated codes to your Kenwood/JVC radio, configure the patch lead up as Kenwood or JVC outlined in the configuration assignments and connect the Brown patch lead wire (KEY 1) used. If you would like to be able to program your steering controls configure the patch lead as Self Learn and plug the 3.5mm Jack into the Remote IN of the Kenwood/JVC, disregard the Brown wire.

Pioneer : Some Pioneer models require the steering controls to be enabled, they will by default be OFF. These steering control settings are located in the system settings of the radio can only be accessed whilst the unit is in standby mode and the park-brake wire is connected (if applicable). Please refer to your Pioneer manual on exact methods for enabling steering controls. Dip switch position 1 should be ON.

Sony:

Some Sony models require the steering controls to be enabled, they will by default be OFF. If you are receiving no steering control functions at all please refer to your Sony manual on how to enable steering controls. Dip switch position 1 should be OFF.

General: Please ensure all connections to your aftermarket head unit (including patch lead modification) are completed before power is provided to the harness. Some of our control harnesses work by translating the vehicles CANBUS data and can only start this process on ignition. If you find that you are not getting any response from your steering controls on accessory (single key click) please re-test on ignition.

NOTE: *The steering controls must be working in the vehicle previously to work with our control harnesses. They will not fix previous underlying problems*

