
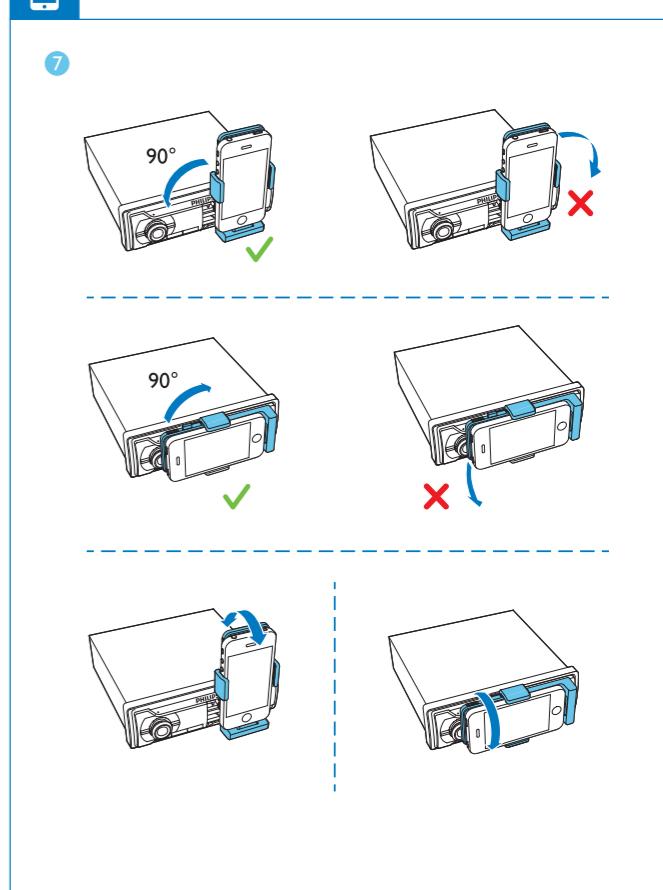
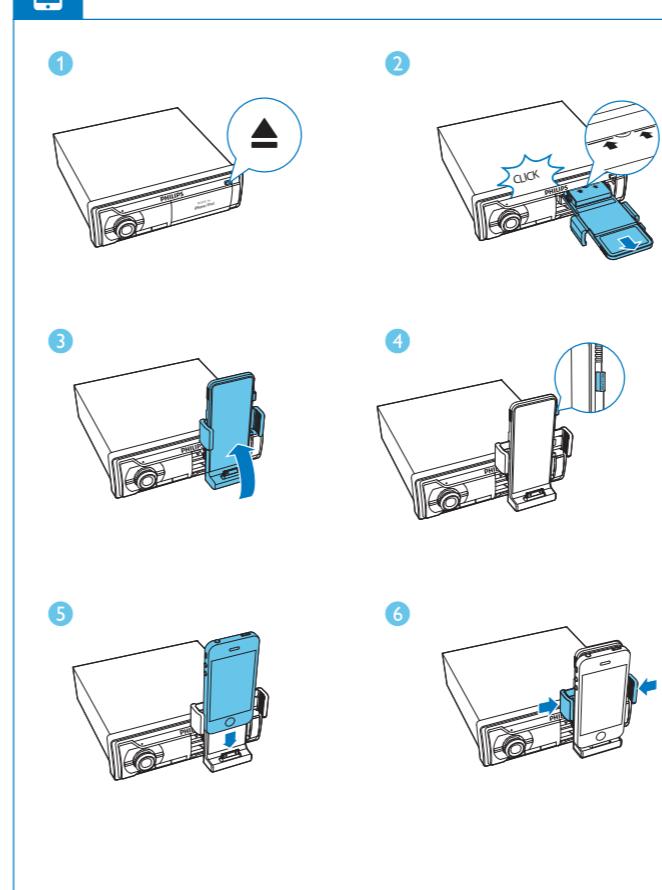
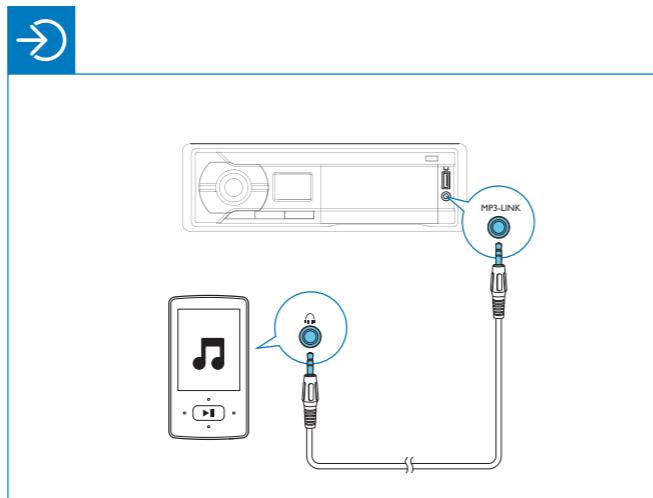


PHILIPS

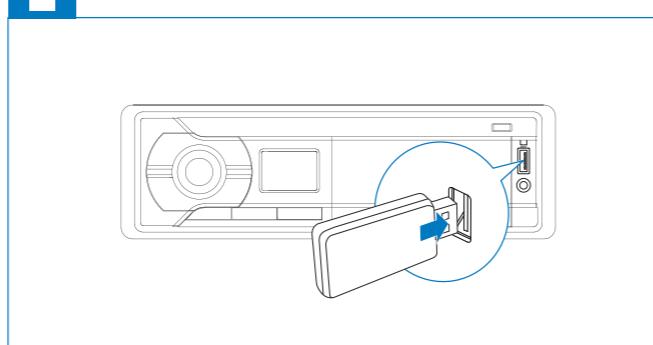

EN

Quick start guide

ES

Guía de configuración rápida



Quick start guide

What's in the box

- | | |
|---|-------------------------|
| ① Main unit and front panel (with a sleeve) | ② Trim plate |
| ③ ISO standard connector | ④ Rubber cushion |
| ⑤ 1 x Screw | ⑥ 2 x Disassembly tools |
| ⑦ User manual | ⑧ Quick start guide |

Connect wires

- 1 Check the car's wiring carefully, and then connect them to the supplied ISO wires.

Connector	Connect to
1 Yellow wire	The +12V car battery which is live at all times
2 Blue/White wire	The electric antenna control lead or power supply lead of the antenna booster. If there is no electric antenna or antenna booster, or it is manually operated telescopic antenna, it is unnecessary to connect this lead.
3 Black wire	A metal surface of the car. Connect the black ground (earth) lead before connecting the yellow and red power supply leads.
4 Red wire	The +12V power terminal which is live in the accessory (ACC) position of the ignition switch. If there is no accessory position, connect to the +12V car battery terminal that is always live. Make sure that the black ground (earth) lead is connected to a metal surface of the car first.
5 Green and green/black wires	Left speaker (rear)
6 White and white/black wires	Left speaker (front)
7 Gray and gray/black wires	Right speaker (front)
8 Purple and purple/black wires	Right speaker (rear)

- 2 Connect the other end of the supplied standard connector to the car audio system.

Connector	Connect to
1 ANTENNA	Antenna for radio
2 External Mic	An external microphone for phone call
3 SUBWOOFER (Socket)	Subwoofer
4 REAR LINE OUT L (Socket)	Rear left speaker
5 REAR LINE OUT R (Socket)	Rear right speaker
6 OE REMOTE (Brown)	OE remote
7 FRONT LINE OUT L	Front left speaker
8 FRONT LINE OUT R	Front right speaker

Guía de configuración rápida

Contenido de la caja

- | | |
|--|--------------------------------|
| ① Unidad principal y panel frontal (con funda) | ② Embellecedor |
| ③ Conector estándar ISO | ④ Tope de goma |
| ⑤ 1 tornillo | ⑥ 2 herramientas de desmontaje |
| ⑦ Manual de usuario | ⑧ Guía de configuración rápida |

Conexión de los cables

Precaución

- Asegúrese de proteger todos los cables sueltos con cinta aislante.

- 1 Compruebe cuidadosamente el cableado del vehículo y conecte los cables a los cables ISO suministrados.

Conector	Conectar a
1 Cable amarillo	La batería de +12 V del vehículo, que proporciona alimentación continua
2 Cable azul/blanco	El cable de control de la antena motorizada o el cable de alimentación del amplificador de antena. Si no existe antena motorizada ni amplificador de antena, o se trata de una antena telescópica manual, no es necesario conectar este cable.
3 Cable negro	Una superficie metálica del vehículo. Conecte el cable de tierra negro antes de conectar los cables de alimentación amarillo y rojo.
4 Cable rojo	El terminal de alimentación de +12 V que proporciona alimentación en la posición de accesorios ACC de la llave de contacto. Si el vehículo no dispone de posición ACC, realice la conexión al terminal de la batería de +12 V del vehículo, que proporciona alimentación continua. Asegúrese de que el cable de tierra negro esté conectado a una superficie metálica del vehículo en primer lugar.
5 Cables verde y verde/negro	Altavoz izquierdo (posterior)
6 Cables blanco y blanco/negro	Altavoz izquierdo (delantero)
7 Cables gris y gris/negro	Altavoz derecho (delantero)
8 Cables morado y morado/negro	Altavoz derecho (posterior)

Mount into the dashboard

If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.

- If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
- If the car battery is not disconnected, to avoid short-circuit, make sure that the bare wires do not touch each other.

- 1 Make sure that car dashboard opening is within these measurements:
2 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.

Note

- If the system is not fixed by sleeve but by the supplied screws, skip this step.

- 3 Place the supplied rubber cushion over the end of the mounting bolt.
4 Slide the system into the dashboard until you hear a "click".
5 Attach the trim plate.
6 Reconnect the negative terminal of the car battery.

Turn on

Press .

↳ [WELCOME] scrolls.

- To turn off the system, press and hold until [GOODBYE] is displayed.

Set the clock

- 1 Press and hold to access the system menu.
2 Press repeatedly until [CLOCK] and the current time is displayed.
↳ If the clock is not set before, [00:00] is displayed.

- 3 Rotate to set the hour.
4 Press to confirm.
5 Rotate to set the minute.
6 Press to confirm.

Select a source

Note

- When all other sources are unavailable, the system switches the source to [RADIO] automatically.

Press repeatedly to select a source.

- [RADIO]: FM/AM radio
- [MP3-LINK]: the audio input through the MP3-LINK socket
- [BT AUDIO]: the audio transferred from a Bluetooth device
- [USB]: When a USB storage device is connected and recognized, you can select this source to play audio files that are stored on it.
- [iPHONE]: When an iPhone or iPod touch is connected and recognized, you can select this source to play the playlist of iPhone or iPod touch.

If play does not start automatically,

- Press / to select a folder.
- Press / to select a file.
- Press 6 to start play.

Listen to an external device

1 Press repeatedly to switch the source to [MP3-LINK].

- Connect the MP3 link cable to
 - the MP3-LINK socket on the system, and
 - the audio output socket (usually the headphone socket) on the external device.
- Play the external device.

Use the dock

An application **CarStudio** is available in the iTunes App Store for this car audio system. To enjoy full features, download the application to your iPhone or iPod touch.

Compatible iPod/iPhone models

- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPod touch (3rd and 4th generations)

Prepare for docking

1 Press to eject the dock bracket.

2 Pull out the dock bracket until you hear a "click".

3 Flip the dock bracket upwards.

4 Press and hold **RELEASE** to loosen the hooks.

5 Connect your iPhone or iPod touch to the dock with its screen facing you. The system switches the source to [iPHONE] automatically. If not, press repeatedly to switch the source.

6 Pinch the hooks to secure your iPhone or iPod touch.

7 Adjust the dock bracket.

Reset the system

You can reset the system to factory default settings.

- Open the cover for the USB socket, MP3-LINK socket, and **RESET** button.
- Press the **RESET** button with the tip of a ball-point pen or toothpick.
↳ The system is turned off, and all settings are reset to factory default.

Si la reproducción no se inicia automáticamente,

- Pulse / para seleccionar una carpeta.
- Pulse / para seleccionar un archivo.
- Pulse 6 para iniciar la reproducción.

Cómo escuchar un dispositivo externo

1 Pulse varias veces para cambiar la fuente a [MP3-LINK].

- Conecte el cable de conexión MP3 a
 - la toma MP3-LINK del sistema y
 - la toma de salida de audio (normalmente la toma de auriculares) del dispositivo externo.
- Inicie la reproducción en el dispositivo externo.

Uso de la base

En iTunes App Store, está disponible la aplicación **CarStudio** para este sistema de audio para el coche. Para disfrutar de todas las funciones, descargue la aplicación en su iPhone o iPod touch.

Modelos de iPod/iPhone compatibles

- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPod touch (3ª y 4ª generación)

Preparación de la conexión

1 Pulse para expulsar el soporte de la base.

2 Tire del soporte de la base hasta que oiga un " clic".

3 Dé la vuelta al soporte de la base hacia arriba.

4 Mantenga pulsado **RELEASE** para aflojar los ganchos.

5 Conecte el iPhone o iPod touch en la base con la pantalla orientada hacia usted.
↳ El sistema cambia la fuente a [iPHONE] automáticamente. Si no es así, pulse varias veces para cambiar la fuente.

6 Pellizque los ganchos para fijar el iPhone o iPod touch.

7 Ajuste del soporte de la base

Restablecimiento del sistema

Puede restablecer la configuración predeterminada de fábrica del sistema.

1 Abra la cubierta de la toma USB, la toma MP3-LINK y el botón **RESET**.

2 Pulse el botón **RESET** con la punta de un bolígrafo o un palillo de dientes.
↳ El sistema se apaga y todos los ajustes se restablecen con la configuración predeterminada de fábrica.

Ajuste del reloj

1 Mantenga pulsado para acceder el menú del sistema.

- 2 Pulse varias veces hasta que se muestren [CLOCK] y la hora actual.
↳ Si no ha ajustado el reloj antes, se muestra [00:00].

Reproducción de un dispositivo de almacenamiento USB

1 Conecte el dispositivo de almacenamiento USB a la toma .

- 2 Pulse varias veces hasta que aparezca [USB].
↳ La reproducción se inicia automáticamente.